SERVICE MANUAL

CD-12LE

4822 725 50872

CD-12/DA-12/RC-12CD

marantz®

model CD-12LE

Compact Disc Player System

MARANTZ DESIGN AND SERVICE

Using superior design and selected high grade components, MARANTZ company has created the ultimate in stereo sound.
Only **original MARANTZ parts** can insure that your MARANTZ product will continue to perform to the specifications for which it is famous.

Parts for your MARANTZ equipment are generally available to our National Marantz Subsidiary or Agent.

MARANTZ INTERNATIONAL
Vestdijk 9
5600 MD Eindhoven
The Netherlands
Phone: +31/40.758290
Telefax: +31/40.75.82.99
Telex: 35000 PHTC NL routing IND NLMTFAT

ORDERING PARTS:

Parts can be ordered either by mail or by telex. In both cases, correct part number has to be specified.
The following information must be supplied to eliminate delays in processing your order:

1. Complete address
2. Complete part numbers and quantities required
3. Description of parts
4. Model number for which part is required
5. Way of shipment
6. Signature: any order form or telex must be signed otherwise such part order will be considered as null and void.

PARTS ORDERING

Parts may be ordered at the following addresses:

AUSTRIA
HORNYPHON
Vertriebsgesellschaft GmbH
Wienerbergstrasse 1
A 1101 Wien
Austria
Telex: 132.332

BELGIUM
SVD DIVISION MARANTZ
Industrialaan 1
1720 Groot-Bijgaarden
Belgium
Telex: 24466

CHILE
MARANTZ
DIVISION OF PHILIPS S.A.
AV. Santa Maria, 0760
Casilla 2687
Santiago
Telex: 240.239

DENMARK
MARANTZ
DIVISION OF PHILIPS
SERVICE A/S
Prags Boulevard 80
Postbox 1919
DK-2300 København S
Denmark
Telex: 31201

FINLAND
MARANTZ
DIVISION OF OY PHILIPS Ab
Kaivokatu 8
00100 Helsinki
Finland
Telex: 124811

FRANCE
MARANTZ FRANCE
4 Rue Bernard Palissy
92600 Asnières
France
Telex: 611651

GERMANY
MARANTZ GERMANY GmbH
Max-Planck-Strasse 22
6072 Dreieich 1
Germany
Telex: 529821

THE NETHERLANDS
Elpro Marantz
Wint Hontlaan 28
3526 KV Utrecht
The Netherlands
Telex: 4748

NORWAY
MARANTZ
DIVISION OF PHILIPS A/S
Sandstuveien 40
0680 Oslo 6
Norway
Telex: 72640

GREAT BRITAIN
MARANTZ AUDIO U.K. Ltd
Unit 15/16
Saxon Way Industrial Estate
Moor Lane
Harmondsworth UB7 OLW
Great Britain
Telex: 935196

GREECE
SHERTON ELECTRONICS S.A.
P.O.Box 21025
Hippocratus Street 188
Athens 11471
Greece
Telex: 216.795

JAPAN
MARANTZ JAPAN, Inc.
35-1, 7-chome, Sagamiono
Sagamihara-shi, Kanagawa
Japan

KUWAIT
AL ALAMIAH ELECTRONICS
Ussama Building
Fahd al Saleem Street
P.O.Box 23781
Safat-Kuwait
Telex: 22694

ITALY
MARANTZ ITALIANA S.P.A.
Via Chiese, 74
20126 Milano
Italy

SAUDI ARABIA
AL ALAMIAH ELECTRONICS
P.O.Box 5954
University Street
Riyadh 11432
Saudi Arabia
Telex: 401530

SOUTH AFRICA
MARANTZ
DIVISION OF PHILIPS S.A.
Main Road Martindale
P.O. Box. 58088
Newville 21114
South Africa

SPAIN
PHONO S.A.
Ignacio Iglesias 10
Badalona (Barcelona)
Spain
Telex: 59355

SWEDEN
MARANTZ
DIVISION OF PHILIPS
Försäljning AB
Tegeluddsvägen 1
S-115 84 Stockholm
Sweden
Telex: 14060

SWITZERLAND
DYNAVOX ELECTRONICS
Route de Villars 105
1701 Fribourg
Switzerland
Telex: 942377

TURKEY
DOGRUOL Ltd.
I.M.C.
6 Blok N°6310
Unkapani
Istanbul
Turkey
Telex: 22085

MALTA
CACHIA & GALEA
Republic Street, 68D
Valetta
Telex: 1682

PORTUGAL
MARANTZ
Divisao philips S.A. service
Outurela-carnaxide
2795 LinDA-A-VELHA
Telex: 43906

All of the above locations are fully equipped to take care of your total service needs. Because various countries have differing configuration requirements, it is necessary that you contact the service facility in your particular country. In the event that there is no service location listed for your country, please, contact the nearest facility for the necessary assistance.

In case of difficulties, do not hesitate to contact the Technical Department at abovementioned address.

TABLE OF CONTENTS

INTRODUCTION 3
1. P.W. BOARDS 4
2. LASER RADIATION SAFETY 4
3. NOTES ON ELECTROSTATIC DAMAGE 5
4. TRANSPORTATION SCREWS 5
5. CD-12 6
ELECTRICAL MEASUREMENT AND DJUSTMENTS 6
INITIATION OF THE SERVICEING ROGRAMME OF THE μP 6
FAULTFINDING METHOD 7
PRACTICAL HINTS 7
DETAILED TROUBLESHOOTING METHOD 8
LOADING TRAY MECHANISM 20
6. DA-12 22
ANALOGUE MUTING 22
INPUT/TAPE MONITOR CHANGEOVER 24
JITTER KILLER CIRCUIT 25
7. CD-12 COMPONENT LOCATIONS 27
8. DA-12 COMPONENT LOCATIONS 30
9. RC-12CD COMPONENT LOCATIONS 34
10. CD-12 EXPLODED VIEW AND PARTS LIST 36
11. CD-12 ELECTRICAL PARTS LIST 42
12. DA-12 EXPLODED VIEW AND PARTS LIST 46
13. DA-12 ELECTRICAL PARTS LIST 50
14. RC-12CD EXPLODED VIEW AND PARTS LIST 54
15. RC-12CD ELECTRICAL PARTS LIST 56
16. TECHNICAL SPECIFICATIONS 58
17. SCHEMATIC DIAGRAM 59

How to use this service manual

- The "Common parts" which Marantz Japan, Inc. has established are eliminated from this service manual.
- These "Common parts" are applied to all models in the service manuals arranged and issued by MJI.
- To indicate clearly the common parts in the schematic diagram, a line is drawn above or under the Ref. Desig. No. of applicable parts.
- "Common parts" can be supplied from the Marantz service center as ever.
  In case of ordering, please establish the parts number of 12 N/C'S following the procedure mentioned in this service manual "How to establish the parts number for common parts".

1) Please correctly write the parts number of 12 N/C'S following the rule.

COMPACT DISC SYSTEM CD-12LE

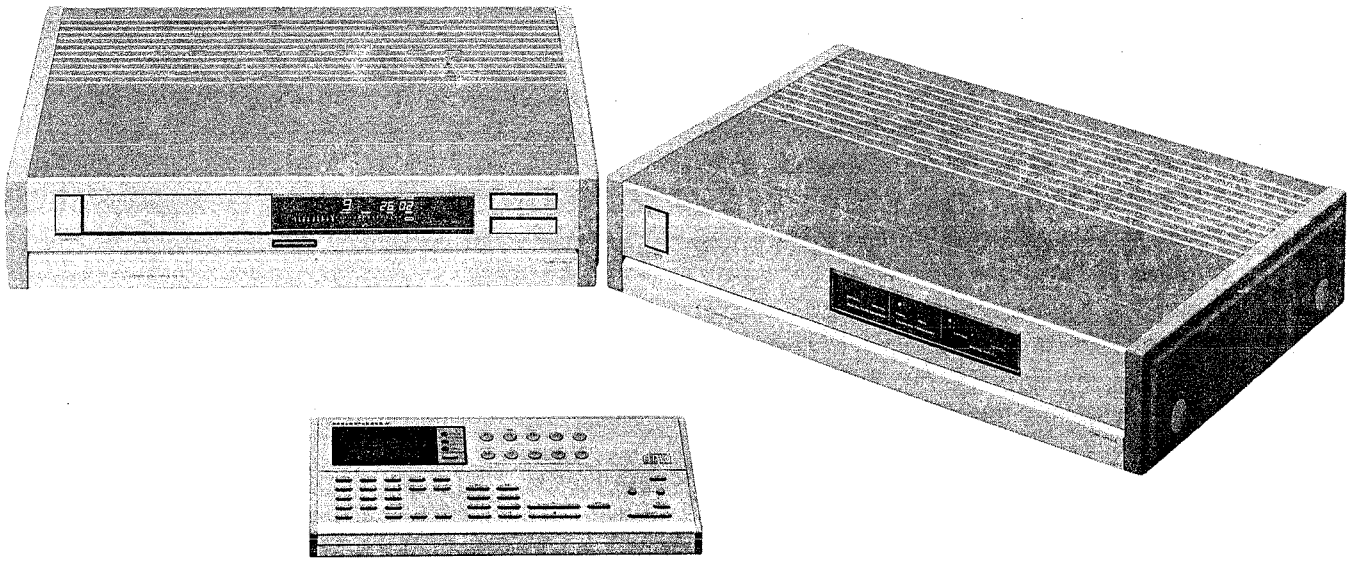

CLASS 1
LASER PRODUCT

INTRODUCTION

This service manual are prepared for use by Authorized Warranty Station and contains service information for Marantz Compact Disc System.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instructions should be read carefully. No attempt should be made to proceed without a good understanding of the operation of the Compact Disc System.

The parts list furnishes information by which replacement parts may be ordered from the Marantz Company. A simple description is included for parts which can be usually obtained through local suppliers.

1. P.W.BOARDS

As can be seen from the circuit diagram, the chassis of your Compact Disc System consists of the following units. Each unit mounted on a printed circuit board is described within the square enclosed by a bold dotted line on the circuit diagram.

Model CD-12

1. POWER/DEMO . . . . . mounted on P.W. Board PD16
2. FEATURE μ-COM . . . mounted on P.W. Board PM16
3. POWER SWITCH . . . . mounted on P.W. Board PP46
4. TEN KEYS . . . . . mounted on P.W. Board PS26
5. SERVO . . . . . mounted on P.W. Board PV16
6. SERVO MODULE . . . mounted on P.W. Board PV26
7. DISPLAY . . . . . mounted on P.W. Board PY16

Model DA-12

1. AUDIO DAC . . . . . mounted on P.W. Board PA16
2. BALANCE AMP . . . . . mounted on P.W. Board PA26
3. DEMO . . . . . mounted on P.W. Board PD16
4. POWER SWITCH . . . . mounted on P.W. Board PP26
5. DIGITAL IN/OUT . . . mounted on P.W. Board PJ16
6. POWER SUPPLY . . . . mounted on P.W. Board PP16
7. FUNCTION SWITCH/ PHONE . . . . . mounted on P.W. Board PS16

Model RC-12CD

1. MAIN . . . . . mounted on P.W. Board P506
2. KET . . . . . mounted on P.W. Board P606

MEASURING EQUIPMENT AND TEST DISC REQUIRED FOR SERVICING

- DC voltmeter
- Distortion meter
- Low pass filter
- Spectrum analyzer
- Oscilloscope
- Phase meter
- Frequency counter
- Test disc

2. LASER RADIATION SAFETY

Protection of eyes from laser beam during servicing. This set employs a laser. Therefore, be sure to carefully follow the instructions below when servicing.

1. Laser Diode Properties
   - Material: Al Ga As
   - Wave Length: 0.78 μm
   - Emission Duration: Continuous
   - Laser Output: Max. 0.11 mW

This output is the value measured at the objective lens surface on the light pen assembly.

- Classification: Class IIIb

2. During service, do not take the subchassis block apart and do not adjust the H F amp circuit. If there is a breakdown in the H F circuit (including laser diose), replace the entire subchassis block (including H F amp circuit board).

WARNING!!

When servicing, do not approach the laser exit with the eye too closely.
In case it is necessary to confirm laser beam emission, be sure to observe from a distance of more than 30 cm from the surface of the objective lens on the light pen assembly.

3. NOTES ON ELECTROSTATIC DAMAGE

When handling the laser diode of the optical pick-up or the MOS IC, be sure not to damage them with electrostatic. The electrostatic level charged in the human body and clothing varies with ambient conditions. However, simply walking will produce an electrostatic charge of more than several kV. With synthetic fiber clothing, an electrostatic charge of about 10 !– 30 kV will be produced on a dry day. If the charged electrostatic voltage is applied to the electrode of the semi-conductor, the electrode may be damaged easily. When handling the laser diode or the MOS IC, pay attention to the following points.

1. Lay a conductive sheet on the work bench and ground it.
2. Ground the soldering iron.
3. Do not wear synthetic fiber gloves or clothing. During operation, be sure to put on the wrist strap shown below.

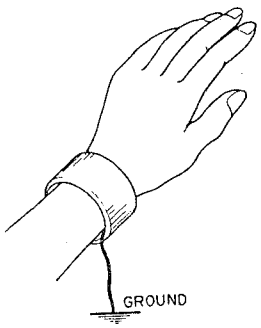

4. Use a conductive material to store the semi-conductors and short-circuit the electrodes or wrap them in aluminium foil to keep the potential at each electrode the same.

4.TRANSPORTATION SCREWS

To prevent the laser pick-up from damage during transportation, the pick-up is secured with two screws. After unpacking, be sure to remove two screws. After servicing, do not forget to fix the laser pick-up with two screws.

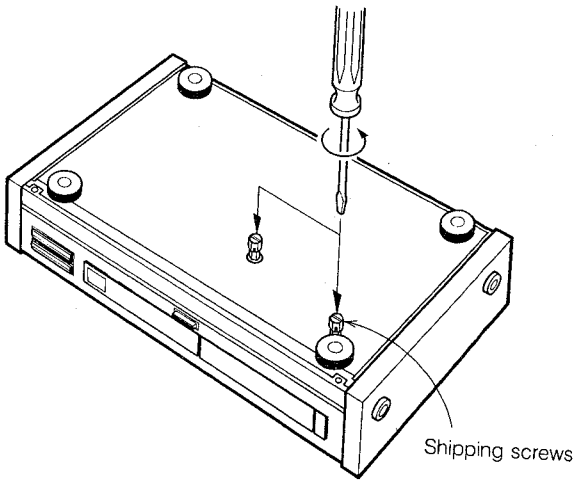

5. CD-12

ELECTRICAL MEASUREMENTS AND ADJUSTMENTS

Specification measurement



To measure the specification use can be made of audio test disc 4822 397 30085.
Use a 7th order filter, e.g. 4822 395 30204 (see Figure), to measure:
— Total harmonic distortion (THD).
— Intermodulation distortion.
— Signal-to-noise (S/N).

Laser power supply (POS. VOLT. SH.)

For check and preliminary adjustment of the laser supply see service manual C.D.M.-1.

Adjusting the laser supply

Play track 1 of test disc 4822 397 300096 (disc without defects).
Connect a DC voltmeter across resistor R309 on the servo PCB (= on emitter of transistor Q315 and ground).
Adjust the laser power supply with resistor 3180 until the voltage across resistor R309 is 575 ± 75 mV.

Adjusting the focus bandwidth

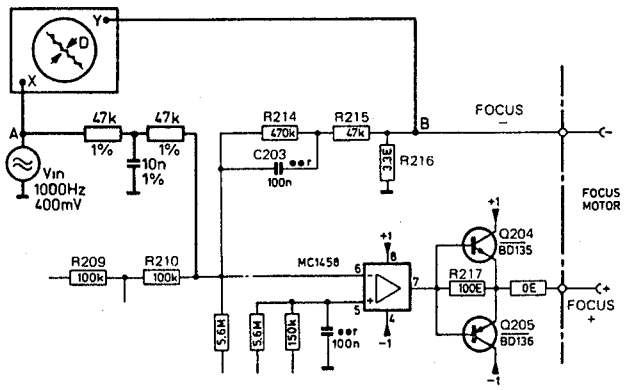

Make a measuring arrangement according to the figure.
Play track 1 of test disc 4822 397 30096 (disc without defects).
Adjust trimming resistor 3158 on PRE. AMPL. + LASER PCB for a 180° phase difference between signals A and B. This corresponds with a minimum distance D in the Lissajous pattern.

R=47 kΩ – 1% 5322 116 54671
C=10 nF –1% 5322 121 54154

Check of the AGC and offset circuits

(See SERVO PCB)
Play track 1 of test disc 4822 397 80096 (Disc without defects).
The voltage between pin 7 of IC Q303 (4/4) and ⊥ should be –4 V ± 2 V.
The voltage between pin 8 of IC Q302 (2/4) and ⊥ should be 0 V ± 2 V.

INITIATION OF THE SERVICING PROGRAMME OF THE μP

— **Servicing position "0"**

Simultaneously depress the STOP, PLAY and SEARCH ▷▷ buttons. Keep these three buttons depressed while the mains voltage is switched on.
This is the STAND-BY mode, "0" appears on the display.

In this state it is possible to move the arm by means of the SEARCH FORW and SEARCH REV keys with a minimum torque to the outside and the inside resp.
This enables a check of the free motion of the arm across the disc.

— **Servicing position "1"**

From servicing position "0" the player can be brought in servicing position "1" by depressing the NEXT key.

In this state the laser emits light and the objective starts to focus. When the focal point has been reached, "1" appears on the display.

When **no** disc has been inserted the objective goes 16 x to and fro. Then the player reassumes servicing position "0".

As in servicing position "0" the arm can be moved across the diameter of the disc by means of the SEARCH FORW and SEARCH REV keys.

— **Servicing position "2"**

To be reached by depressing the NEXT key after servicing position "1" has been reached.

The turntable motor starts to run

On the display appears "2".

In preparation of the transition to servicing position "3" the arm is sent to the centre of the disc.

— **Servicing position "3"**

To be reached by depressing the NEXT key after servicing position "2" has been reached.

The radial control is switched on. The subcode information is ignored. $\overline{\text{MUSB}}$ is high so that the music information **is released.**

On the display appears "3".

(Dependent on the length of the lead-in track music will be reproduced after approx 1 min.)

In this state it is possible to move the arm by means of the SEARCH FORW and the SEARCH REV keys to the outside and to the inside resp. Now the motion is controlled by the μ and the arm moves by steps of 64 tracks as long as the key is depressed.

If one of the servicing positions 1, 2 or 3 is disturbed (e.g. braking or removing the disc) the player reassumes servicing position "0".

The servicing programme can be left by switching the mains switch (POWER ON/OFF) off and on. (Hardware reset).

FAULTFINDING METHOD

Preface

In course of the development of the troubleshooting guide for the Compact Disc it has become clear that a different approach from the one applied so far was required.
For, it is no longer possible to use the classic strategy, i.e. basing the troubleshooting method on a number of possible faults in the unit.
Practice has shown that a certain fault, with the associated symptom, can have a wide variety of causes.
The reason is that this player incorporates a number of feedback loop configurations—which, moreover, might affect each other—and this impedes the obvious measurements.

The method below divides the player from diagram point of view into nine clearly distinguishable subgroups and by performing some measurements, the sub-group being in failure can be isolated. Later the defective circuit can be further examined according to the method given.

PRACTICAL HINTS

Test discs

It is important to handle the test discs with great care.
For, the troubles (black dots, fingerprints, etc.) are exclusively and unambiguously positioned.
Damage can cause additional drop-outs etc. and as a result the conscious fault on this disc is no longer exclusive.
In that case it is no longer possible to check e.g. whether the track detector is working correctly.

Measurements on op-amps

In the electronic circuits of the servo systems op-amps are frequently being applied. These op-amps can be used as amplifiers, as filters, as investors, as buffers, etc.

In those cases where feedback is applied in one way or the other, the voltage difference at the differential inputs inclines to zero. This applies both to DC and to AC.
The cause can be traced back to the properties of an ideal op-amp ($Z_i=\infty$; $G=\infty$; $Z_o=0$).
In practice this means that it is nearly impossible to perform measurements on the inverting and non-inverting inputs of op-amps if one input is directly connected to ground.
In those cases only the output signal will be measurable.

That is why in most cases no AC voltages can be given to the inputs.
The DC voltages at the inputs are equal.

Stimulating with "0" and "1"

In the troubleshooting method certain pins should in a number of cases be connected to ground or be connected to the power supply voltage.
This way of acting offers the possibility to overrule certain circuits and to stimulate others.
In this way the diagnose time can be reduced.

In a number of cases the relevant pins appear to be **op-amp outputs**.

In this respect it should be mentioned that the outputs of the used op-amps are short-circuit protected.
This implies that the output of an op-amp can be made low (= usually ground potential) without consequences.
On the other hand should be pointed out that it is **not allowed** to connect the output of an op-amp directly to the **power supply voltage**.

I/Os of microprocessors should not be connected directly to power supply voltage.
These I/Os are allowed to be brought to "0" in case this is mentioned explicitly.

Selection of ground point

It is very important to select a ground point as close as possible to the test point.

Conditions for injecting

- It is should be pointed out that injection of levels or signals from a strange source is **never** allowed to occur when the power supply voltage is lacking in the circuit in question.
- Naturally, the injected level is never allowed to exceed the power supply voltage of the circuit in question.

Continuous burning of the laser

- Disconnect plug J203 on the servo PCB and connect pin J203-9 (laser) of the cable connector to ground.
  Now the focus loop and the radial loop are interrupted as well:
  J203-7 (RE1 = Radial Error 1), J203-8 (RE2 = Radial Error 2) and J203-10 (FE = Focus Error).
  The laser also burns continuously when the set is in service loop 2.

Irregular working of the display

Irregular working of the display when the set is opened and playing, might have been caused by incidental body effect in the region of the crystal oscillators.
Switching "off" and "on" of the mains voltage will eliminate this effect.

Indication of checkpoint

In the circuit diagram the checkpoints have been given a serial number (e.g. ◇12◇), to which the troubleshooting method will refer.
For oscillograms, amplitudes, time bases and position of set, see tables of checkpoints.

GENERAL CHECKPOINTS

In the detailed troubleshooting method following below a number of general conditions, required for proper functioning of the player, will **not** be repeated. Before starting the detailed troubleshooting method these general points should be checked.

a. Ensure that disc and objective are clean (remove dust, fingerprints, etc.) and use undamaged discs.
b. Convince yourself of the presence of the clock frequencies, viz.:
   - 12 MHz for μP servo (pin 18)
   - 11.2896 MHz for FILTER-B IC (pin 19)
   - 2.82–5.64 MHz for free-running PLL circuit on the DECODER-A IC (pin 27)
   - 3 MHz for control and display μP (pin 33).
c. Check whether all power supply voltages are present and have the correct level.
   See PCB drawings.
d. Check whether the two mutes (KILL and $\overline{\text{MUSB}}$ are inactive so that data are nowhere interrupted.
   This should go high about 2 seconds after the mains voltage is switched on.
   $\overline{\text{MUSB}}$=pin 23 of the FILTER-B IC on the decoder PCB.
   Normally this pin is high during play and low during search.

DETAILED TROUBLESHOOTING METHOD

A number of quick and efficient checks immediately give a definite answer on poorly functioning sections of the player.
To check the servo systems four service loops have been built in μP Q271.
Before calling in service loops, it should be checked (position power on) whether the bus (clock, data: pin 17 and 10 or 11 of μP Q271 resp.) is free. In other words, checking whether these lines do not have a short circuit to ground or supply voltage (level low or "high"). In such a case the buttons cannot be operated.
For troubleshooting the step-by-step method below is followed.

First step (with disc on turntable)

Bring the player in service loop 1 or 2

If one of the conditions for service loop 1 or 2 is not met, the questions below should be answered positively **in the sequence given**.

In practice this means that when one question has been answered positively, all the preceding circuits, to which the questions refer, are functioning well.

Example: if the eye pattern is present, we may conclude that the laser is working, the laser is in focus and that the turntable motor is running.

Note:
In some situations, certain faults in the radial servo circuit affect the focus servo circuit (e.g. if supply voltage + 1 of IC Q301 in the radial circuit fails, the focus coil starts oscillating).
To determine if this situation exists, connect point ◇36◇ on the servo PCB to ground.
In this way, the influence of the radial servo circuit on the focus servo circuit can be eliminated.

A. Is the laser giving light?
   (Test method: see sub A)

B. Is the angle disc-light pin within the tolerance, i.e. 90°± 0.5°?
   (Test method: see description mentioned in chapter "Mechanical measurements and adjustments" of the C.D.M. manual).

C. Is the laser giving sufficient light?
   (Test method: see sub C).

D. Does the objective come in focus?
   (Test method: see sub D).

E. Is the turntable motor running and, if so, is it running at the correct speed?
   (Test method: see sub E).

If the answers to questions 1 or 2 through E are positive, it should be possible to bring the player in service loop 1 or 2.

Second step (with disc on turntable)

Bring the player in service loop 3.

This means that the eye pattern on point ◇65◇ (on the decoder PCB has to be stable, while MSC on point ◇17◇ on the servo PCB has to be more stable too).
(Test method: see DECODER-A IC)

Note that the set is not only tracking a song in loop 3, but also playing the song, provided the digital circuit is working (however music cannot be hard).

If this does not work, return to service loop 2 and answer the questions below positively in the sequence given.

F. Are $\overline{\text{DO}}$ and HFL detectors functioning?
   (test method: see sub F)

G. Is track detector functioning?
   (test method: see sub G)

H. Is the radial control functioning properly?
(test method: see sub H)

If the answers to questions F, G and H are positive, it should be possible to bring the player in service loop 3.

Third step (with disc on turntable)

Note that the set is not only tracking a song in loop 3, but also playing the song, provided the digital circuit is working (music cannot be heard).

If this does not work, return to service loop 3 and answer the question below positively.

I. Is $\overline{TL}$ functioning, i.e. polarity of RE?
(test method: see sub I)

J. Is information transmission subcode functioning?
(test method: see DECODER-AIC)

Check the Q-channel signals.

If the answers to questions I and J are positive, it should be possible to bring the player in the Play mode.

Fourth step (with disc on turntable)

If no music is heard in position "play" or service loop 3 answer the last question.

K. Is digital decoder circuit functioning according to specification (test method: see II. FILTER-B IC and V. KILL CIRCUIT)

Sub. A. IS THE LASER GIVING LIGHT?

Test method

Bring the player in service loop 1 without placing a disc on the turntable. Now the laser is giving light for an unlimited period of time.

Another method for which the laser gives light during an unlimited period of time and the objective is standing still, is disconnecting plug J203 on the servo PCB and connecting point J203-9 of the cable connector to ground.
In case of power-on the laser should burn. This is checked with the aid of a light-sensitive component which is slightly screened from ambient light.

Hereafter follow some examples:

a. Connect photosensitive diode type BPW4, code number 4822 12032108, with correct polarity to an analogue multimeter (e.g. PM2412) at range 10 kΩ.
If the laser is burning, the meter will give virtually full scale deflection.

b. Connect LDR, code number 4822 116 10002, to digital multimeter PM2517E.
If the laser is burning, the resistance will drop to approx. 8 kΩ.

If the laser is not giving any light, proceed to Annex 1.

Sub. C. IS THE LASER GIVING SUFFICIENT LIGHT?

Test method (Test points on Pre-amp PCB)

— Interrupt the collector of Q203 on the servo PCB or ground the-side of electrolytic capacitor C201. Disconnect plug J203 on the servo PCB and connect pin **J203-9 (laser)** of the cable connector to ground.
Now the laser should continue to give light while FE, RE1 and RE2 are interrupted.
— Place disc on turntable and switch power on.
— Directly inject with AF generator ($Z_i \leq 600$ Ohms) to test point ⟨1⟩ FE a sine-wave signal between 25 and 60 Hz (exact frequency is player-dependent) and $2V_{pp}$.
— Select such a frequency that the monitor diodes of the light pin give output signals as indicated on test points ⟨5⟩, ⟨6⟩, ⟨7⟩ and ⟨8⟩. Amplitude 40–80 mV.
— If the amplitude is not sufficient, proceed to Annex 1.

Sub. D. IS THE OBJECTIVE COMING INTO FOCUS?

Test method

- **No disc on turntable**

Switch power on and actuate Play button.
Now the arm should move inwards. Immediately after that the objective should move two times up-and downwards (this happens during searching of the focusing point).
After this the action will stop.
These actions are software-controlled from the servo μP. If this is not working, check μP servo, end stage focus circuit or focus coil.

- **With disc on turntable**

Quick test procedure:

For a rough check on the working of the focus circuit, proceed as follows:
— place disc on turntable.
— set player in service loop 1.
— remove disc from turntable.
— now examinate if the objective focuses by bringing a reflective object (e.g. mirror) above it.

Detailed test procedure

— Check **Q203** (on servo PCB) as follows:
Check whether FN becomes, with each passage of the nominal focusing **low for a short period of time.** Only when focusing point FN has been found, FE will be released via Q203 (base will become negative).
Check whether base of Q202 is driven low from servo μP (= $\overline{FCO}$). If not, check servo μP.
If so, proceed.

— Test focusing circuit as follows:
Interrupt the collector of Q203 on the servo PCB and disconnect **plug J203** on the servo PCB. Con-

nect pin **J203-9 (laser)** of the cable connector to ground.
Now the laser is burning continuously, FE has been released and the focus loop has been interrupted at test point ◇1◇ (=FE) on servo PCB.

Testing of circuit, between test point ◇1◇ and focusing coil
(Test points on servo PCB)

- Directly inject a sine-wave signal of 10 Hz, $2V_{pp}$, to test point ◇1◇ by means of an AF generator ($Z_i \leq 600\ \Omega$).
- Check visually whether focusing coil "--" and thus objective too "--" responds.
- Check whether this voltage is 0.6 V_{pp} on test point ◇2◇.
- Check whether this voltage is 6 V_{pp} on test point ◇3◇.
- Check whether this voltage is 5 V_{pp} on test point ◇4◇.

Testing the subchassis (Test points on Pre Amp PCB, injection point on servo PCB)

- Place a disc on the turntable.
- Directly inject to test point ◇1◇ a sine-wave signal between 25 Hz and 60 Hz at 2 V_{pp} by means of an AF generator ($Z_i \leq 600\ \Omega$). The exact frequency is player-dependent.
- Select such a frequency that the monitor diodes of the light pin give output signals as indicated on test points ◇5◇, ◇6◇, ◇7◇ and ◇8◇.
- Check test points ◇9◇, ◇10◇, ◇11◇ and ◇12◇.
- Check test point ◇13◇.
- Check test point ◇14◇.

  Is the same as signal on test point ◇13◇ but amplitude is dependent on position of potentiometer 3138.

If all the checks are positive, close focus loop (insert plug J203). Now the focusing circuit should be able to operate. Reconnect transistor Q203.
It should be noted here that the amplitudes on test points ◇5◇ through ◇13◇ are slightly dependent on the characteristic of the monitor diodes.

Sub. E. IS TURNTABLE MOTOR RUNNING AND, IF SO, IS IT RUNNING AT THE CORRECT SPEED?

Test method (Test points on servo PCB)

- Place disc on turntable and bring set in service loop 2.
- If focusing point is found, check whether $\overline{FCO}$ is low on point ◇15◇.
  If not, check focus circuit sub D.
  If so, proceed.
- Now only power on, disconnect plug J201 on the servo PCB and check MSC=point ◇12◇ of cable connector J201 or point ◇81◇ on the decoder PCB.
  If not, check Decoder-A IC (Q501) circuit.
  If so, proceed.
- Reconnect plug J201, disconnect plug 15 on the preamplifier PCB and inject a DC signal to the cable connector of the motor or directly to the turntable motor.
  The turntable motor should be running now.
  (A DC voltage of 2,5 V approximately corresponds with the rpm during scanning of the innermost tracks).
  In this condition the player should be brought in service loop 2 (depress Stop button while mains voltage is switched on).
  If DC < 2.5 V Figure G should be visible on test point ◇17◇ (servo PCB).
  If DC > 2.5 V Figure H should be visible on test point ◇17◇.

If so, check turntable control circuit (circuit from point ◇17◇ to turntable motor).
If not, check whether MSC is released by means of $\overline{SSM}$ at pin 16 of IC Q271.
This connecting plug J201 on the servo PCB and measure on pin 12 of cable connector J201.
If MSC is working now, check circuit around IC Q271.

- Take player out of service loop 2, depress Power-on button and then Play button and check eye pattern on point ◇65◇ (on decoder PCB).
  To stabilize the eye pattern, bring light pin above tracks by hand, or by briefly (5 s) depressing Fast Forward button.
  If eye pattern not point ◇65◇ is not present or unstable, check RF pre amplifier (see Annex IV).
- If eye pattern is correct, proceed.
- Check whether point ◇55◇ (=$\overline{HFLS}$) on the servo PCB is correct in service loop 2 (see Figure Y). If not, check $\overline{HFLS}$ detector circuit (is circuit between point ◇65◇ and ◇55◇). If so, proceed.
  Take player out of service loop 2 by depressing the power button.
- Check locking-in of PLL circuit of Decoder-A IC.
  (See CEFM signal pin 27: point ◇68◇)
  If PLL is locking-in, proceed.
- Check timing signals on output of Decoder-A IC as indicated in "DECODER-A IC".
  Is the digital decoder circuit functioning according to specification? If timing signals are correct, proceed.
- If MSC is still not functioning properly, replace the relevant specific digital IC according to the trial and error method with the aid of service IC box.
- MSC has to be present now.

Sub. F. ARE THE $\overline{DO}$ and $\overline{HFLS}$ DETECTORS FUNCTIONING?

Test method (Test points on servo PCB)

— Starting point is:
$\overline{HFLS}$ = 1 when spot is exactly on track
$\overline{HFLS}$ = 0 between tracks (e.g. during track jumping)
$\overline{DO}$ = 0, or DO = 1 in case of drop-out
$\overline{DO}$ = 1, or DO = 0 when there is no drop-out.

Approximative method
(applicable in service loop 2)

— Place disc on turntable.
— Bring player in service loop 2.
— Check whether DO (test point ◇57) is not continuously "high". Normally test point ◇57 is "low", however small spikes of approximately 100mV are present in case of scratches on the disc.
— Check $\overline{HFLS}$ (test point ◇55).

Precise method
(can be checked in playing set only)

— Place test disc 5A on turntable. Switch power on and depress Play button.
— Select track no. 10: Check point ◇55.
$\overline{HFLS}$ pulses should be present.
— Select track no. 15: Check point ◇56.
$\overline{DO}$ pulses should be present. With this track the $\overline{HFLS}$ pulses on point ◇55 should also be present.
— In case of track jumping $\overline{HFLS}$ pulses are always present on point ◇55.

Sub. G. IS TRACK DETECTOR FUNCTIONING WELL?

Test method (Test points on servo PCB)

Switch off the offset circuit:
Loosen resistor 3315 (at the side where it is in contact with pin 8 of IC Q302).
Mount a 47 kΩ trimming potentiometer between +1 and -1 supply voltage (for example between pins 4 and 11 of IC Q302). Connect the wiper of the trimming potentiometer to the loose side of resistor 3315.

— Place a disc on the turntable.
— Bring the set in service loop 2.
— Adjust the signal on test point ◇21 symmetrically round 0V by means of the external 47 kΩ trimming potentiometer. The amplitude of the signal may change during this adjustment.
— Measure F.S on point ◇36.
Here too the frequency variation depends on the eccentricity of the disc.
— Check point ◇60.
— Check point ◇61. Signal cannot be triggered.
— Check point ◇62.
— Switch the offset circuit on again.

Sub. H. IS THE RADIAL CONTROL FUNCTIONING PROPERLY?

Attention: The offset circuit (d-multipuller) and the AGC circuit (k-multipller) are correction circuits. This means that under optimal conditions (new disc, minimum tolerances of components) the set may be working properly even if a fault is preset in offset or AGC circuit.

Test method (Testpoints on servo PCB)

a. Place disc on turntable.
b. Switch off AGC circuit (k-multiplier) and switch off offset circuit (d-multiplier).

Method:
Switching off AGC circuit: interconnect points ◇5 and ◇6 of IC Q309.

— Place a disc on the turntable.
— Bring the set in service loop 2.
— Adjust the signal on test point ◇21 symmetrically round 0V by means of the external 47 kΩ trimming pot. The amplitude of the signal may change during this adjustment.

c. Bring set in service loop 3.
At this moment there is a high probability that the set is working.
If so, check d and k factor (see Annexes II and III).

If not, proceed.

d. Bring set in service loop 2 and check signal on point ◇21.
The AC-component has to be 12-14 V symmetrically, around a DC level of zero volt.
If this is correct, proceed to e).
If this is not correct check following testpoints
◇22, ◇23: value should be 0.7 V_{pp}
◇24: value should be 0.2 V_{pp}
◇25: value should be 0.25 V_{pp}
◇26: value should be 20 mV_{pp}
◇27, ◇28: value should be 800 mV_{pp}

Note:
The frequency variation strongly depends on the eccentricity of the disc.
If points ◇22 ÷ ◇28 are OK, check point ◇21 again.
If ◇21 is OK, proceed.

e. Check point ◇29 (is RE + 650 Hz).
Value should be Vpp If so, proceed.
When the set is in the normal stand-by position 650 Hz at 300 mV is present on point ◇29.

f. To check radial output stage, do not use a disc, only power on. Inject on points ◇30 and ◇31 respectively a sine-wave signal of 8 to 10 Hz 3 Vpp.
Then the radial motor will go back and forth.

At this moment radial tracking must be possible in service loop 3..
— Switch the AGC circuit on again.
If the original fault symptom is still present proceed

to Annex III:
Check of the k-factor.
— Switch the offset circuit on again.
If the original fault symptom is still present, proceed to Annex II:
Check of the d-factor.

Sub. I. IS $\overline{INT}$ FUNCTIONING. O.E. POLARIOTY OF RE? (Measure points on servo PCB)

Test method
Bring player in service loop 3 and measure $\overline{INT}$ on pin 12 of μP servo IC Q271.
A square-wave voltage (0-5V) should be measured on th is pin. As a result of the frequency variation th is square-wave is hard to trigger.

I DECODER-A IC

- **Check the MC signal (pin 17; test point ◈81◈)**

— In stand-by mode, the MC signal (Motor Control) corresponds to the figure below.

Note:
The repetition time of the MC signals is 11.3 μsec.

— Place a disc on the turntable.
— In position PLAY or SERVICE POSITION 3, the MC signal corresponds to the figure below.

Note:
During start-up the duty cycle is 98%, then the duty cycle of the signal becomes about 50%.

See also Service Manual CDM-1: "Check of the motor control".

POSITION: STAND BY

POSITION: PLAY (BEGINNING)

POSITION: PLAY (NORMAL)

- **Check the HF signal on test point ◈65◈ (eye pattern)**

— Place a disc on the turntable.
— The HF signal should be present and be stable in the PLAY mode and in:
SERVICING POSITION 3 after the run-in track has been read.
— In SERVICING POSITION 2 and during reading of the lead-in track the HF signal is not stable.

Position of oscilloscope 0.5 μs/DIV.

Amplitude ≈ 1.5 V_{pp}

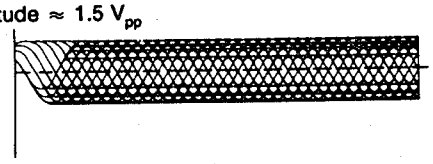

- **Check the $\overline{HFLD}$ signal on test point ◈66◈**

— Place a disc on the turntable.
— In the PLAY mode and in SERVICING POSITION 3 the $\overline{HFLD}$ signal is "high"; however, minor pulses may be present and in cause of disorders on the disc.
— In SERVICING POSITION 2 and during playback of track no. 15 of test disc 5A $\overline{HFLD}$ pulses are visible.

Position of the oscilloscope 5 ms/DIV



- **Check if the $\overline{MUTE}$ signal (pin 11; test point ◈67◈) is "high"**
When Filter-B IC is applied, the $\overline{MUTE}$ input will not be used.

- **Check the CEFM signal (pin 27; test point ◈68◈)**

— Place a disc on thr turntable.
— In stand-by mode (only the main s switch is depressed), the frequency lies between 2.82 MHz and 5.64 MHz.
— In the position PLAY and SERVICE POSITIONS 2 and 3, the frequency is 4.32 MHz.

- **Check the Xin signal (pin 19; test point ◈69◈)**

— The Xin frequency is 11.2896 MHz.
— If this frequency deviates, check test point 70; Xout signal, on Filter-B IC.
This frequency should also be 11.2896 MHz.

- **Check the timing signals meant for Filter-B IC**

— Place a disc on the turntable.
— Select one of the following positions:
SERVICE POSITION 2 or 3, or position PLAY.
— Trigger the oscilloscope with the WSAB signal (test point ◈71◈, pin 39).
— Check signals:
WSAB at test point ◈71◈ (pin 39)
(Word Select from Decoder-A to Filter-B)
CLAB at test point ◈72◈ (pin 38)
(Clock from Decoder-A to Filter-B)
and their interrelation.
— There must be activity at test point ◈73◈ (pin 37), DAAB signal (DATA from Decoder-A to Filter-B).

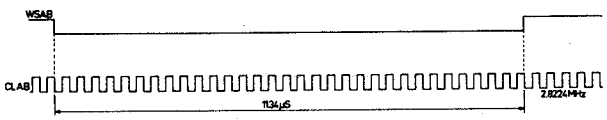

- **Check the EFAB signal (Error Flag from Decoder-A to Filter-B) at test point ⑭ (pin 36)**

— Place test disc 5A on the turntable.
— During playback, EFAB fulses should be present at test point ⑭ for soft braking of the disc and during fast search (F.Forward, F.Reverse).

Note:
Filter-B IC is capable of interpolating linearly 8 successive EFAB pulses.

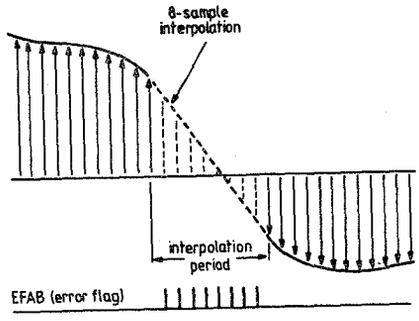

- **Check the Q-channel signals**

— Place a disc on the turntable.
— Select one of the following positions:
SERVICE POSITION 3 or position PLAY.
— Trigger on the QRA signal (Q-channel Request Acknowledge) test point ⑮; pin 30.
— Check signals QRA at test point ⑮ (pin 30).
QCL at test point ⑯ (pin 31).
(Q-channel-clock)
and their interrelation.
— There should then be activity at test point ⑰ (pin 29) QDA (Q-channel Data).

Note:
The QRA request is initiated by decoder μP (QRA "high"). Then Decoder-A answers this request (QRA goes "low"). With the next leading clock pulse (QCL) the QRA signal is rendered "high" again by the decoder μP.
As soon as the decoder μP has taken in enough information via QDA, QRA will go low again. That is why the QRA times vary each time.

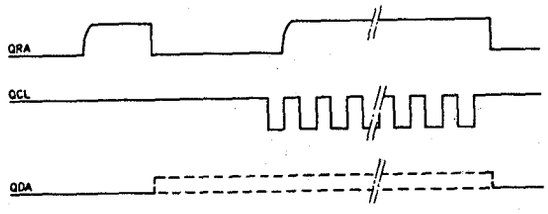

- **Check the $\overline{SSM}$ signal (test point ⑱; pin 33) = Start-Stop turntable motor**

— Motor start pulse when test point ⑱ is "high" for ≥ 0.2 sec.
— Motor start pulse when test point ⑱ is "low" for ≥ 0.2 sec.

Note:
After the motor start pulse, SWAB information (Subcoding Word clock) will become visible at this point. The period time of that signals is 136 μsec.

- **Check the subcode clock signals**

— Place a disc on the turntable.
— Select one of the following positions: SERVICE POSITION 3 or position PLAY.
— Trigger the oscilloscope with the SWAB signal at test point ⑱.
— Check the following signals:
SWAB at test point ⑱; pin 33
SCAB at test point ⑲; pin 35 (Subcode Clock from Decoder-A to Filter B)
SDAB at test point ⑳; pin 34 (Subcode Data from Decoder-A to Filter B)l
and their interrelations.

Note:
While the burst of 10 clock pulses, appear on SCAB the Q-channel information is transferred on SDAB. Hereafter the P-bit indication follows.
The P-bit "high" between two bursts of 10 clock pulses in case of pause indication and "low" in case of music indication.

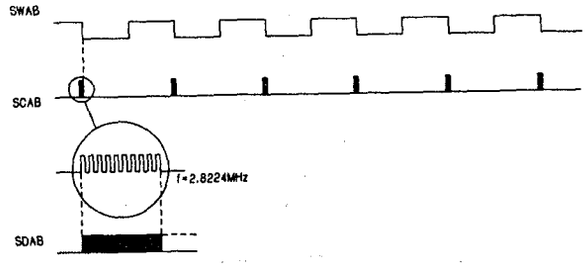

- **Check the $\overline{CRI}$ signal**

The $\overline{CRI}$ is "low" in case of track jumping.
Player in position SEARCH.

II FILTER-B IC

- **Check the signals between Decoder-A IC and Filter-B IC**

See sub. "I Decoder-A IC".
— Check the X IN signal (test points ◇69 and ◇70)
— Check the timing signals meant for Filter B (WSAB, CLAB, DAAB signals; test points ◇71, ◇72 and ◇73).
— Check the EFAB signal (test point ◇74)
— Check the subcode clock signals (SWAB, SCAB, SDAB signals; test points ◇78, ◇79 and ◇80).

- **Check the DOBM signal (Digital Output)**

— Place a disc on the turntable.
— Select the stand-by mode (only mains switch depressed).
— Trigger the oscilloscope with the SWAB signal (test point ◇78).
— Check the DOBM signal (test point ◇88; pin 14). An empty audio signal has a fixed pattern. See drawing, "Stand-by".
— Select the PLAY mode. Check the DOBM signal. See drawing "PLAY".

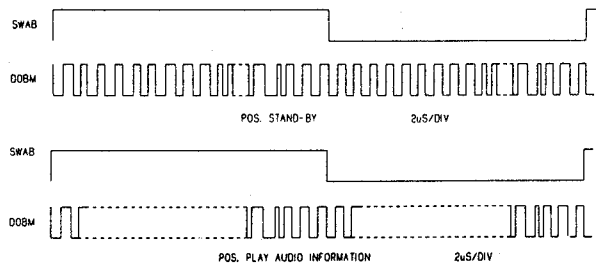

- **In position SEARCH the $\overline{\text{ATSB}}$ signal is "low" test point ◇89; pin 22 (Attenuation Audio Signal)**

— When the "μP panel" is applied, (a sub-printed circuit board) that houses IC Q271, test point ◇89 is not connected.

- **Check the $\overline{\text{MUSB}}$ signal test point ◇90; pin 23 (Soft Mute)**
  This signal is "low" in positions:
  PAUSE
  NEXT or PREVIOUS when jumping form one track to another.
  Fast SEARCH when the Search button is kept depressed for some time.

VI FAVOURITE TRACK SELECT (FTS)

Attention:
When repairing a CD player it is important that the cxontents of the FTS memory (EEPROM) should not unnecessarily be damaged.
If no complaints are reported about the functioning of the FTS, a check of the functions of the EEPROM should be left undone.
The EEPROM IC is in the Stand-by mode when $\overline{\text{CE}}$ and RDY are both high.

Selftest of the FTS μP

During the self-test of the FTS μP, I/O Gate will not be tested.
Therefore this self-test can be executed without damage to the memory as indicated in General Test Points.

Annex I: LASER IS GIVING NO OR INSUFFICIENT LIGHT

Together with laser supply and the monitor diode the laser forms a feedback system.
A defect in the laser supply might thus result in destruction of the laser. Replacement of th laser (=new light pin) will not solve anything. The new laser will also be destroyed since the original fault in the laser supply is still present.

On the other hand it is impossible to check and repair a feedback system when one link is missing.

For this reason the so-called laser simulator 3 is supplied. Code number 4822 395 30229.
This laser simulator consists of a PCB which contains the laser and monitor simulation, a switch to test the On/Off position and a number of sockets.

This PCB can be connected to the laser supply instead of the light pin so that the feedback system is closed.

Repair procedure:

Since the light pin is very sensitive to static charges, care should be taken that during measurements and adjustments of the laser power supply the potential of the aids and yourself equal the potential of the CD mechanism.

Detach light pin an connect laser simulator as follows: (connections on pre-amp PCB).
Take the flex PCB out of socket 11 and connect the simulator PCB with the socket.
Remove plug 16 and insert it in the socket on the simulator PCB.
Connect the plug with 4 wires to socket 16. Take out plug 17 and insert the plug with 1 wire in socket 17.

— Switch on the mains switch and ensure that the drawer is closed or else that the tray-end-in switch on the tray PCB (S004) is depressed.
Now press the play key and check if the L-line of the servo μP, pin 21-2 on the pre-amplifier PCB, goes "low".
— In rest position the current through the laser diode should be $\leq$ 1 mA. For NEG. VOLT. lasers this can be checked as follows:
Set the switch on the simulator PCB in the OFF position and the mains switch in the ON position.
Turn trimming resistor 3180 counterclockwise (min. R) and measure the voltage across resistor 3194 on the pre-amp. PCB.
On pre-amplifier PCBs with discrete components turn resistor 3180 clockwise (min. R) and measure the voltage across resistor 3194.
The voltage should be $\leq$ 15 V.

Check of laser supply control

Set the switch on the simulator PCB in the ON position and measure the voltages between points +V and=V on the simulator PCB.
Resistor 3180 clockwise (max. R): U_{+v-v}=225 mV ±45 mV. On pre-amplifier PCBs with discrete components resistor 3180 counterclockwise (max. R): U_{+v-v}=225 mV ±45 mV.

R3180 counterclockwise (min. R): U_{+v-v}=750 mV ± 150 mV.
On preamplifier PCBs with discrete components resistor 3180 clockwise (min. R): U_{+v-v}=750 mV ±150 mV.

Set resistor 3180 in the mid-position.
This is a preliminary adjustment. After the simulator PCB has been removed the laser current must be adjusted.

Fine adjustment of laser current

— Playback track 1 of test disc 4822 397 30096 (Disc without defects). Connect a DC voltmeter across resistor 3308 on the SERVO PCB circuit diagram D. Adjust the laser power supply with resistor 3308 is 575 mV ± 50 mV.

Annex II: **CHECKING d-FACTOR**
(Test points on servo PCB)

— Switch off AGC circuit (k-multiplier) and switch off offset circuit (d-multiplier). See sub G and H.

Place disc on turntable and set player in service loop 2.

— Check points ◈22◈ and ◈23◈.
Value should be o.7 V_{pp}.
Frequency variation strongly depends on the eccentricity of the disc.
— Check points ◈25◈.
Value should be 250 mV_{pp}.
— Check point ◈35◈.
Value should be 200 mV_{pp}.
— Check point ◈36◈.
Value should be 2 V_{pp}.
— Check points ◈37◈ and ◈38◈.
Value should be 10 V_{pp}.
The signals is more sine-shaped now due to filtering out of 650 Hz.
— Point ◈39◈ is hard to measure since switch is in position Yoc and thus connected with input of op-amp Q302 (pin 9).
However, a signal of 200 mVpp is present.
— Check point ◈40◈.
Value should be 9 V_{pp}.

Bring the player in service loop 3. With a disc on turntable and the AGC and offset-circuits are still switched off.

— Check point ◈41◈.
— Check point ◈40◈ on beam A of oscilloscope and check point ◈39◈ on beam B of oscilloscope while oscilloscope is triggered with point ◈41◈.
— Switch on the AGC-circuit and offset circuit.

Annex III: **CHECKING k-FACTOR**
(Test points on Servo PCB)

a. Static

Switch power on **without** depressing the Play button. I.e. RC0=high; $\overline{RC0}$=low so switch Ya is in position 0 and switch Yc is in position 0.

— Check point ◈45◈.
Value should be 9 V_{pp}.
— Check point ◈46◈.
— On point ◈29◈ now appears a sine-wave signal of 650 Hz, 300 mV, and 180-45=360°shifted in phase relative to signal on point ◈45◈.
— Check point ◈47◈.
Value should be 1.5 V_{pp}.
— Check point ◈48◈.
Value should be 1 V_{pp}.
— Check points ◈49◈, ◈50◈, ◈51◈ and ◈46◈ relative to each other.
Amplitudes are 5V.
— Check integrator IC Q303 (4/4)

b. Dynamic

Insert disc, select service loop 2 and check if the signal on point ◇21◇ equals to 7 V_{pp}.

— Select service loop 3.
  Now $\overline{RC0}$=high and RC0=low.
  So switch Y_a is in position1.
  Switch Y_c switches at f=650 Hz.
  Point ◇52◇ is low; so point ◇51◇ is in phase point ◇50◇.
  Now fig. U should be present on point ◇51◇ with duly cycle jittering round 50%.

Annex IV: **CHECKING RF PRE-AMPLIFIER**
(measure points on pre-amp. PCB)

a. Check DC-voltages on transistor 6103, 6104, 6105, 6109, 6110, 6111.

b. For checking sensitivity, frequency and delay characteristic, proceed as follows:
   — Take flex PCBs of sockets 10 and 11.
   — Take plugs 18, 17, 12, 13, 14 and 15 out of sockets.

SERVO

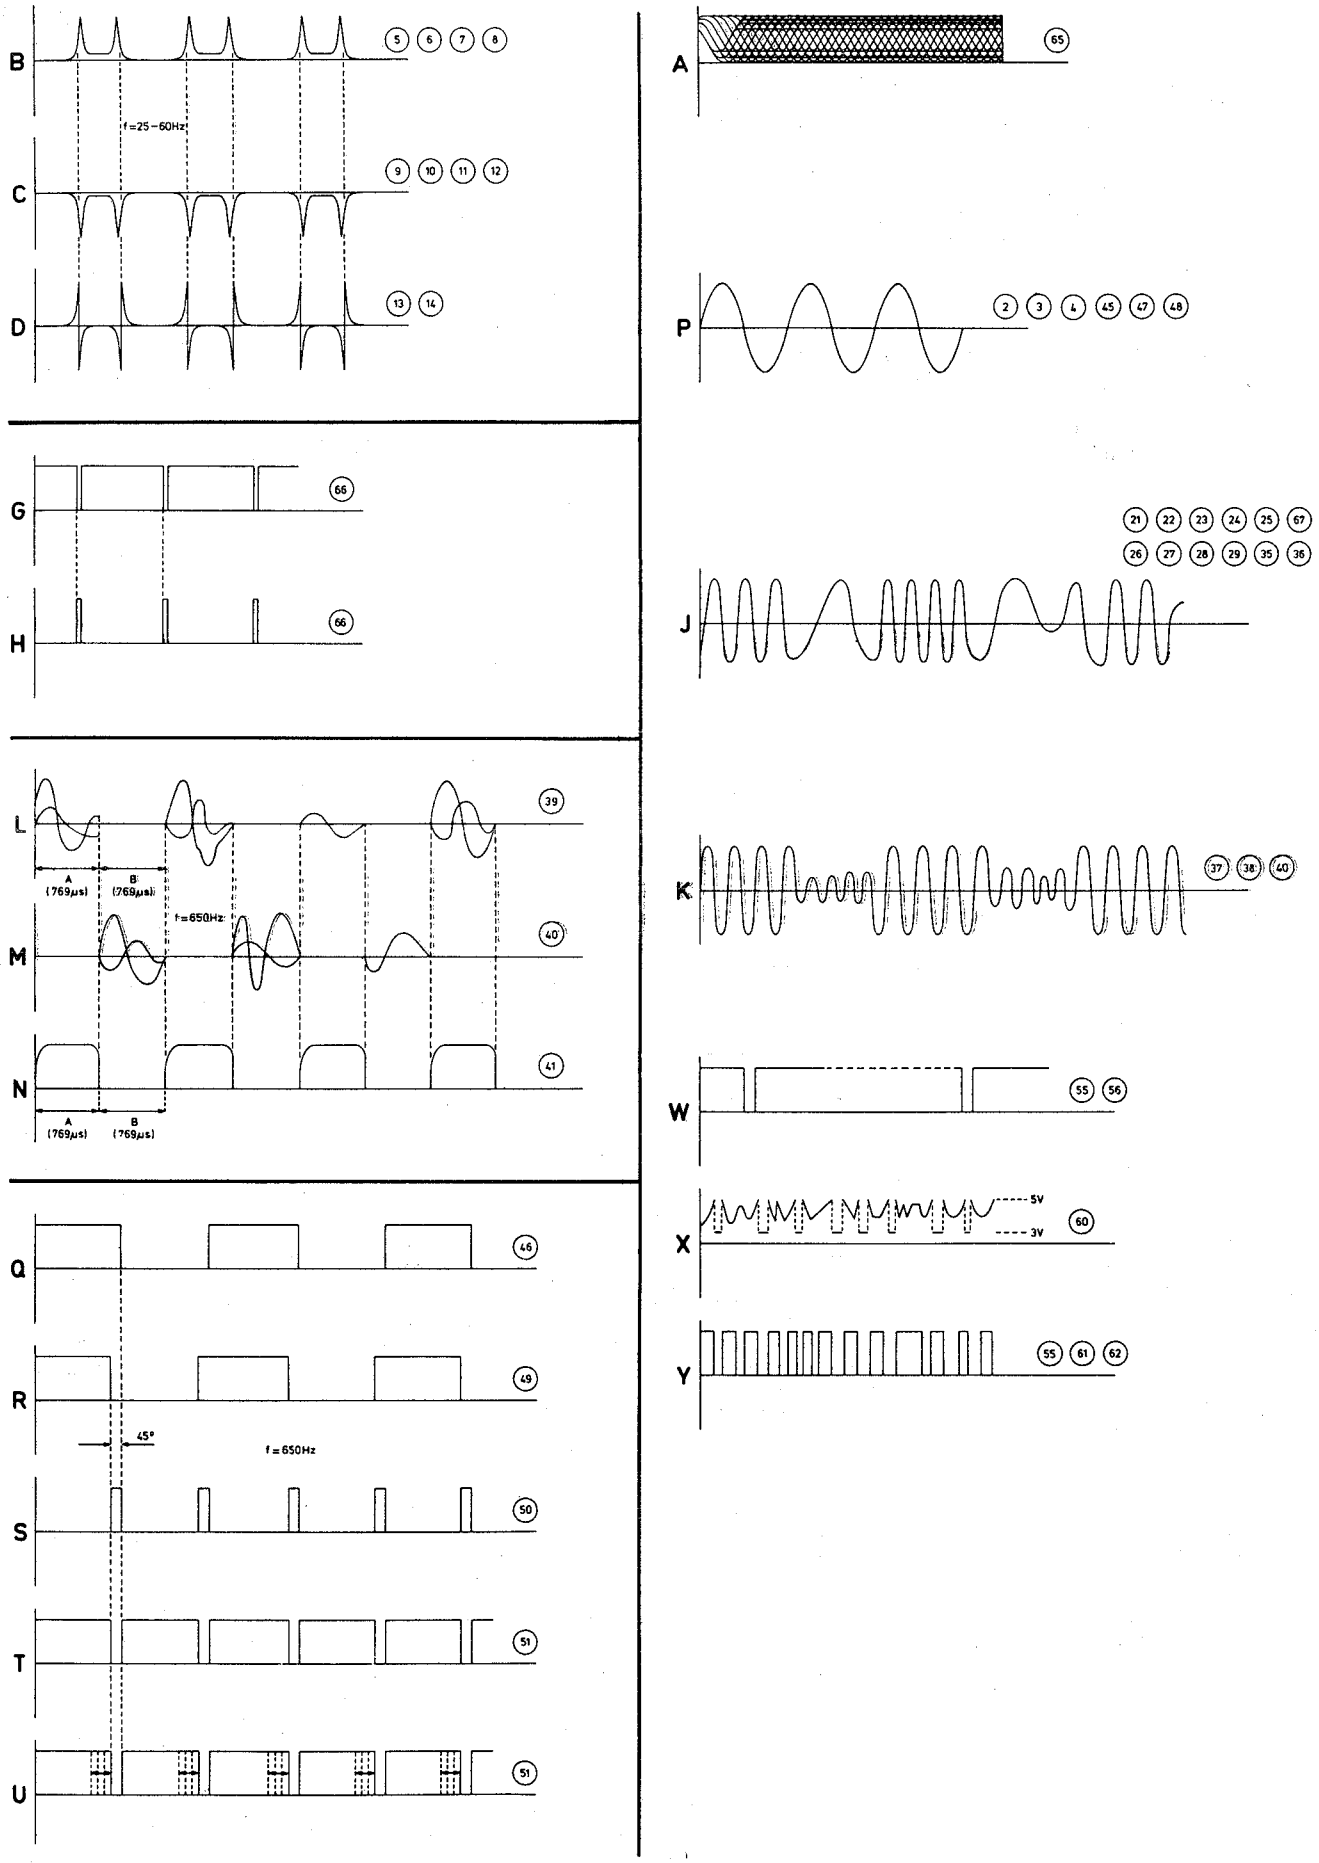
B
5 6 7 8
f=25–60Hz
C
9 10 11 12
D
13 14
A
65
P
2 3 4 45 47 48
G
66
H
66
21 22 23 24 25 67
26 27 28 29 35 36
J
L
39
A (769µs)
B (769µs)
f=650Hz
M
40
N
41
A (769µs)
B (769µs)
K
37 38 40
W
55 56
X
5V
3V
60
Y
55 61 62
Q
46
R
49
45°
f=650Hz
S
50
T
51
U
51

SERVO

Nr.	See	Position	Amplitude	f	Time base
1		see fault finding meth.			
2	P	see fault finding meth.	0,6 Vp-p	10 Hz	
3	P	see fault finding meth.	6 Vp-p	10 Hz	
4	P	see fault finding meth.	5 Vp-p	10 Hz	
5	B	see fault finding meth.	40-80 mV	25-60 Hz	
6	B	see fault finding meth.	40-80 mV	25-60 Hz	
7	B	see fault finding meth.	40-80 mV	25-60 Hz	
8	B	see fault finding meth.	40-80 mV	25-60 Hz	
9	C	see fault finding meth.	—2 V	25-60 Hz	
10	C	see fault finding meth.	—2 V	25-60 Hz	
11	C	see fault finding meth.	—2 V	25-60 Hz	
12	C	see fault finding meth.	—2 V	25-60 Hz	
13	D	see fault finding meth.	—8 V, +8 V	25-60 Hz	
14	D	see fault finding meth.	depends on R3158	25-60 Hz	
15		see fault finding meth.			
20		see fault finding meth.			
21	J	see fault finding meth.	12-14 Vp-p		
22	J	see fault finding meth.	0,7 Vp-p		
23	J	see fault finding meth.	0,7 Vp-P		
24	J	see fault finding meth.	0,2 Vp-p		
25	J	see fault finding meth.	0,25 Vp-p		
26	J	see fault finding meth.	20 mVp-p		
27	J	see fault finding meth.	800 mVp-p		
28	J	see fault finding meth.	800 mVp-p		
29	J	see fault finding meth.	6 Vp-p		
29	P	ON	0,3 Vp-p		
30		see fault finding meth.			
31		see fault finding meth.			
32	*	see fault finding meth.			
33	*	see fault finding meth.			
35	J	see fault finding meth.	200 mVp-p		
36	J	see fault finding meth.	2 Vp-p		
37	K	see fault finding meth.	10 Vp-p		
38	K	see fault finding meth.	10 Vp-p		
39	L	see fault finding meth.	0-4 Vp-p		A = 769 µs B = 769 µs
40	K	see fault finding meth.	9 Vp-p		A = 769 µs B = 769 µs
40	M	see fault finding meth.	0-4 Vp-p		A = 769 µs B = 769 µs
41	N	see fault finding meth.	6 Vp-p		A = 769 µs B = 769 µs
45	P	ON	9 Vp-p	650 Hz	
46	Q	ON	0-5 V	650 Hz	A = 769 µs B = 769 µs
47	P	ON	1,5 Vp-p	650 Hz	
48	P	ON	1 Vp-p	650 Hz	
49	R	ON	0-5 V	650 Hz	
50	S	ON	0-5 V	650 Hz	
51	T	ON	5-0 V	650 Hz	
51	U	service loop B	5 V	650 Hz	
52		see fault finding meth.			
55	Y	service loop A	5-0 V		
55	W	play (with test disc)	5-0 V		
56	W	play (with test disc)	5-0 V		
57		see fault finding meth.			
60	X	service loop A	5-3 V		
61	Y	service loop A	5-0 V		
62	Y	service loop A	5-0 V		
65	A	play	1 Vp-p		
66	G	see fault finding meth.	5-0 V		
66	H	see fault finding meth.	0-5 V		
67	J	see fault finding meth.			

BLOCK DIAGRAM WARDS INFOMATION

DAC0 – DAC3	Control bit for radial circuit
DAC	Cirrent output for track jumping
$\overline{DO}$	Drop out detector signal
D1 – 4	Photodiode Currents
FE	Focus error signal
HF	HF output for DEMOD
$\overline{HFLD}$	HF detector output for DEMOD
MSC	Motor control signal
RE	Radial error signal (Amplified RE2 – RE1 currents)
RE1	Radial error signal 1 (Summation of amplified currents D3 and D4)
RE2	Radial error signal 2 (Summation of amplified currents D1 and D2)
$\overline{TL}$/INT	Track loss signal
Vc	Control voltage for turntable motor
$\overline{ATSB}$	Attenuation of Audio level in search position (cueing)
CEFM	Clock 4.3218 MHz
CLAB	Clock signal Decoder-A to Filter-B
CLBD	Clock signal Filter-B to DAC
CRI	Counter Reset Inhibit
DAAB	Data signal Decoder-A to Filter-B
DABD	Data signal Filter-B to DAC
$\overline{DEEM}$	Deemphasis ON-OFF signal
DOBM	Digital out signal
EFAB	Error flag Decoder-A to Filter-B
IREF	Reference current
$\overline{SSM}$	Motor Start-Stop signal
$\overline{MUTE}$	Mute signal
$\overline{MUSB}$	Soft Mute signal
PD/OC	Phase detector-oscillator control
QCL	Q-channel Clock signal
QDA	Q-channel Data signal
QRA	Q-channel Request Aknowledge
SCAB	Subcode clock Decoder-A to Filtor-B
SDAB	Subcode data Decoder-A to Filter-B
SWAB/$\overline{SSM}$	Subcode Word/Start-Stop Motor signal
WSAB	Word select Decoder-A to Filter-B
WSBD	Word select Filter-B to DAC
XIN	Oscillator signal in Decoder-A
XSYS	Oscillator signal OUT Filter-B
RDIR	Radial current switch control signal Nomal, or Revers
RP	Radial puls after Track Jump
FN	Focus Neutral
ANIN	
$\overline{HFLS}$	HF Loss signal
$\overline{SRDO}$	Signal Radial ON/OFF for Track jump
RCO	Switch Digital to Analogue
FC1, FC2	Focus UP/DOWN signal
$\overline{FCO}$	Focus ON/OFF signal
L	Laser ON/OFF signal
BUSY	μ-COM Communication Clock
RXD	μ-COM Communication Recive Data
TXD	μ-COM Communication Telex Data

Loading Tray Mechanism

Cautions When Servicing

1. Installation of Tray and Tray Case
(Upon replacement of the tray case due to breakage, etc.)

(1) If the position with respect to the tray's front panel window is incorrect, lossen screws (A) and move the tray within the range of play of the hole to adjust. For the inclination of the tray, refer to diagram below.

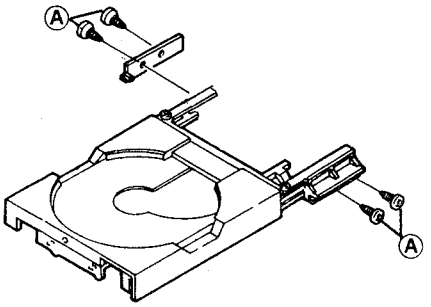

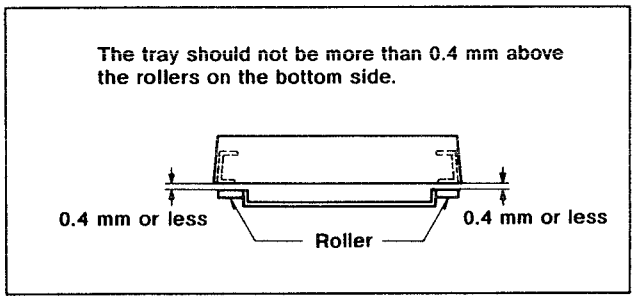

Adjust the inclination as well with screws (A).

(2) The tray's working force should be set to between 200 and 400 gr (when power is off).

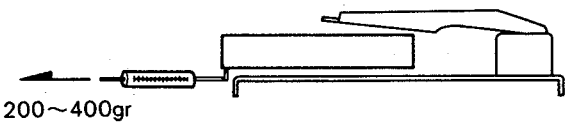

2. If Tray has become detached downward

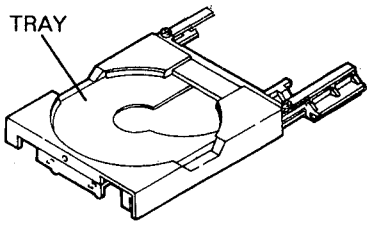

Take care in the following instances as the tray will become detached downward.

- The tray will become detaced if pressed downward when there is no subchassis (CDM-1).
  (The same is true when the tray is closed with no subchassis.)

Use the following procedure to reinstall.

(1) Lower the lever and place the tray on the projection.

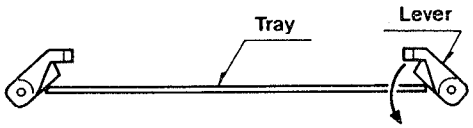

(2) Next, with the tray pressed down, lower the other lever and place the tray on its projectin.



NOTE:
Be sure to lower only one lever at a time as the tray cannot be lifted if they are both lowered.

NOTE:
If the tray is forced back to its original position, the two pins in the tray case may bend.

3. If Subchassis (CDM-1) has been replaced

① The height of the subchassis turntable differs from one unit to the next, so it is necessary to adjust according to the height of the turntable so that the magnet clamper is not in contact with the clamper fitting. (Standard 2±0.3 mm)

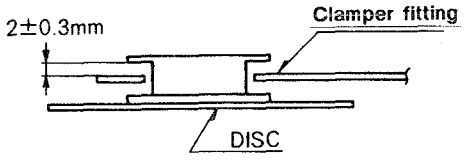

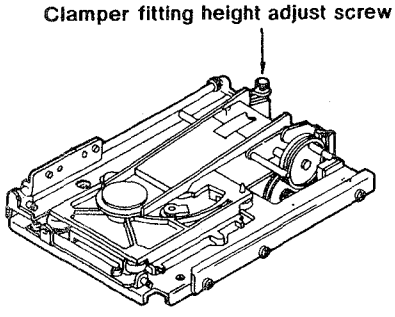

② When the height of the clamper fitting is adjusted, the position when the clamper is up must be readjusted. Use the following procedure.

Disc clamper position

When up Max. 43 mm (Tray and clamper should not come into contact when try is opened and closed.)

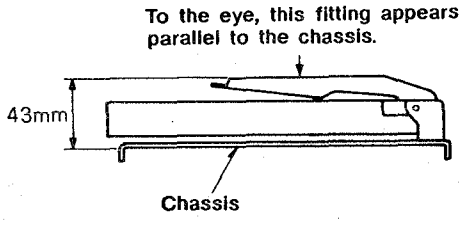

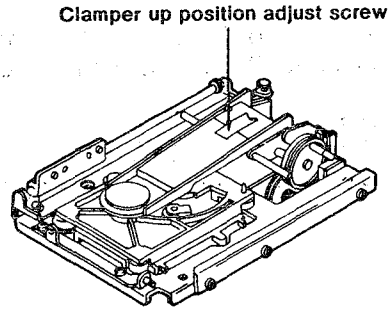

4. Others

① Refer to the diagram below to install the loading wire.

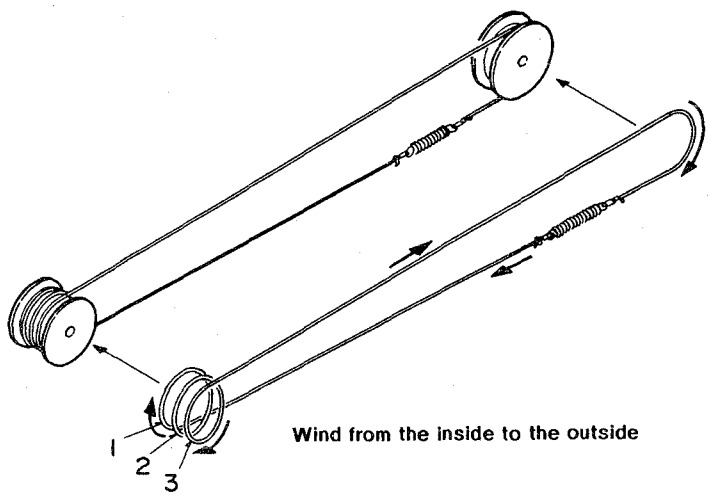

② All switches on the mechanism are of the socket type. If a switch breaks, remove the socket to replace.

③ Use to the structure of the hooks of the magnet clamper (094M), incline as indicated below to remove and install the magnet clamper when replacing it.

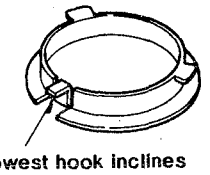

④ When the tray is disassembled, take care of the up/down and front/rear directions of the POWER SW button and aluminum panels of the tray.

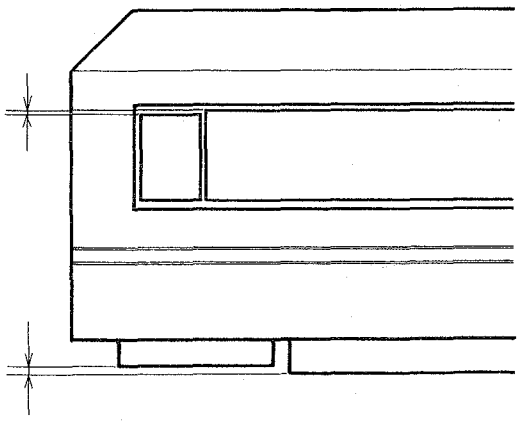

6. DA-12

ANALOGUE MUTING

1. Power ON/OFF muting

When the power is switched ON, the collector of Q807 outputs the muting pulse for approx. 1.5 s according to the time constant of C811 and R807. Q808 then generates the inverted pulse, which cuts off Q809 and Q810 to turn the muting relay OFF. When the power is switched OFF, the Muting-On time of approx. 60 ms is delayed by R805 and C810. This is performed by delaying the relay operation by 60 ms which corresponds to the lack of 3 cycles in 50 Hz frequency. However, the audio operation is normal during this period because the discharge characteristics of the audio and other circuitry are longer than the time constant.

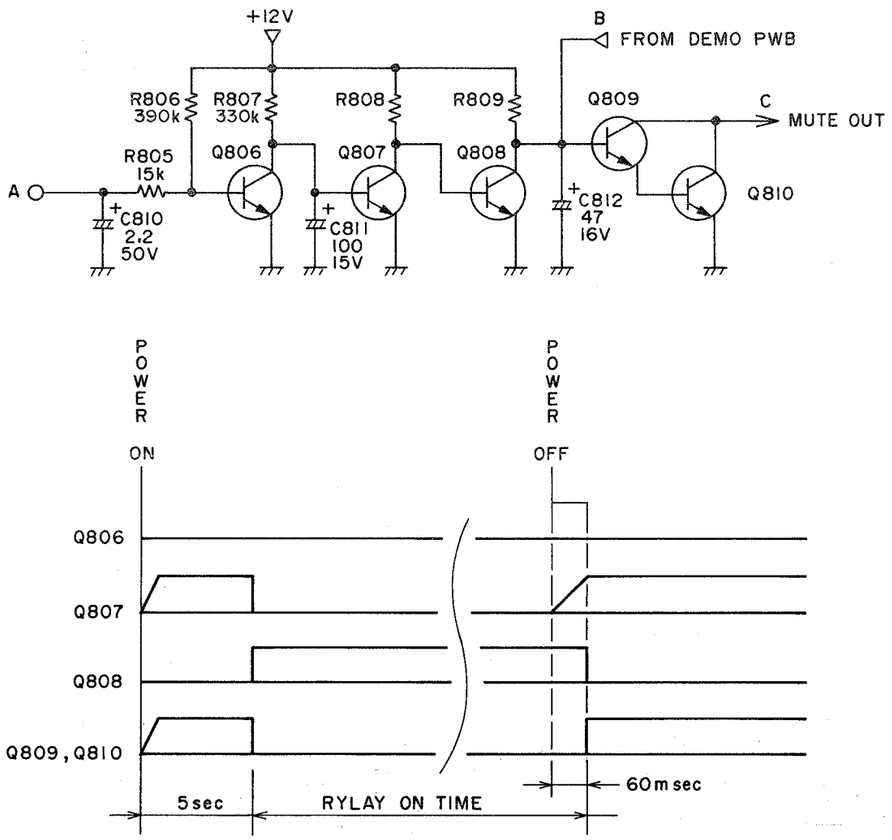

2. Digital signal error muting

In the event of digital signal error, potential is discharged at point B and the muting time of approx. 1.5 ms is provided by R809 and C812.

3. Input selector switching muting

1. The selector switches are of the non-shorting type. DS07 and DS08 are combined to generate a High pulse at the instant one of the switches is selected. This signal, S MUTE, is applied to QC78 (monostable multivibrator) which generates a muting pulse of approx. 700 ms. The muting pulse performs digital muting by cutting off CLOCK at pin 11 XTAL IN of IB (Q407) in the end. On the other hand, audio muting is also performed in the same way, but the operation speed is slower with audio muting.

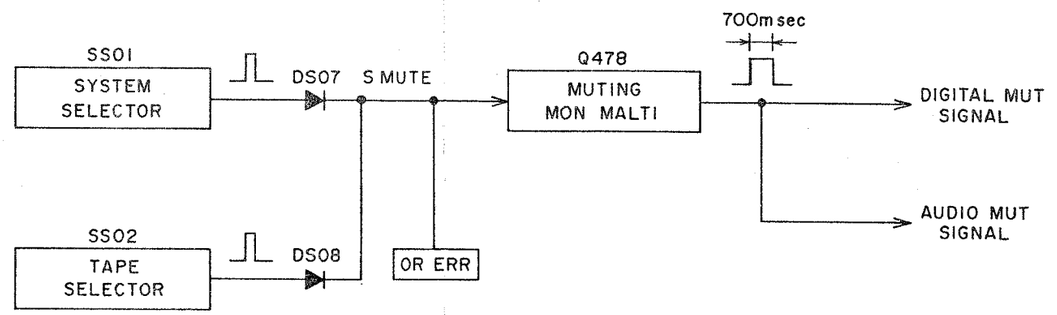

2. The timing chart is as shown below. The difference between the digital muting time and analogue muting time, which is 800 ms, is a marginal time for preventing noise due to unstable data output at the moment of rise of the PLL.

INPUT/TAPE MONITOR CHANGEOVER

1. The input selectors generate signals A and B respectively with the diode matrices. These signals are used for the control of IC Q301 and Q318.

a. The inputs to Q318 at pins 10, 11, 12 and 13 are selected according to the control signal inputs A1 and B1, and one of D0 to D3 is output at Yb (pin 9).
b. Q301 switches the TAPE MONITOR signal with the same logic as above.

SS01

POSSION	A_1	B_1	OUT (9 PIN)
1	L	H	D_1
2	L	L	D_0
3	H	L	D_2
4	H	H	D_3

SS02

POSSION	A_2	B_2	OUT (9 PIN)
1	L	H	D_1
2	H	H	D_3
3	H	L	D_2
—			

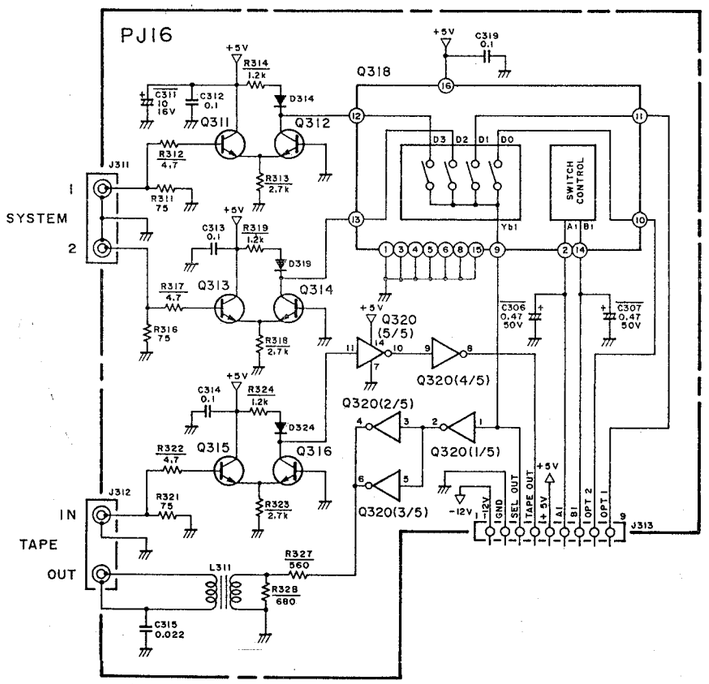

JITTER KILLER CIRCUIT

It is to kill jitter (sway or lag of time axis, a kind of distortion) which occur in optical transmission line.

The circuit method is "memory twin PLL" method. This circuit is especially effective for improving distortion rate in high frequency band.

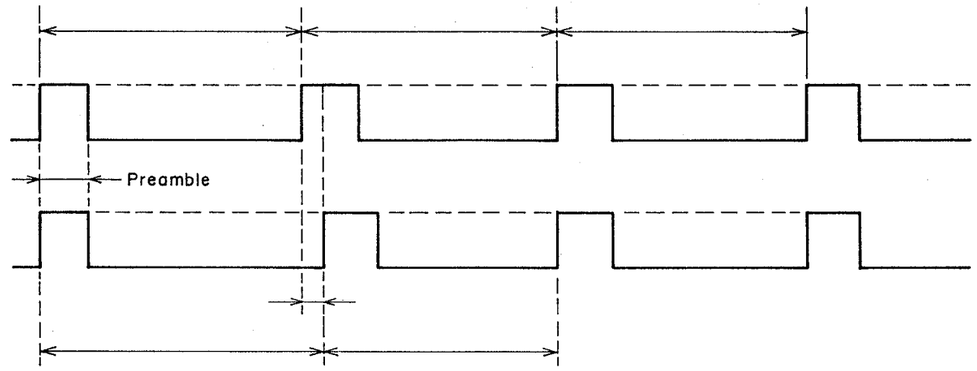

2. Jitter killer circuit diagram

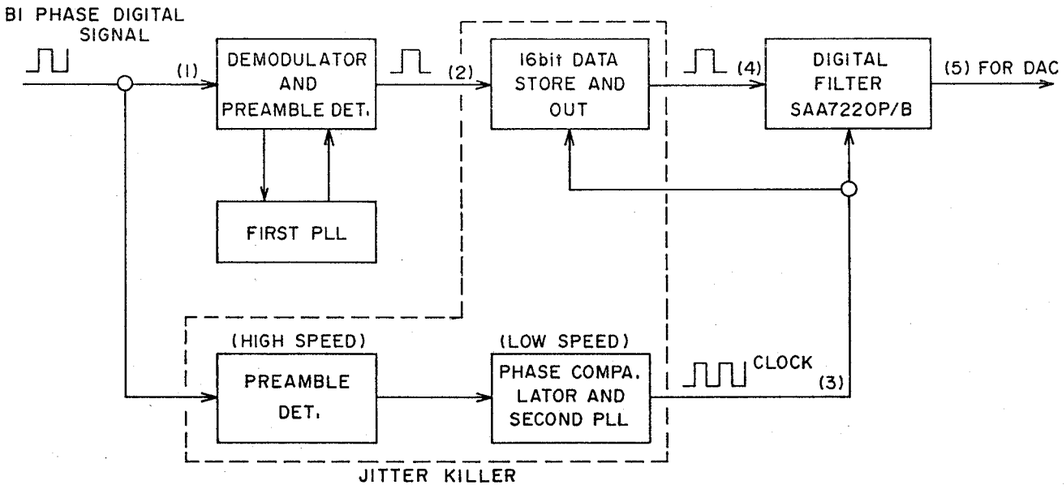

3. Twin PLL with memory method

PLL has reciprocal characteristics that low-speed (narrow-band) is preferable in the view of sound quality and high-speed (broad-band) is better in the view of decoder responsibility. Thus, we set two lines of PLL, high-speed and low-speed types. Clock with much jitter made by high-speed PLL (1st PLL) controls decoder, and clock with less jitter made by low-speed PLL (2nd PLL) controls digital filter and DAC, easily influenced by sound quality (clock for DAC is not supplied directly from low-speed PLL but through digital filter).

The method for making jitter margin high is:
- to position word memory which consists of 16 bit shift register before digital filter,
- store once the data wich jitter from decoder in the memory,
- at the time that the data was stored for 1 word (16 bit), read out with less-jitter clock made by low-speed 2nd PLL to send to digital filter.

That is, jitter in data is to be cut by storing once the data in memory per word.

4. Circuits motion

1) Preamble detector (Q463-1/4 – 4/4. Q464-1/2, 2/2)
   Detect head signal per sample of 16 bit data to output to phase comparator (Q465) as a synchronizing signals. The frequency is 88.2 kHz at 44.1 kHz sampling.

2) Second PLL (low speed)
   It consists of:
   - Phase comparator (Q465)
   - Low pass filter for band-pass restriction (Q455, Q456)
   - VCO (Q457) which changes oscillation frequency by voltage output of L.P.F.
   - Frequency divider (Q465-2/1, 2/2) which works (1/128 freq. division) with duty ratio of 50% accurately.

   The basic operation is:
   - First VCO starts oscillation with free-run frequency set up in advance.
   - Then phase comparator with work to compare phase of signal divided by freq. divider and phase of synchronizing signal of received data.
   - Voltage corresponding to the phase difference is made out, which will be fed back through L.P.F. to VCO, to change the oscillation frequency in order to reduce the phase difference.
   - Then soon it will be locked at the point where the frequency of freq. divided signal and the phase are almost equal.
   - Master clock (11.2896 MHz) synchronzing with received data will output VCO output to digital filter via AND gate IC (Q473 4/4).

7. CD-12 PARTS LOCATIONS(Patterm Side)

PM16-FEATURE μ-COM

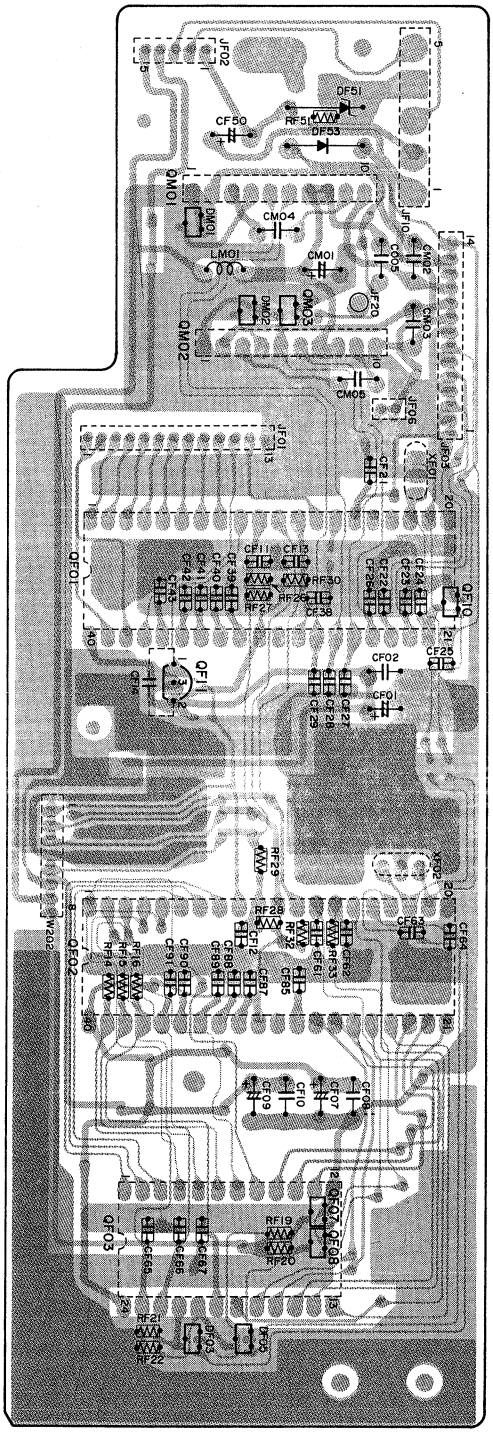

PY16-DISPLAY

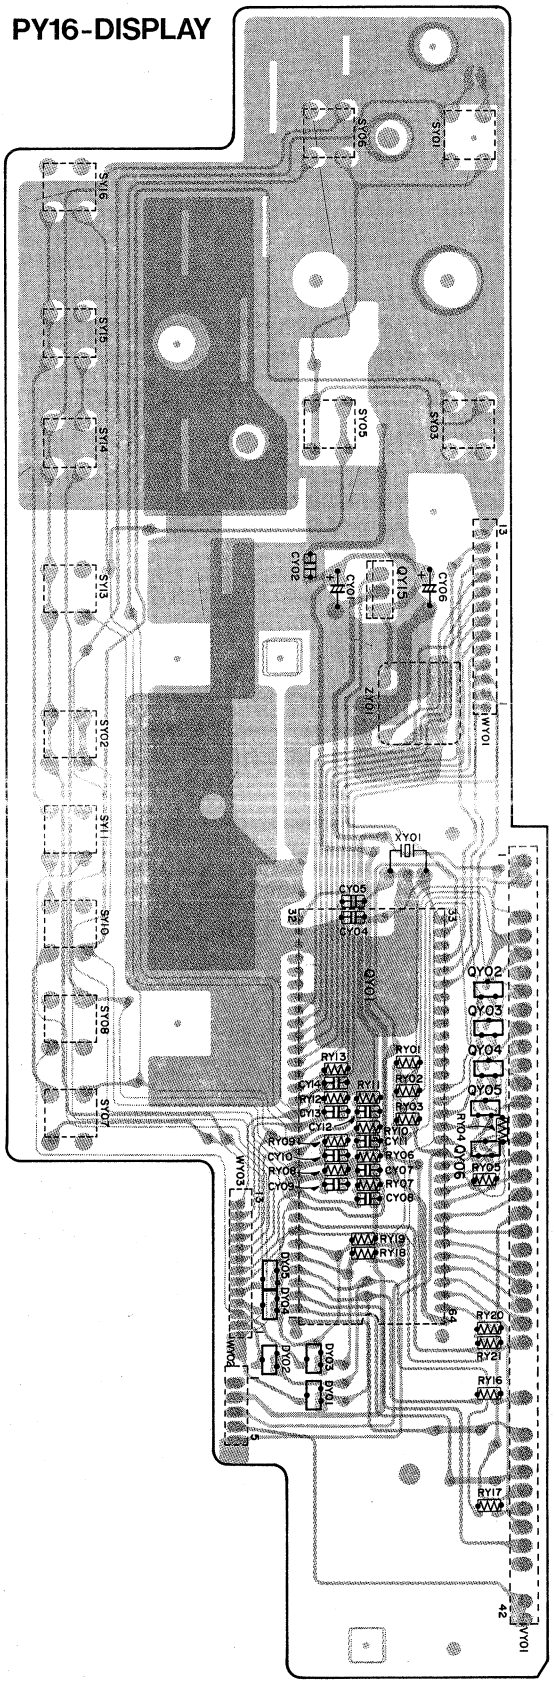

PV26-SERVO MODULE

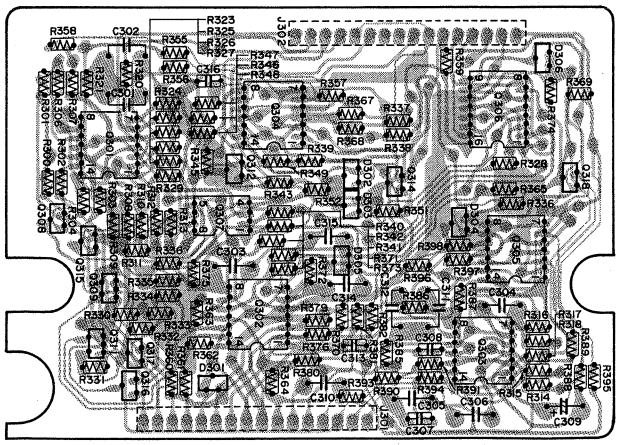

PD16-POWER/DEMO

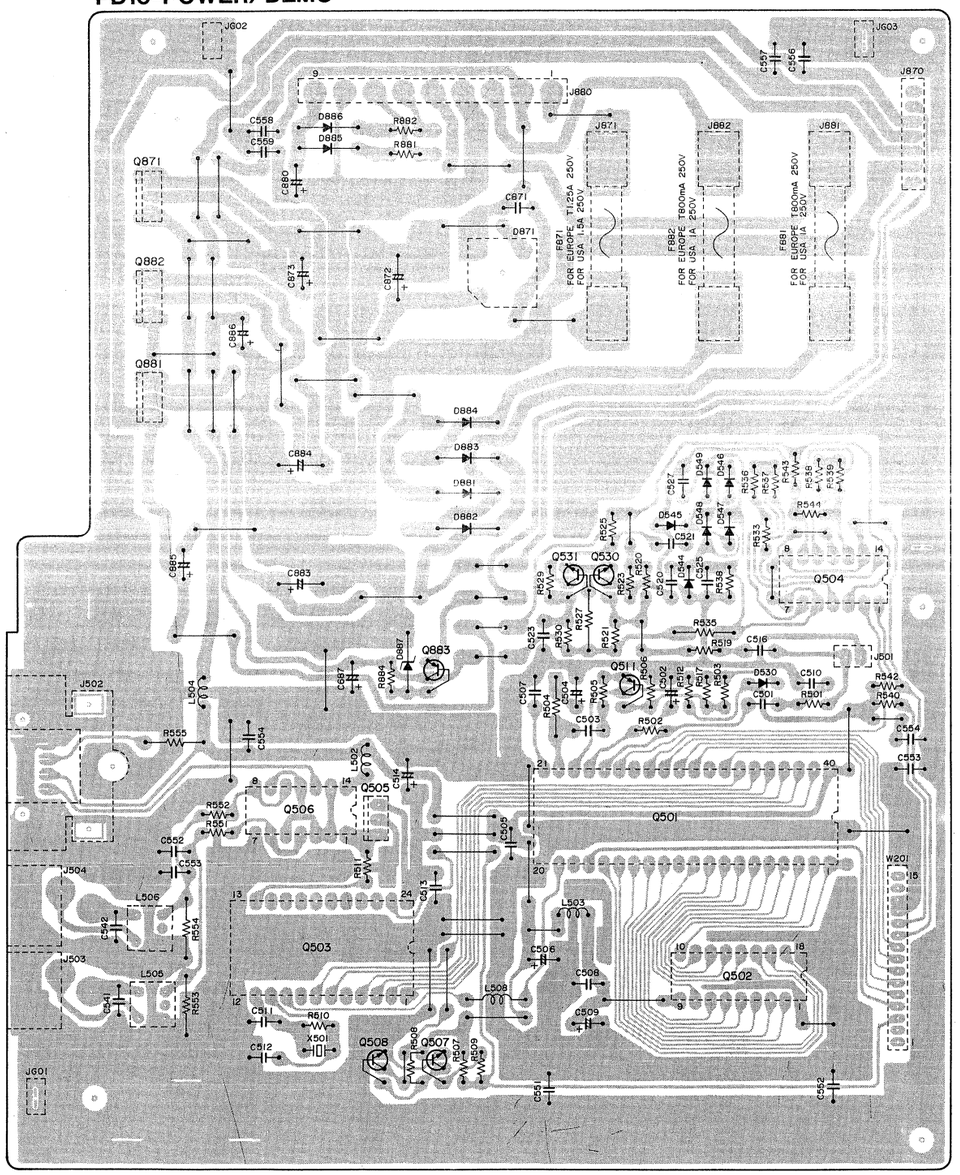

PV16-SERVO

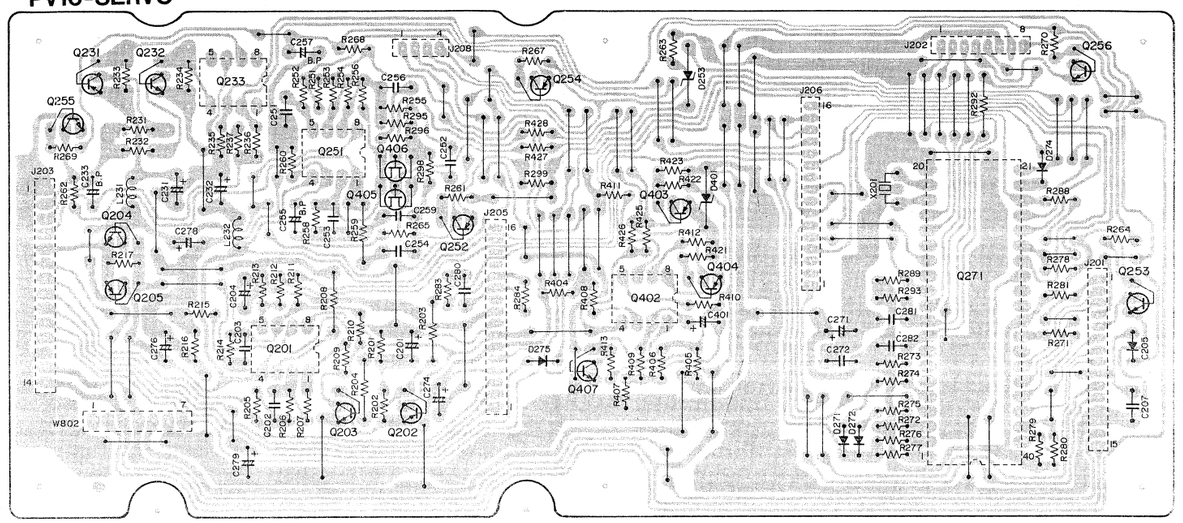

PS26-TEN KEYS

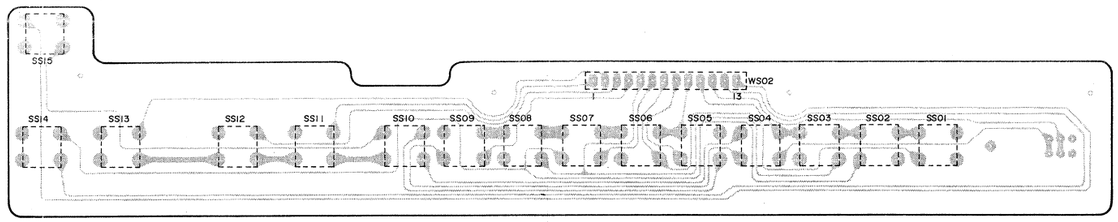

PP46-POWER SWITCH

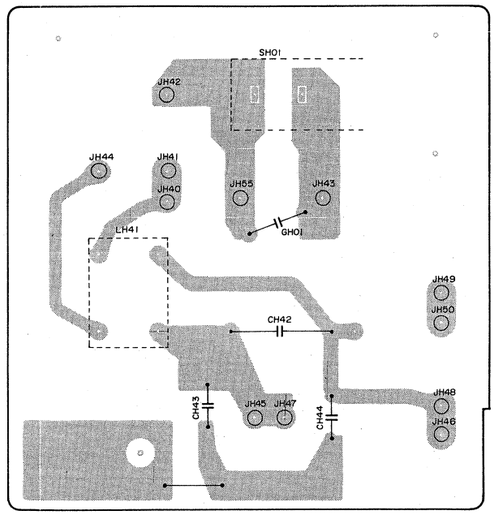

8. DA-12 PARTS LOCATIONS(Pattern Side)

PA16-AUDIO/DAC

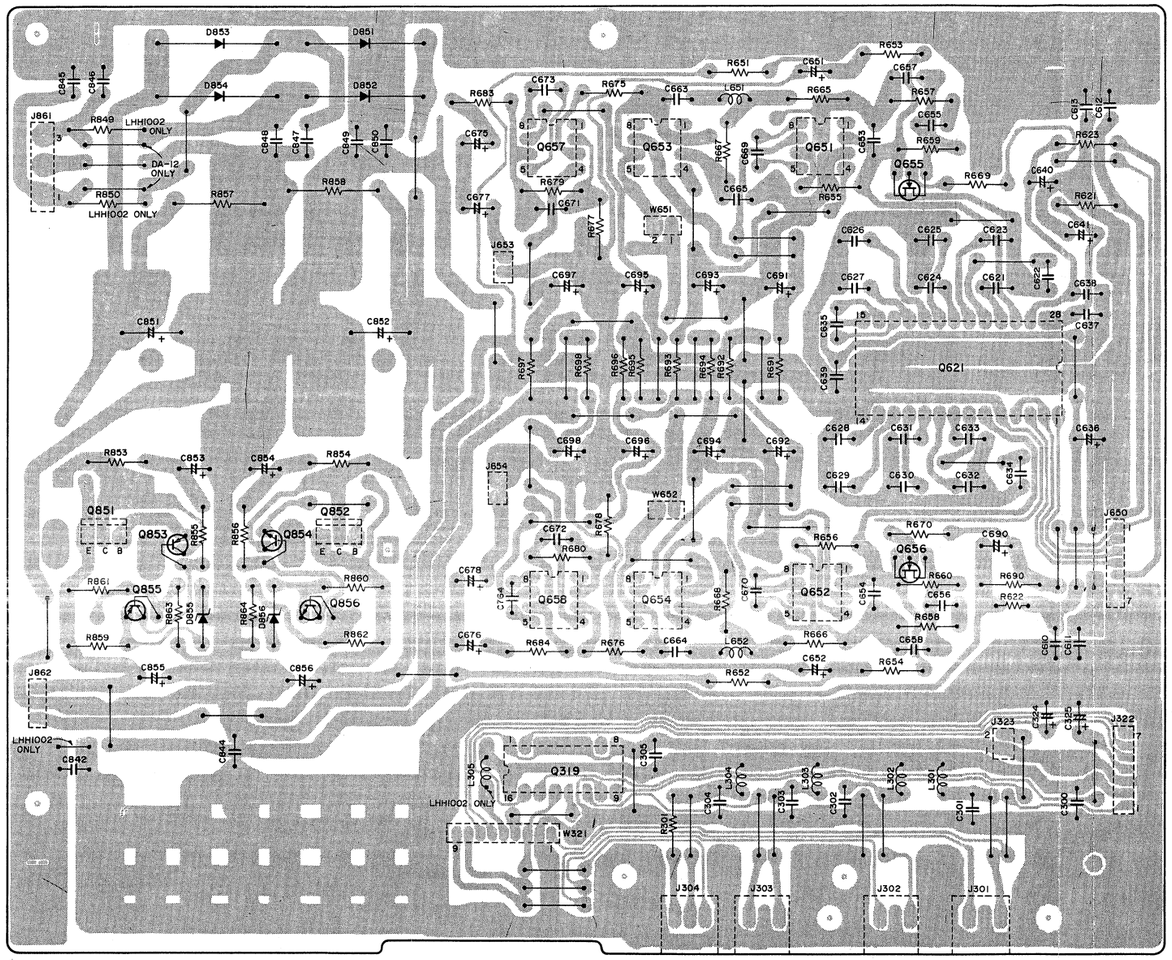

PP16-POWER SUPPLY

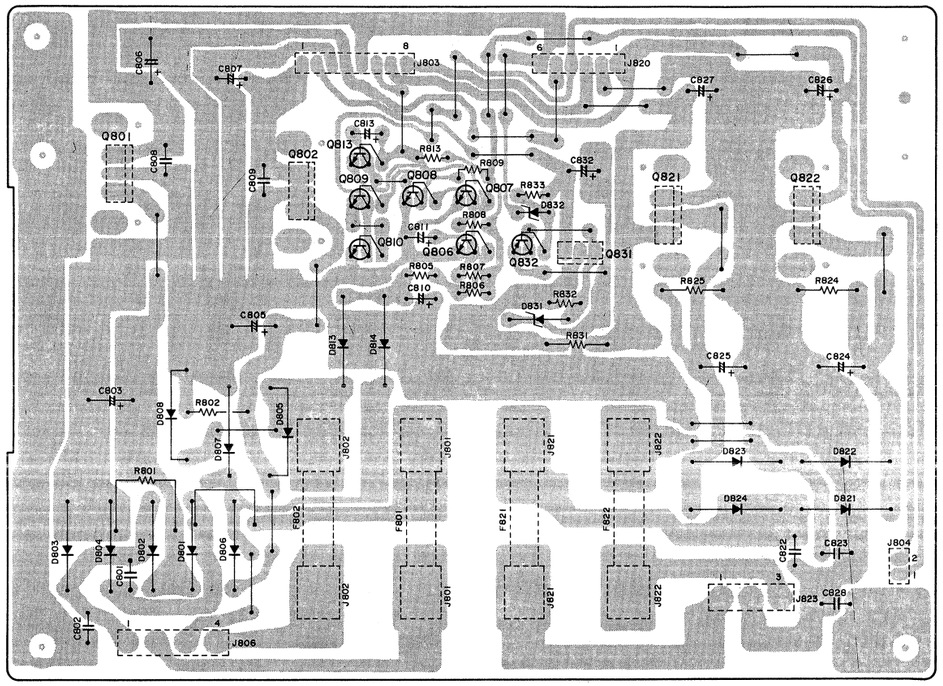

PD16-DEMO

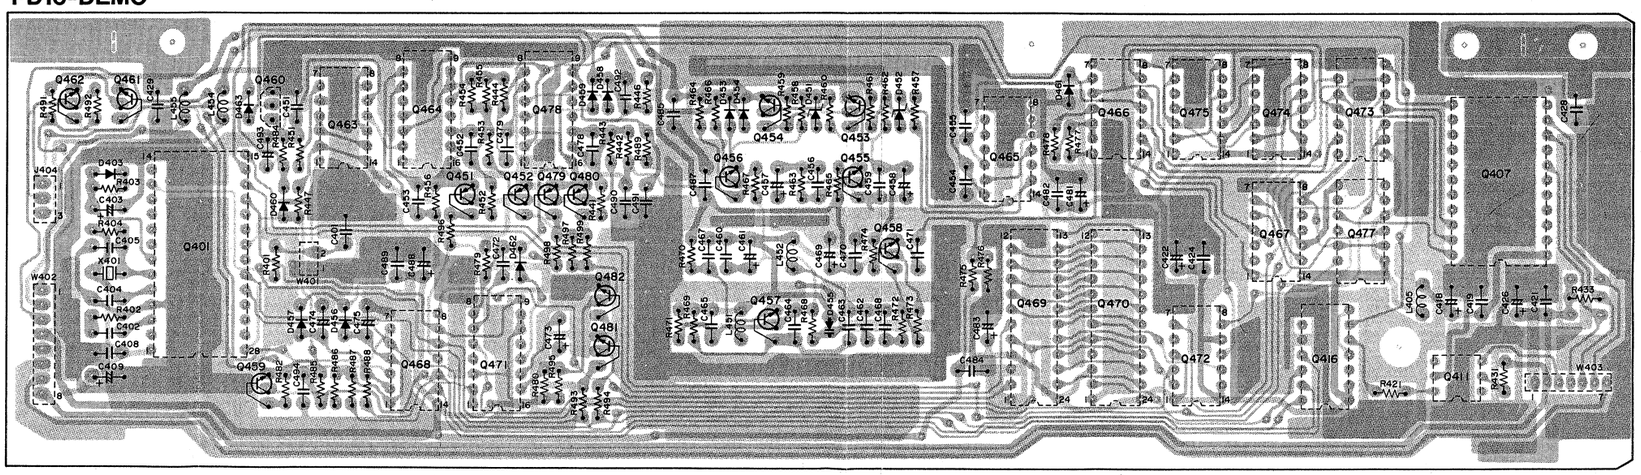

PA26-BALANCE AMP

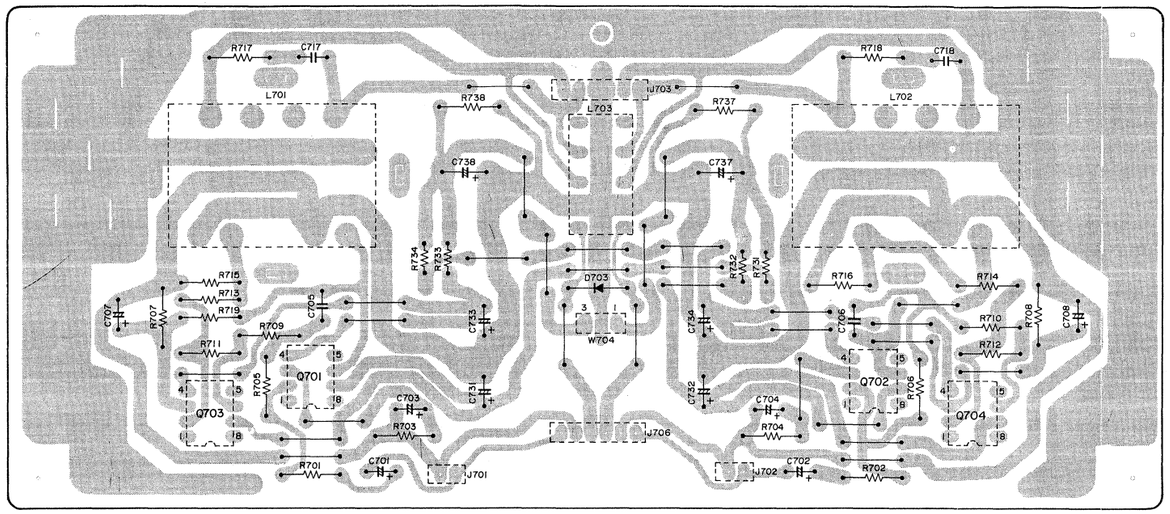

PP26-POWER SWITCH

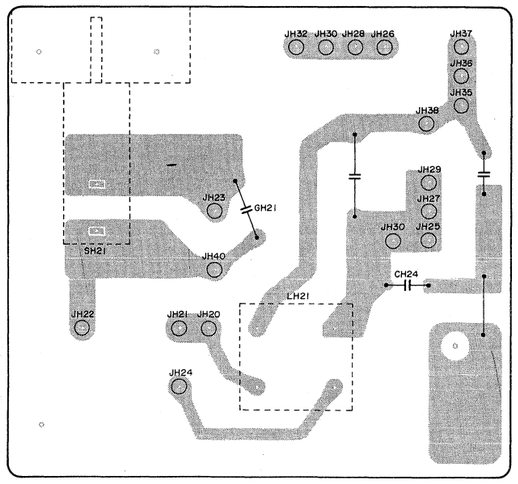

PJ16-DIGITAL IN/OUT JACK

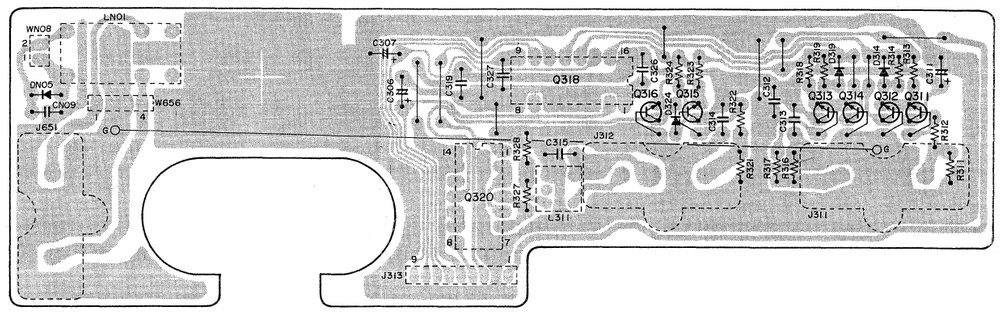

PL16-LAMP

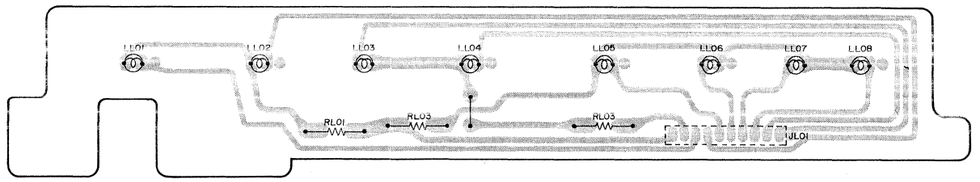

PS16-FUNCTION SWITCH/PHONE

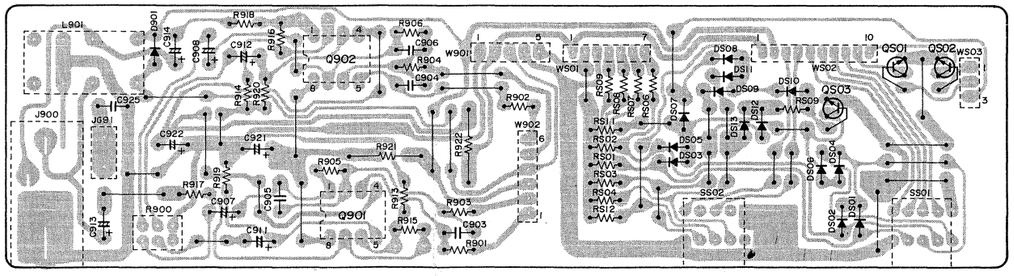

9. RC-12CD PARTS LOCATIONS(Pattern Side)

P506-MAIN

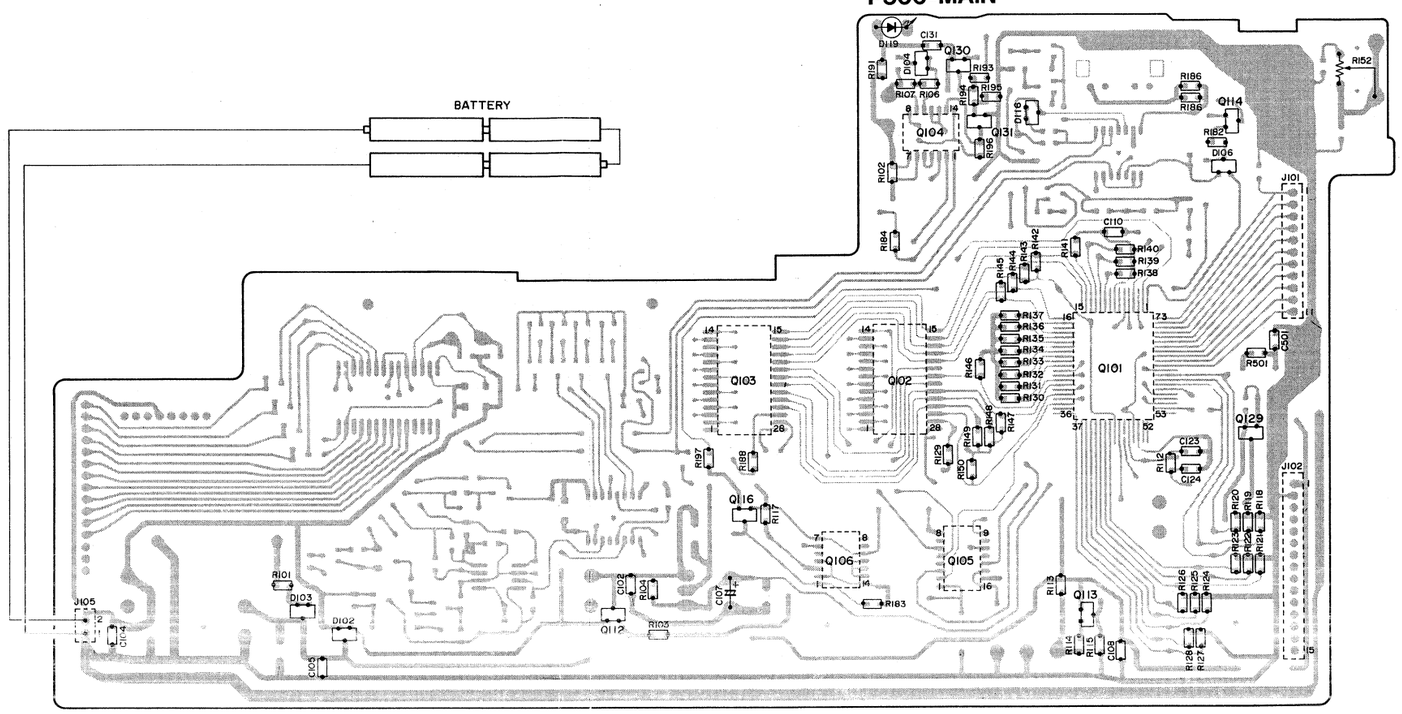

P606-KEY

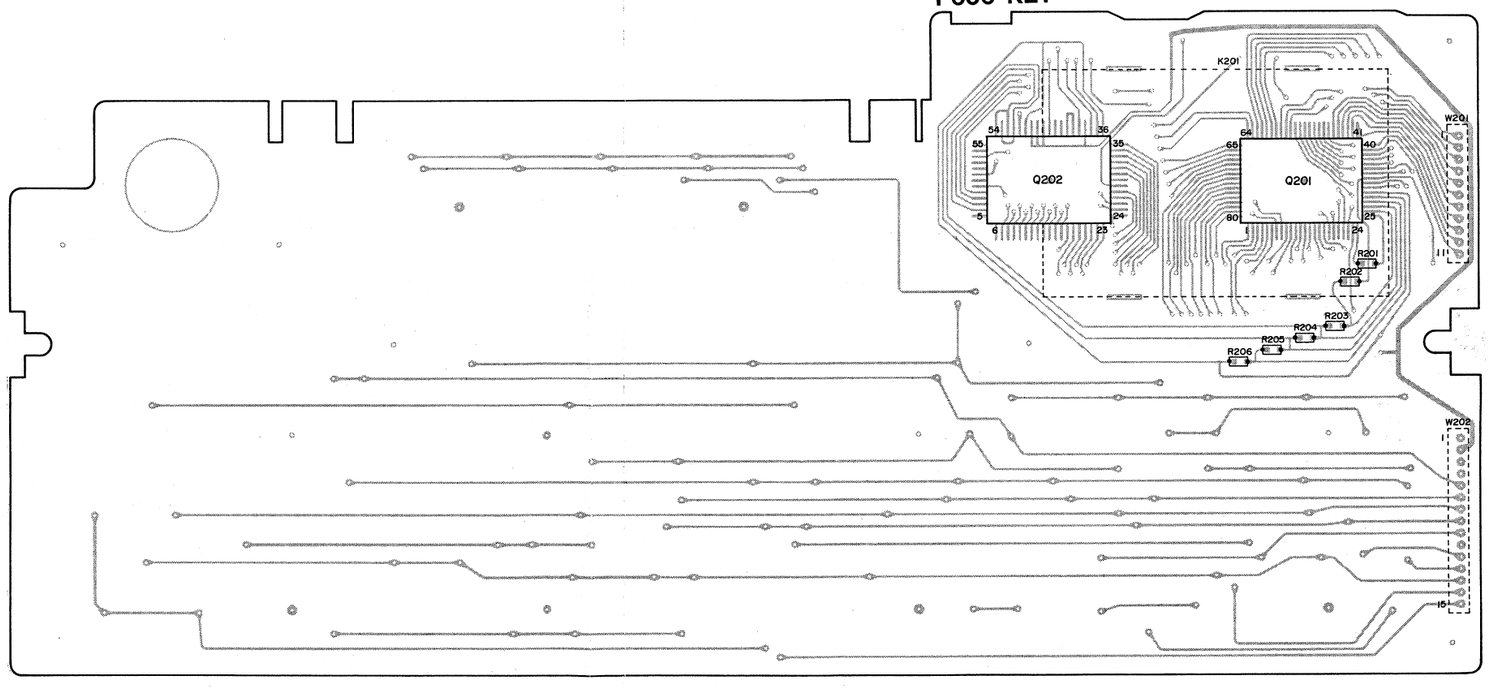

10. CD-12 EXPLODED VIEW AND PARTS LIST

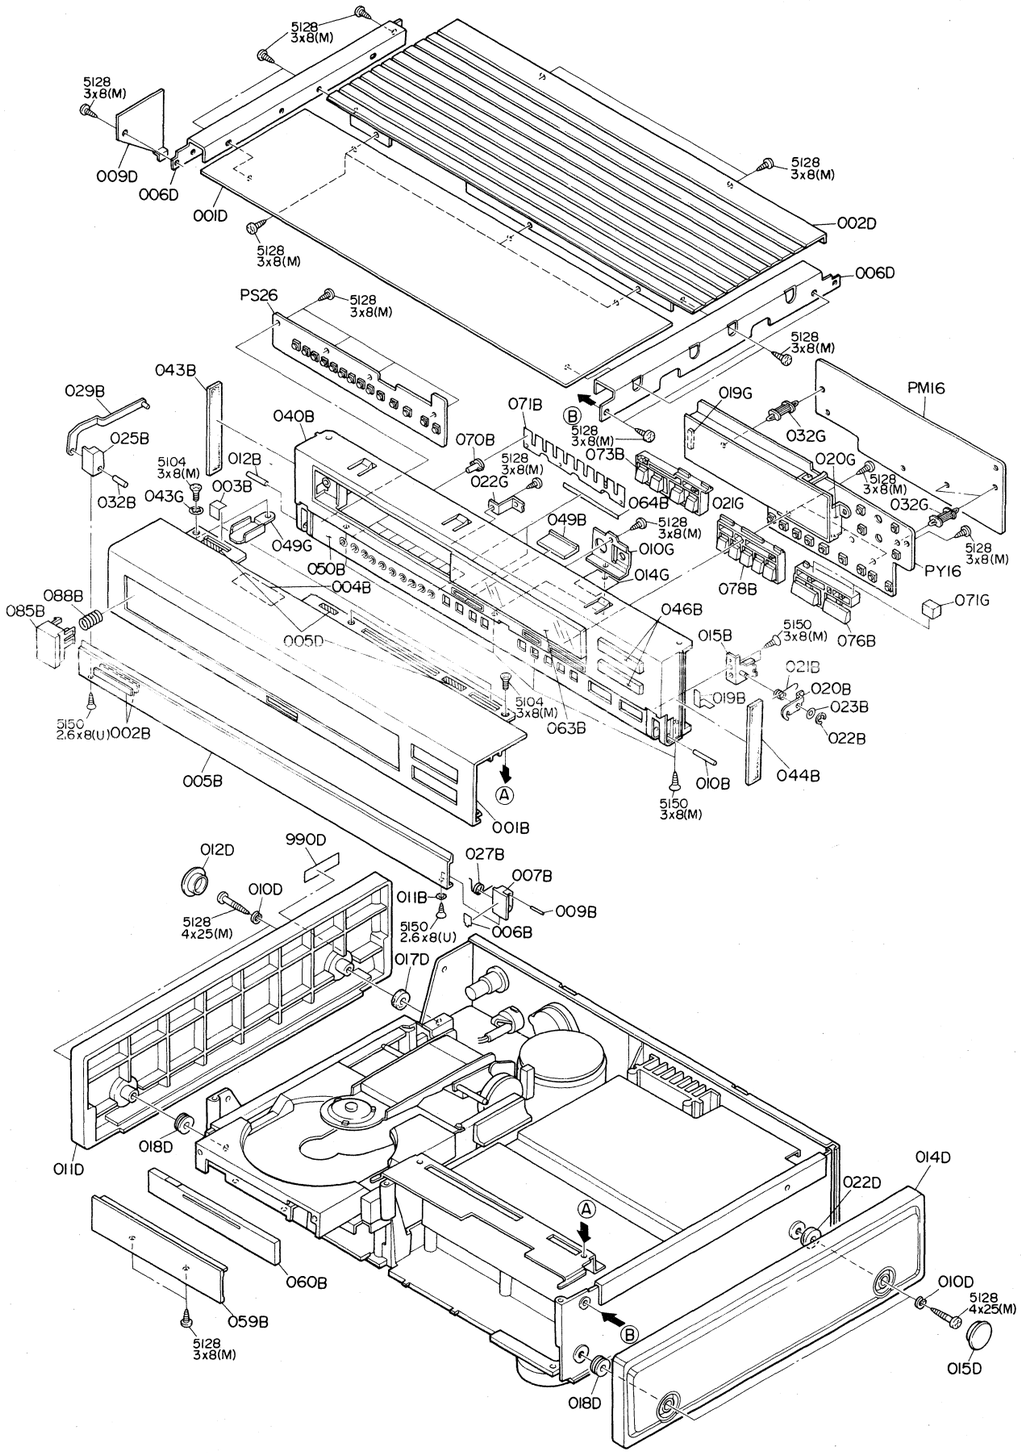

REF. DESIG.	PART NO.	DESCRIPTION
002B	4822 459 10855	Badge
003B	4822 532 52078	Spacer
007B	4822 417 11032	Hinge (R)
009B	4822 535 92367	Shaft, Lock
010B	4822 535 92368	Shaft, Hinge (R)
012B	4822 535 92368	Shaft, Hinge (L)
015B	4822 402 61225	Bracket (K), Lock Hook
020B	4822 402 61096	Hook, Lock
021B	4822 492 42171	Spring, Lock
022B	4822 532 11301	RG Ring, E Type ϕ2.5
023B	4822 532 52081	Washer
025B	4822 417 11033	Hinge (L)
027B	4822 492 42172	Spring, Open
029B	4822 402 50243	Joint
032B	4822 535 92369	Shaft
059B	4822 460 20758	Escutcheon, Drower
063B	4822 450 61315	Window
070B	4822 410 25892	Button, 10 Key
071B	4822 492 63757	Leaf Spring, Earth
073B	4822 410 25886	Button, Sel/Cancel
076B	4822 410 25884	Button, FF/REV
078B	4822 410 25885	Button, FTS/Pause
088B	4822 492 51927	Spring, Power SW.
001D	4822 444 50615	Lid, Top Cover; Front
002D	4822 444 30412	Lid, Top Cover; Rear
005D	4822 462 41094	Buffer
010D	4822 530 70385	Spring Washer
011D	4822 444 40285	Side Panel (L)
012D	4822 444 60607	Cap (L)
014D	4822 444 40285	Side Panel (R)
015D	4822 444 60607	Cap (R)
017D	4822 462 71578	Buffer
018D	4822 532 52077	Collar (K)
022D	4822 462 71578	Buffer
021G	4822 459 20545	Mask, FL
043G	4822 530 80311	RG Ring, CS Type ϕ3
071G	4822 462 41011	Buffer

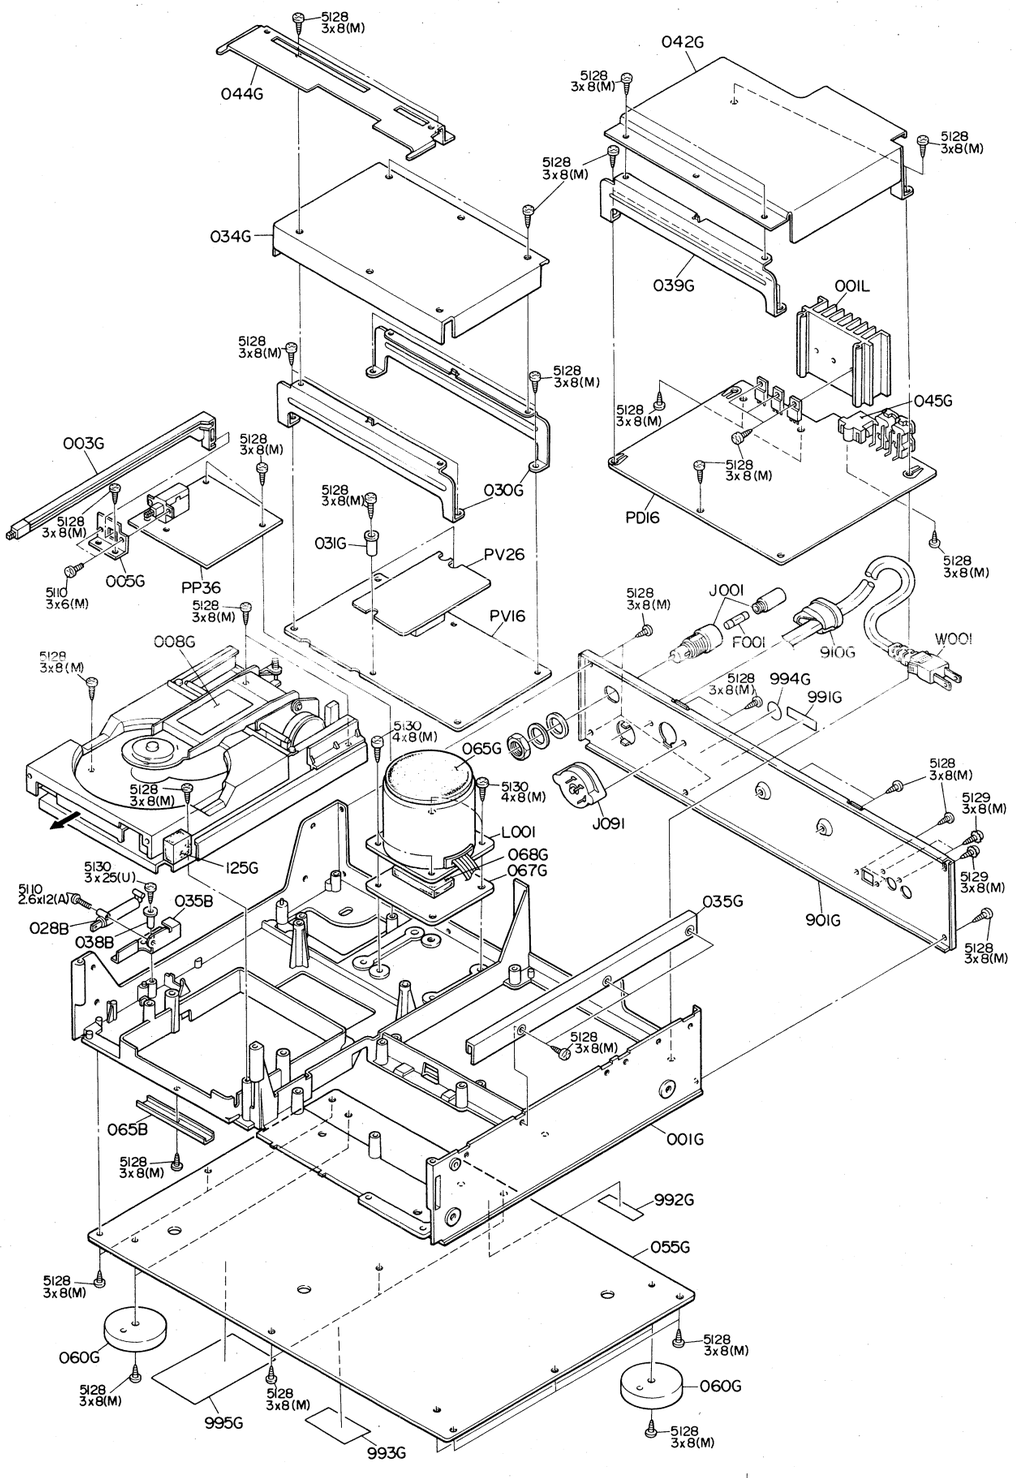

REF. DESIG.	PART NO.	DESCRIPTION
028B	4822 464 50493	Piston, Dumper
035B	4822 402 61229	Bracket, Dumper
038B	4822 417 11031	Support, Link
065B	4822 443 51101	Cover
003G	4822 402 50237	Link, Power Switch
045G	4822 256 91247	Holder, Optical
060G	4822 462 71577	Leg
⚠ F001	4822 253 30022	Fuse T1.25A 250V
⚠ J001	4822 256 30233	Jack, Fuse Holder
⚠ J091	4822 272 10236	Voltage Selector

Model CD-12

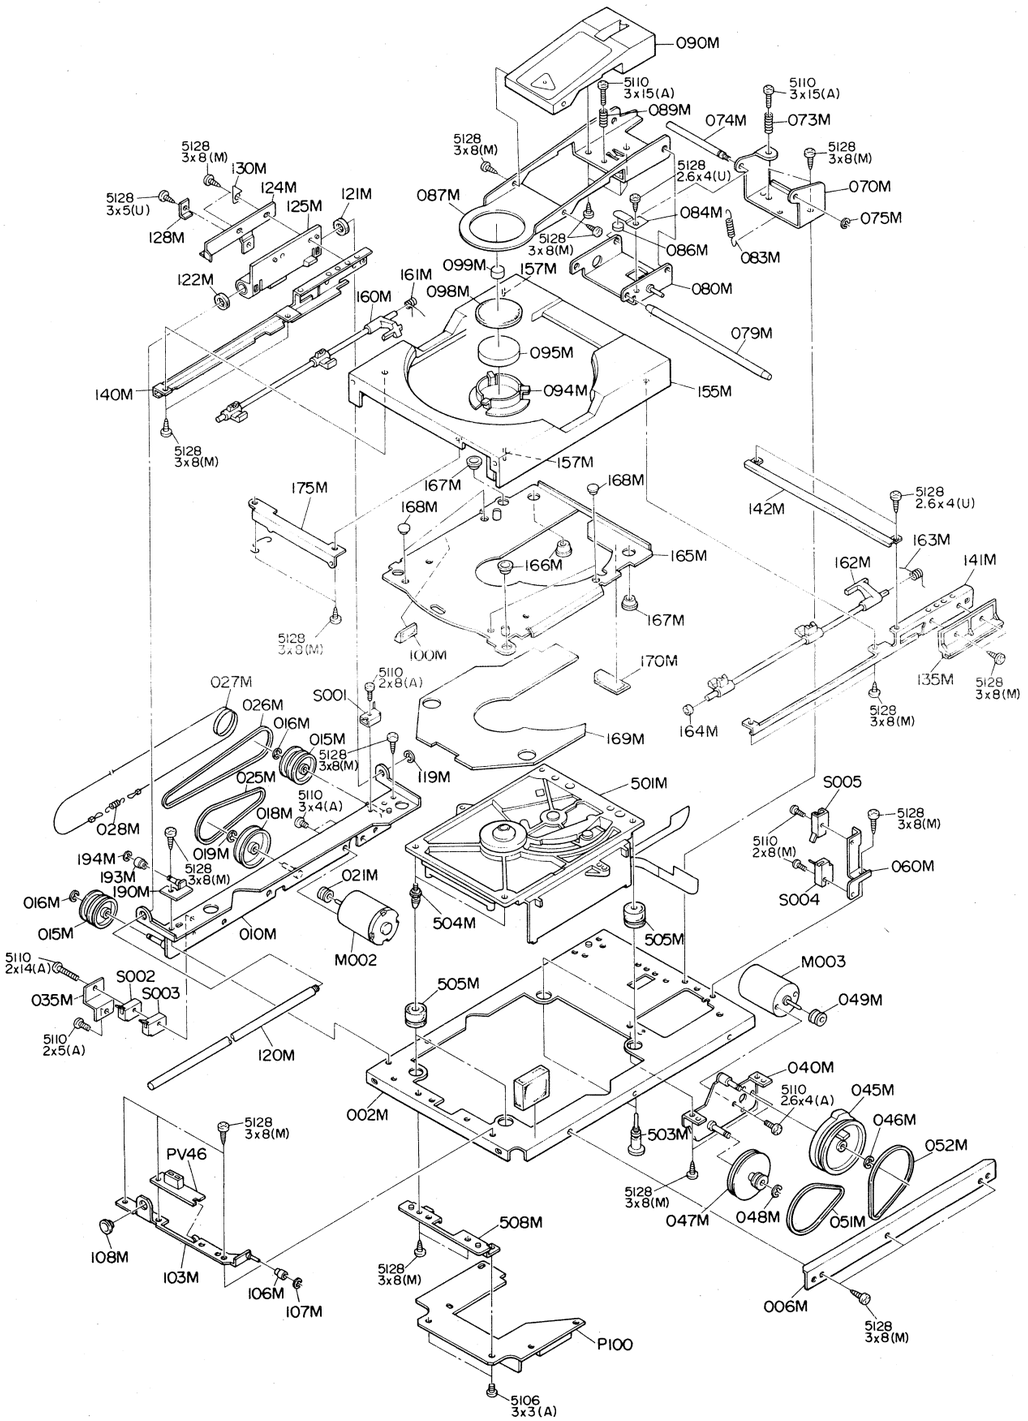

REF. DESIG.	PART NO.	DESCRIPTION
015M	4822 528 81163	Pulley, Wire
016M	4822 532 11301	RG Ring, E Type ϕ2.5
018M	4822 528 81238	Pulley, Tray Drive
019M	4822 532 11301	RG Ring, E Type ϕ2.5
021M	4822 528 81166	Pulley, Motor
025M	4822 358 30762	Belt, Motor
026M	4822 358 30903	Belt, Tray Drive
027M	4822 321 30338	Joint, Wire
028M	4822 492 32719	Spring
040M	4822 402 61228	Bracket (K), Motor
045M	4822 528 30331	Cam, Clamper Drive
046M	4822 532 11301	RG Ring, E Type ϕ2.5
047M	4822 528 81164	Pulley, Clamper Drive
048M	4822 532 11301	RG Ring, E Type ϕ2.5
049M	4822 528 81166	Pulley, Motor
051M	4822 358 30762	Belt, Motor
052M	4822 358 30763	Belt, Cam Drive
073M	4822 492 63706	Spring
074M	4822 535 92332	Shaft
075M	4822 532 11301	RG Ring, E Type ϕ2.5
079M	4822 535 92575	Shaft
083M	4822 492 63705	Spring
084M	4822 492 63709	Leaf Spring
086M	4822 466 61549	Buffer
087M	4822 402 30161	Lever, Clamper
089M	4822 492 63706	Spring
090M	4822 256 91378	Holder
094M	4822 402 61097	Clamper
106M	4822 528 90645	Roller
107M	4822 530 70119	RG Ring, E Type ϕ1.2
108M	4822 532 21323	Bushing
119M	4822 530 80307	RG Ring, E Type ϕ4
120M	4822 535 92331	Shaft, Tray Guide
121M	4822 466 61548	Buffer
122M	4822 462 71576	Buffer
160M	4822 402 61089	Lever, Tray Lift (L)
161M	4822 492 63707	Spring
162M	4822 402 61091	Lever, Tray Lift (R)
163M	4822 492 63708	Spring
164M	4822 532 11432	Washer
166M	4822 532 11697	Bushing, Tray Guide
167M	4822 532 21323	Bushing, Tray Guide
168M	4822 532 11698	Bushing, Disc Buffer
193M	4822 528 90645	Roller
194M	4822 530 70119	RG Ring, E Type ϕ1.2
501M	4822 691 30221	Mechanism Assembly, CDM-1
503M	4822 535 92574	Shaft
504M	4822 535 92577	Shaft
505M	4822 532 52076	Bushing
M002	4822 361 60467	D.C. Motor, Tray Drive
M003	4822 361 60447	D.C. Motor, Clamper Drive
S001	4822 277 21132	Slide Switch, Tray IN
S002	4822 277 21132	Slide Switch, Tray OUT
S003	4822 277 21132	Slide Switch, Push IN
S004	4822 277 21132	Slide Switch, Clamper Down
S005	4822 277 21132	Slide Switch, Clamper Up

Model CD-12

11. CD-12 ELECTRICAL PARTS LIST

ASSIGNMENT OF COMMON PARTS CODES.

RESISTOR

R***: (1) GD05 --- 140, Carbon film fixed resistor, ±5%, 1/4W
R***: (2) GD05 --- 160, Carbon film fixed resistor, ±5%, 1/6W
① — Resistance value

Examples
① Resistance value

0.1Ω...001	10Ω...100	1kΩ...102	100kΩ...104
0.5Ω...005	18Ω...180	2.7kΩ...272	680kΩ...684
1Ω...010	100Ω...101	10kΩ...103	1MkΩ...105
6.8Ω...068	390Ω...391	22kΩ...223	4.7MkΩ...475

(Note) Please distinguish 1/4W from 1/6W by the shape of parts used actually.

C***: CERAMIC CAP.
(1) DD1 --- 370, Ceramic condenser
①② Disc type
Temp. coeff. P350 ~ N1000, 50V
Capacity value
Tolerance

Examples
① Tolerance (Capacity deviation)
±0.25pF...0
±0.5pF...1
±5%...5
* Tolerance of COMMON PARTS handled here are as follows:
0.5pF ~ 5pF...±0.25pF
6pF ~ 10pF...±0.5pF
12pF ~ 560pF...±5%
② Capacity value

0.5pF...005	3pF...030	100pF...101	
1pF...010	10pF...100	220pF...221	
1.5pF...015	47pF...470	560pF...561	

C***: CERAMIC CAP.
(1) DK16 --- 300, High dielectric constant ceramic condenser
① Disc type
Temp. chara. 2B4, 50V
Capacity value

Example
② Capacity value

100pF...101	1000pF...102	10000pF...103
470pF...471	2200pF...222	

C***: ELECTROLY CAP. (⧺), FILM CAP. (⧻)
(1) EA ------ 10, Electrolytic condenser
①② One-way lead type, Tolerance ±20%
Dielectric strength
Capacity value

Examples
① Capacity value

0.1μF...104	4.7μF...475	100μF...107
0.33μF...334	10μF...106	330μF...337
1μF...105	22μF...226	1100μF...108
		2200μF...228

② Working voltage

6.3V...006	25V...025	
10V...010	35V...035	
16V...016	50V...050	

(2) DF15 --- 350, Plastic film condenser
① One-way type, Mylar ±5% 50V
Capacity value

Examples
① Capacity value

0.001μF (1000pF)...102	0.1μF...104
0.0018μF...182	0.56μF...564
0.01μF...103	1μF...105
0.015μF...153	

REF. DESIG.	PART NO.	DESCRIPTION
		PD16-POWER/DEMO CIRCUIT BOARD
		PD16-CAPACITORS
C504	4822 124 22289	Elect 6.8μF 50V
C505	4822 122 40617	Ceramic 0.1μF +80% −20%
C508	4822 122 40617	Ceramic 0.1μF +80% −20%
C511	4822 122 40528	Ceramic 27pF ±5%
C512	4822 122 40528	Ceramic 27pF ±5%
C513	4822 122 40617	Ceramic 0.1μF +80% −20%
C520	4822 121 42327	Film 470pF ±5%
C521	4822 121 42327	Film 470pF ±5%
C541	4822 122 40491	Ceramic 0.022μF +80% −20%
C542	4822 122 40491	Ceramic 0.022μF +80% −20%
C551	4822 122 40491	Ceramic 0.022μF +80% −20%
C555 ~ C559	4822 122 40491	Ceramic 0.022μF +80% −20%
⚠C872	4822 124 22243	Elect 6800μF 16V
⚠C883	4822 124 22239	Elect 3300μF 25V
⚠C884	4822 124 22239	Elect 3300μF 25V
		PD16-SEMICONDUCTORS
D530	4822 130 80302	Varistor MA27A
D544 ~ D549	4822 130 33305	Diode 1SS133, etc.
⚠D871	4822 130 80907	Diode S2VB20
⚠D881 ~ ⚠D886	4822 130 32508	Diode RL103E, etc.
Q501	4822 209 71001	IC SAA7210
Q502	4822 209 70422	IC μPD41416C-20
Q503	4822 209 72545	IC SAA7220A
Q504	4822 209 83641	IC IR2339
Q506	4822 209 72323	IC 74HC004
Q507	4822 130 42052	Transistor 2SC2785(FF, EF)
Q508	4822 130 42052	Transistor 2SC2785(FF, EF)
Q511	4822 130 61438	Transistor 2SA1005(K, L)
Q530	4822 130 42052	Transistor 2SC2785(FF, EF)
Q531	4822 130 42052	Transistor 2SC2785(FF, EF)
⚠Q871	4822 209 83824	IC NJM7805FA
⚠Q881	4822 209 70084	IC NJM7812FA
⚠Q882	4822 209 73954	IC NJM7912FA
⚠Q883	4822 130 60353	Transistor 2SA1358(O, Y)
		PD16-MISCELLANEOUS
⚠F871	4822 253 30022	Fuse T1.25A 250V
⚠F881	4822 253 20017	Fuse T800mA 250V
⚠F882	4822 253 20017	Fuse T800mA 250V
JG01	4822 290 40296	Terminal, Earth
JG02	4822 290 40296	Terminal, Earth
JG03	4822 290 40296	Terminal, Earth
J501	4822 265 20289	Plug, 2P
J502	4822 321 22588	Jack, Optical
J503	4822 265 20354	Terminal, 1P; RCA
J504	4822 265 20354	Terminal, 1P; RCA

REF. DESIG.	PART NO.	DESCRIPTION
J871	4822 256 30239	Jack, Fuse Holder
J880	4822 265 40604	Plug, 9P
J881	4822 256 30239	Jack, Fuse Holder
J882	4822 256 30239	Jack, Fuse Holder
L505	4822 142 60388	Pulse Transformer
L506	4822 142 60388	Pulse Transformer
X501	4822 242 72395	Crystal 11.2896MHz
		PM16-FEATURE μ-COM CIRCUIT BOARD
		PM16-CAPACITORS
CF11	4822 122 32703	Ceramic 330pF ±10%, Chip
CF12	4822 122 33117	Ceramic 330pF ±5%, Chip
CF13	4822 122 32703	Ceramic 330pF ±10%, Chip
CF14	4822 122 32669	Ceramic 0.047μF +80% −20%
CF21 ~ CF29	4822 122 32703	Ceramic 330pF ±10%, Chip
CF38 ~ CF43	4822 122 32703	Ceramic 330pF ±10%, Chip
CF51	4822 122 40306	Ceramic 0.047μF +80% −20%
CF61 ~ CF67	4822 122 32703	Ceramic 330pF ±10%, Chip
CF85	4822 122 32703	Ceramic 330pF ±10%, Chip
CF87 ~ CF91	4822 133 32703	Ceramic 330pF ±10%, Chip
		PM16-RESISTORS, CHIP (All Resistors are ±5% and 1/10W)
RF14	4822 111 90895	10KΩ
RF15	4822 111 90895	10KΩ
RF16	4822 111 90895	10KΩ
RF19	4822 111 90895	10KΩ
RF20	4822 111 90895	10KΩ
RF21	4822 111 90896	100KΩ
RF22	4822 111 90896	100KΩ
RF26	4822 111 90894	1KΩ
RF27	4822 111 91414	10Ω
RF28	4822 111 90906	2.2KΩ
RF29	4822 111 91414	10Ω
RF30	4822 111 90894	1KΩ
RF32	4822 111 90918	4.7KΩ
RF33	4822 111 90918	4.7KΩ
RF51	4822 111 91139	6.8KΩ
		PM16-SEMICONDUCTORS
DF03	4822 130 43408	Diode MA151WK, Chip
DF05	4822 130 43408	Diode MA151WK, Chip
DF51	4822 130 33948	Zener 5.6V
DM01	4822 130 80346	Zener 8.2V, Chip
DM02	4822 130 80346	Zener 8.2V, Chip
QF01	4822 209 11497	IC MSM83C154
QF02	4822 209 11496	IC MSM80C51
QF03	4822 209 51273	IC MSM2816A
QF07	4822 130 60712	Transistor UN2214, Digital
QF08	4822 130 60712	Transistor UN2214, Digital
QF10	4822 130 60713	Transistor UN2214, Digital
QF11	4822 209 73949	IC PST524D

REF. DESIG.	PART NO.	DESCRIPTION
QM01	4822 209 83803	IC LB1645N
QM02	4822 209 83803	IC LB1645N
QM03	4822 130 60712	Transistor UN2214, Digital
		PM16-MISCELLANEOUS
JF10	4822 265 10117	Plug, 5P
JF21	4822 265 10158	Plug, 2P
LM01	4822 156 10676	Choke Coil 47μF
W202	4822 321 22412	Connective Cord, 7P
XF01	4822 242 71781	Ceramic Viblator 12.0MHz
XF02	4822 242 71781	Ceramic Viblator 12.0MHz
		PP46-POWER SWITCH CIRCUIT BOARD
⚠GH01	4822 122 40305	Ceramic Cap. 0.01μF 400V
⚠SH01	4822 276 11141	Push Switch, Power
		PS26-TEN KEYS CIRCUIT BOARD
SS01 ~ SS15	4822 276 11559	Push Switch
		PV16-SERVO CIRCUIT BOARD
		PV16-CAPACITORS
C201	4822 124 90357	Elect 2.2μF 50V
C257	4822 124 40464	Elect 4.7μF 35V (BP)
C282	4822 122 40491	Ceramic 0.022μF +80% −20%
		PV16-RESISTORS
R211	4822 116 80256	5.62MΩ ±1% 1/6W
R212	4822 116 80256	5.62MΩ ±1% 1/6W
R231	4822 111 41271	10Ω ±5% ¼W
R232	4822 111 41271	10Ω ±5% ¼W
R233	4822 116 53696	120Ω ±5% ¼W, Fusible
R234	4822 116 53696	120Ω ±5% ¼W, Fusible
R254	4822 116 80261	91KΩ ±1% 1/6W
R274	4822 116 80252	13KΩ ±1% 1/6W
R275	4822 116 80261	90.9KΩ ±1% 1/6W
R277	4822 116 80255	357KΩ ±1% 1/6W
		PV16-SEMICONDUCTORS
D205	4822 130 33305	Diode 1SS133, etc.
D253	4822 130 32191	Zener RD7.5E-B3
D271	4822 130 33305	Diode 1SS133, etc.
D272	4822 130 33305	Diode 1SS133, etc.
D274	4822 130 33305	Diode 1SS133, etc.
D275	4822 130 33305	Diode 1SS133, etc.
D401	4822 130 32366	Zener 5.6V
Q201	4822 209 80401	IC NJM4558D
Q202	4822 130 42591	Transistor 2SA1175(FF, EF)
Q203	4822 130 42052	Transistor 2SC2785(FF, EF)
Q204	4822 130 60354	Transistor 2SC3421(O, Y)
Q205	4822 130 60353	Transistor 2SA1358(O, Y)
Q231	4822 130 60353	Transistor 2SA1358(O, Y)
Q232	4822 130 60354	Transistor 2SC3421(O, Y)
Q233	4822 209 83643	IC IR3741
Q251	4822 209 80401	IC NJM4558D
Q252	4822 130 42591	Transistor 2SA1175(FF, EF)

REF. DESIG.	PART NO.	DESCRIPTION
Q253	4822 130 42052	Transistor 2SC2785(FF, EF)
Q254	4822 130 42591	Transistor 2SA1175(FF, EF)
Q255	4822 130 42052	Transistor 2SA1175(FF, EF)
Q256	4822 130 42052	Transistor 2SA1175(FF, EF)
Q271	4822 209 71674	IC 80C51
Q402	4822 209 80401	IC NJM4558D
Q403	4822 130 42591	Transistor 2SA1175(FF, EF)
Q404	4822 130 42591	Transistor 2SA1175(FF, EF)
Q405	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q406	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q407	4822 130 61441	Transistor 2SD1862(Q, R)
		PV16-MISCELLANEOUS
J203	4822 265 40772	Plug, 14P
J205	4822 265 40773	Plug, 16P
J206	4822 265 40773	Plug, 16P
J208	4822 267 30894	Jack, 4P
L231	4822 157 53801	Choke Coil 47μF
L232	4822 157 53801	Choke Coil 47μF
X201	4822 242 71781	Ceramic Viblator 12MHz
		PV26-SERVO MODULE CIRCUIT BOARD
		PV26-CAPACITORS
C305	4822 121 42985	Film 5600pF ±2%
C306	4822 121 42985	Film 5600pF ±2%
C308	4822 122 33084	Ceramic 390pF ±5%
C310	4822 121 42987	Film 680pF ±2%
C316	4822 122 32904	Ceramic 0.1μF ±10%
		PV26-RESISTORS, CHIP (All Resistors are ±5% and 1/10W)
R300	4822 111 90883	10KΩ ±1%
R301	4822 111 90883	10KΩ ±1%
R302	4822 111 90885	2.7KΩ ±1%
R303	4822 111 91365	470Ω ±1%
R304	4822 111 90906	2.2KΩ
R306	4822 111 90883	10KΩ ±1%
R307	4822 111 90883	10KΩ ±1%
R308	4822 111 90885	2.7KΩ ±1%
R309	4822 111 91365	470Ω ±1%
R310	4822 111 90906	2.2KΩ
R311	4822 111 90895	10KΩ
R312	4822 111 90895	10KΩ
R313	4822 111 90925	68KΩ
R314	4822 111 90919	47KΩ
R315	4822 111 90919	47KΩ
R316	4822 111 90918	4.7KΩ
R317	4822 111 90919	47KΩ
R318	4822 111 90925	68KΩ
R320	4822 111 91366	5.6KΩ ±1%
R321	4822 111 91355	13KΩ ±1%
R323	4822 111 91361	330KΩ ±1%
R324	4822 111 90916	3.9KΩ
R325	4822 111 91369	1.5KΩ
R326	4822 111 90907	22KΩ
R327	4822 111 90907	22KΩ
R328	4822 111 90923	56KΩ
R329	4822 111 90923	56KΩ
R330	4822 111 91192	470Ω
R331	4822 111 91192	470Ω
R332	4822 111 91372	820Ω

REF. DESIG.	PART NO.	DESCRIPTION
R333	4822 111 91369	1.5KΩ
R334	4822 111 91192	470Ω
R335	4822 111 91373	82KΩ
R336	4822 111 90925	68KΩ
R337	4822 111 91356	130KΩ ±1%
R338	4822 111 90923	56KΩ
R339	4822 111 90907	22KΩ
R340	4822 111 90896	100KΩ
R341	4822 111 91371	470KΩ
R342	4822 111 90895	10KΩ
R343	4822 111 90918	4.7KΩ
R345	4822 111 90918	4.7KΩ
R346	4822 111 91371	470KΩ
R347	4822 111 90896	100KΩ
R348	4822 111 90913	33KΩ
R349	4822 111 90926	8.2KΩ
R351	4822 111 90926	8.2KΩ
R352	4822 111 90925	68KΩ
R355	4822 111 90923	56KΩ
R356	4822 111 91358	24KΩ ±1%
R357	4822 111 90897	1MΩ
R358	4822 111 91363	360KΩ ±1%
R359	4822 111 90907	22KΩ
R360	4822 111 90887	6.8KΩ ±1%
R361	4822 111 90887	6.8KΩ ±1%
R362	4822 111 90889	82KΩ ±1%
R363	4822 111 90889	82KΩ ±1%
R364	4822 111 90918	4.7KΩ
R365	4822 111 90895	10KΩ
R366	4822 111 91371	470KΩ
R367	4822 111 90913	33KΩ
R368	4822 111 90895	10KΩ
R369	4822 111 90918	4.7KΩ
R370	4822 111 91362	36KΩ ±1%
R371	4822 111 91364	3.9KΩ ±1%
R372	4822 111 91363	360KΩ ±1%
R373	4822 111 90909	2.7KΩ
R374	4822 111 90896	100KΩ
R375	4822 111 90918	4.7KΩ
R376	4822 111 90913	33KΩ
R379	4822 111 90911	27KΩ
R380	4822 111 90918	4.7KΩ
R381	4822 111 90925	68KΩ
R382	4822 111 90918	4.7KΩ
R385	4822 111 91359	27KΩ ±1%
R386	4822 111 91357	180KΩ ±1%
R387	4822 111 90919	47KΩ
R388	4822 111 90919	47KΩ
R389	4822 111 90896	100KΩ
R390	4822 111 91367	75KΩ ±1%
R391	4822 111 91367	75KΩ ±1%
R393	4822 111 91361	330KΩ ±1%
R394	4822 111 90908	220KΩ
R395	4822 111 90896	100KΩ
R396	4822 111 91368	120KΩ
R397	4822 111 90919	47KΩ
R398	4822 111 90919	47KΩ

REF. DESIG.	PART NO.	DESCRIPTION
		PV26-SEMICONDUCTORS
D301	4822 130 80274	Zener 2.4V, Chip
D302	4822 130 43408	Diode MA151WK, Chip
D303	4822 130 43408	Diode MA151WK, Chip
D304	4822 130 32868	Diode MA153, Chip
D305	4822 130 32955	Zener 5.1V, Chip
D306	4822 130 32635	Diode MA151K, Chip
Q301	4822 209 71675	IC NJM2902M
Q302	4822 209 71675	IC NJM2902M
Q303	4822 209 71675	IC NJM2902M
Q304	4822 209 71676	IC NJM2901M
Q305	4822 209 11607	IC 4030
Q306	4822 209 83368	IC 4053
Q307	4822 209 71451	IC NJM4558M
Q308	4822 130 60658	Transistor 2SC2351, Chip
Q309	4822 209 83363	IC FMW1
Q311	4822 209 83363	IC FMW1
Q312	4822 130 42733	Transistor 2SA1162(G), Chip
Q314	4822 130 60656	Transistor UN2210, Digital
Q315	4822 130 43398	Transistor 2SC2712(GR), Chip
Q316	4822 130 60657	Transistor 2SC1009, Chip
Q317	4822 130 60657	Transistor 2SC1009, Chip
Q318	4822 130 60656	Transistor UN2210, Digital
		PV26-MISCELLANEOUS
J301	4822 267 50871	Jack, 4P
J302	4822 267 50871	Jack, 16P
		PY16-DISPLAY CIRCUIT BOARD
		PY16-CAPACITORS
CY02	4822 122 32669	Ceramic 0.047μF +80% −20%, Chip
CY04	4822 122 32693	Ceramic 33pF ±5%, Chip
CY05	4822 133 32693	Ceramic 33pF ±5%, Chip
CY07 ~ CY14	4822 122 32697	Ceramic 2200pF ±10%, Chip
		PY16-RESISTORS, CHIP (All Resistors are ±5% and 1/10W)
RY01 ~ RY05	4822 111 90901	150KΩ
RY06 ~ RY13	4822 111 90895	10KΩ
RY16	4822 111 90922	5.6KΩ
RY17	4822 111 90922	5.6KΩ
RY18	4822 111 90922	5.6KΩ
RY19	4822 111 91139	6.8KΩ
RY20	4822 111 90922	5.6KΩ
RY21	4822 111 90922	5.6KΩ
		PY16-SEMICONDUCTORS
DY01 ~ DY05	4822 130 32635	Diode MA151K, Chip
QY01	4822 209 71677	IC LC6554D
QY02 ~ QY06	4822 130 42731	Transistor UN2114, Chip
QY15	4822 209 73951	IC PST523D

REF. DESIG.	PART NO.	DESCRIPTION
		PY16-MISCELLANEOUS
SY01	4822 276 11559	Push Switch, Stop
SY02	4822 276 11559	Push Switch, Pause
SY03	4822 276 11559	Push Switch, Play
SY05	4822 276 11559	Push Switch, PREV
SY06	4822 276 11559	Push Switch, NEXT
SY07	4822 276 11559	Push Switch, FTS
SY08	4822 276 11559	Push Switch, Time
SY10	4822 276 11559	Push Switch, A B
SY11	4822 276 11559	Push Switch, Repeat
SY13	4822 276 11559	Push Switch, Revers
SY14	4822 276 11559	Push Switch, FF
SY15	4822 276 11559	Push Switch, Previous
SY16	4822 276 11559	Push Switch, Next
VY01	4822 130 90441	Display Unit
XY01	4822 242 71495	Ceramic Viblator 3MHz
ZY01	4822 130 81183	Photo Unit

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol ⚠ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

12. DA-12 EXPLODED VIEW AND PARTS LIST

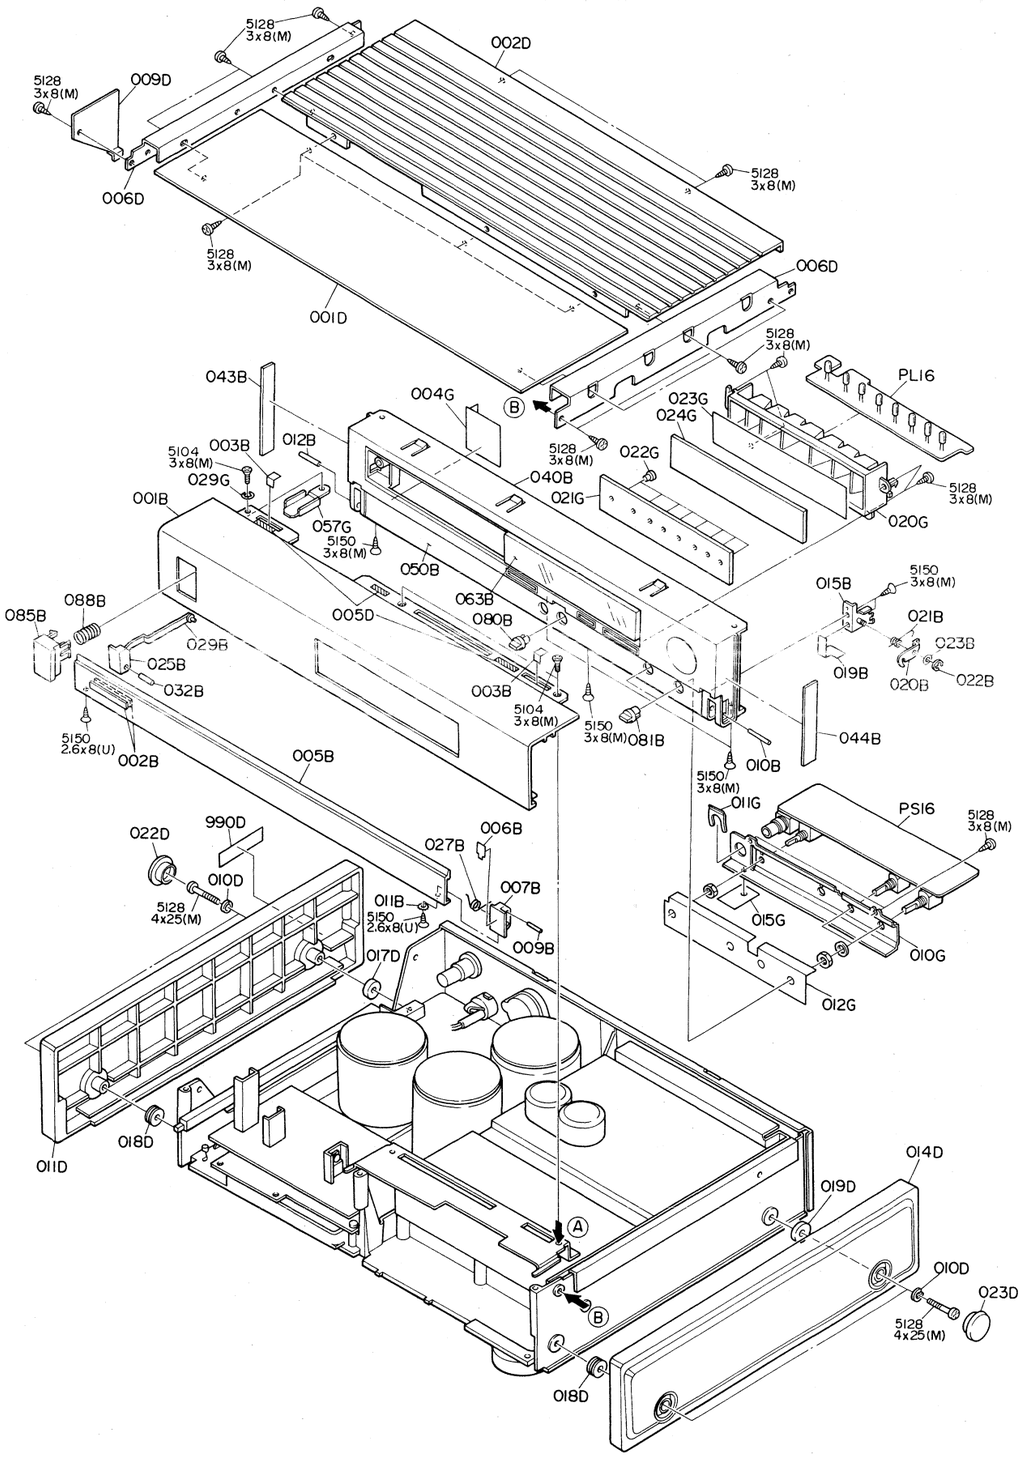

REF. DESIG.	PART NO.	DESCRIPTION
001B	4822 444 40287	Front Panel
002B	4822 459 10855	Badge
003B	4822 532 52078	Spacer
005B	4822 454 30427	Escutcheon, Front Door
007B	4822 417 11032	Hinge (R)
009B	4822 535 92367	Shaft, Lock
010B	4822 535 92368	Shaft, Hinge (R)
012B	4822 535 92368	Shaft, Hinge (L)
015B	4822 402 61225	Bracket (K), Lock Hook
020B	4822 402 61096	Hook, Lock
021B	4822 492 42171	Spring, Lock
022B	4822 532 11301	RG Ring, E Type ϕ2.5
023B	4822 532 52081	Washer
025B	4822 417 11033	Hinge (L)
027B	4822 492 42172	Spring, Open
029B	4822 402 50243	Joint
032B	4822 535 92369	Shaft
050B	4822 454 30428	Escutcheon, Front
063B	4822 450 61315	Window
080B	4822 412 21006	Knob, Level
081B	4822 412 21007	Knob, Rotary SW.
088B	4822 492 51927	Spring, Power SW.
001D	4822 444 50615	Lid, Top Cover; Front
002D	4822 444 30412	Lid, Top Cover; Rear
005D	4822 462 41094	Buffer
010D	4822 530 70385	Spring Washer
011D	4822 444 40285	Side Panel (L)
014D	4822 444 40285	Side Panel (R)
017D	4822 462 71578	Buffer
018D	4822 532 52077	Collar (K)
019D	4822 462 71578	Buffer
022D	4822 444 60607	Cap (L)
023D	4822 444 60607	Cap (R)
990D	4822 600 70337	Label
011G	4822 462 41037	Stopper, Phono Jack
021G	4822 459 40646	Mask
022G	4822 381 11041	Lens
029G	4822 530 80311	RG Ring, CS Type ϕ3

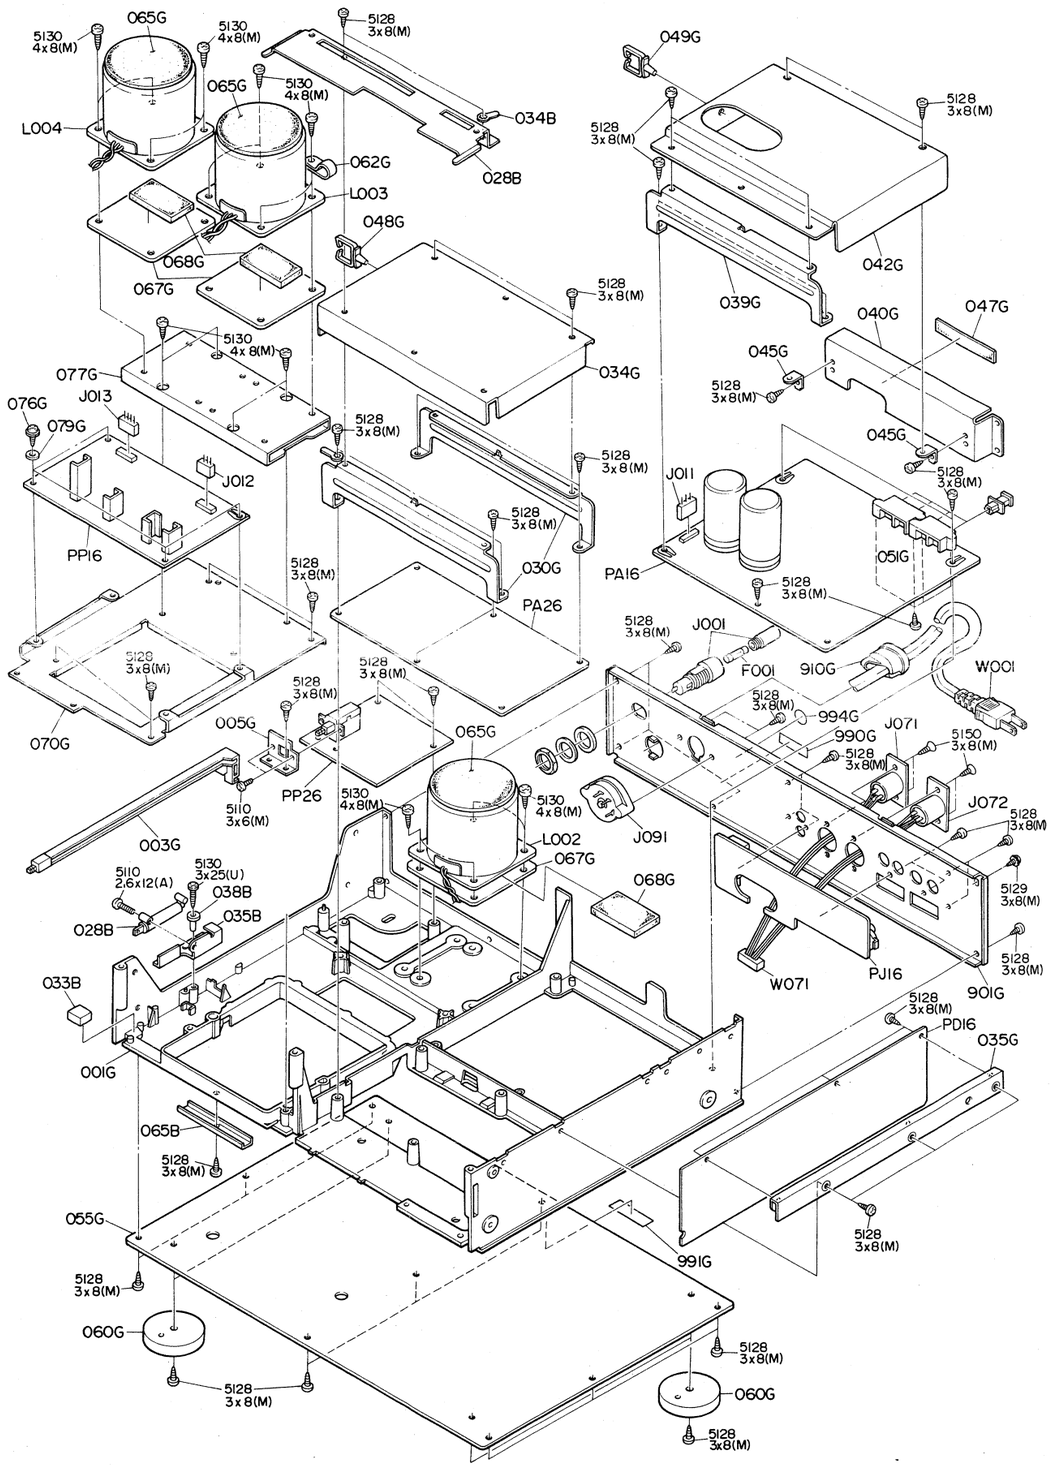

REF. DESIG.	PART NO.	DESCRIPTION
028B	4822 464 50493	Piston, Dumper
033B	4822 462 41011	Buffer
035B	4822 402 61229	Bracket, Dumper
038B	4822 417 11031	Support, Link
065B	4822 443 51101	Cover
003G	4822 402 50237	Link, Power Switch
060G	4822 462 71577	Leg
076G	4822 502 12511	B.T. Screw B3 x 8
079G	4822 466 50192	Sheet, Power P.W. Board
910G	4822 325 50157	Bushing, AC Power Cord
991G	4822 600 70229	Label, Caution
994G	4822 454 11873	Indicator, Made in Janan
⚠ F001	4822 253 30025	Fuse 2A 250V
⚠ J001	4822 256 30233	Jack, Fuse Holder
J011	4822 265 10093	Jack, 3P
J012	4822 265 10093	Jack, 3P
J013	4822 265 30557	Jack, 4P
J071	4822 265 20415	Plug, Cannon
J072	4822 265 20415	Plug, Cannon
⚠ J091	4822 272 10236	Voltage Selector
⚠ L002	4822 146 21401	Power Transformer, Audio
⚠ L003	4822 146 21402	Power Transformer, Lamp/Relay
⚠ L004	4822 146 21403	Power Transformer, Digital

Model DA-12

13. DA-12 ELECTRICAL PARTS LIST

ASSIGNMENT OF COMMON PARTS CODES.

RESISTOR

R***: (1) GD05---140, Carbon film fixed resistor, ±5%, 1/4W
R***: (2) GD05---160, Carbon film fixed resistor, ±5%, 1/6W

① — Resistance value

Examples

① Resistance value

0.1Ω...001	10Ω...100	1kΩ...102	100kΩ...104
0.5Ω...005	18Ω...180	2.7kΩ...272	680kΩ...684
1Ω...010	100Ω...101	10kΩ...103	1MkΩ...105
6.8Ω...068	390Ω...391	22kΩ...223	4.7MkΩ...475

(Note) Please distinguish 1/4W from 1/6W by the shape of parts used actually.

C***: CERAMIC CAP.

(1) DD1---370, Ceramic condenser
①② Disc type
Temp. coeff. P350 ~ N1000, 50V
② — Capacity value
① — Tolerance

Examples

① Tolerance (Capacity deviation)
±0.25pF...0
±0.5pF...1
±5%...5

* Tolerance of COMMON PARTS handled here are as follows:
0.5pF ~ 5pF...±0.25pF
6pF ~ 10pF...±0.5pF
12pF ~ 560pF...±5%

② Capacity value

0.5pF...005	3pF...030	100pF...101	
1pF...010	10pF...100	220pF...221	
1.5pF...015	47pF...470	560pF...561	

C***: CERAMIC CAP.

(1) DK16---300, High dielectric constant ceramic condenser
① Disc type
Temp. chara. 2B4, 50V
① — Capacity value

Example

② Capacity value

100pF...101	1000pF...102	10000pF...103
470pF...471	2200pF...222	

C***: ELECTROLY CAP. (⧺), FILM CAP. (⫩)

(1) EA------10, Electrolytic condenser
①② One-way lead type, Tolerance ±20%
② — Dielectric strength
① — Capacity value

Examples

① Capacity value

0.1μF...104	4.7μF...475	100μF...107
0.33μF...334	10μF...106	330μF...337
1μF...105	22μF...226	1100μF...108
		2200μF...228

② Working voltage

6.3V...006	25V...025	
10V...010	35V...035	
16V...016	50V...050	

(2) DF15---350, Plastic film condenser
① One-way type, Mylar ±5% 50V
① — Capacity value

Examples

① Capacity value

0.001μF (1000pF)...102	0.1μF...104
0.0018μF.....182	0.56μF...564
0.01μF.....103	1μF...105
0.015μF.....153	

REF. DESIG.	PART NO.	DESCRIPTION		
		PA16-AUDIO DAC CIRCUIT BOARD		
		PA16-CAPACITORS		
C301 ~ C305	4822 122 40491	Ceramic	0.022μF	+80% −20%
C610	4822 122 40617	Ceramic	0.1μF	+80% −20%
C611	4822 122 40617	Ceramic	0.1μF	+80% −20%
C635	4822 121 42713	Film	680pF	±5%
C636	4822 124 90058	Elect	47μF	25V
C637	4822 122 40617	Ceramic	0.1μF	+80% −20%
C638	4822 122 40617	Ceramic	0.1μF	+80% −20%
C639	4822 122 40617	Ceramic	0.1μF	+80% −20%
C640	4822 124 90058	Elect	47μF	25V
C641	4822 124 90058	Elect	47μF	25V
C651	4822 124 90386	Elect	10μF	25V
C652	4822 124 90386	Elect	10μF	25V
C653	4822 121 51282	Film	2400pF	±2%
C654	4822 121 51282	Film	2400pF	±2%
C655	4822 121 51281	Film	0.018μF	±2%
C656	4822 121 51281	Film	0.018μF	±2%
C657	4822 121 51283	Film	5600pF	±2%
C658	4822 121 51283	Film	5600pF	±2%
C663	4822 121 51126	Film	2200pF	±2%
C664	4822 121 51126	Film	2200pF	±2%
C665	4822 121 51144	Film	1000pF	±2%
C666	4822 121 51144	Film	1000pF	±2%
C669	4822 123 30093	Mica	5pF	±0.5pF
C670	4822 123 30093	Mica	5pF	±0.5pF
C671	4822 123 30086	Mica	47pF	±5%
C672	4822 123 30086	Mica	47pF	±5%
C673	4822 123 30093	Mica	5pF	±0.5pF
C674	4822 123 30093	Mica	5pF	±0.5pF
C675	4822 124 90387	Elect	220μF	6.3V
C676	4822 124 90387	Elect	220μF	6.3V
C677	4822 124 90387	Elect	220μF	6.3V
C678	4822 124 90387	Elect	220μF	6.3V
C690	4822 124 90386	Elect	10μF	25V
C691 ~ C698	4822 124 22238	Elect	100μF	25V
C842	4822 122 40617	Ceramic	0.1μF	+80% −20%
C844	4822 122 40617	Ceramic	0.1μF	+80% −20%
C845	4822 122 40617	Ceramic	0.1μF	+80% −20%
C846	4822 122 40617	Ceramic	0.1μF	+80% −20%
C853	4822 124 90058	Elect	47μF	25V
C854	4822 124 90058	Elect	47μF	25V
C855	4822 124 22242	Elect	470μF	25V
C856	4822 124 22242	Elect	470μF	25V
		PA16-RESISTORS		
R622	4822 116 52891	10Ω	±2%	¼W
R651	4822 116 53212	4.64KΩ	±2%	¼W
R652	4822 116 53212	4.64KΩ	±2%	¼W
R653	4822 116 53377	2.74KΩ	±2%	¼W
R654	4822 116 53377	2.74KΩ	±2%	¼W
R655	4822 116 53185	1.47KΩ	±2%	¼W
R656	4822 116 53185	1.47KΩ	±2%	¼W
R657	4822 116 53393	825Ω	±2%	¼W
R658	4822 116 53393	825Ω	±2%	¼W
R665	4822 116 80262	2.37KΩ	±2%	¼W

REF. DESIG.	PART NO.	DESCRIPTION
R666	4822 116 80262	2.37KΩ ±2% ¼W
R667	4822 116 80262	2.37KΩ ±2% ¼W
R668	4822 116 80262	2.37KΩ ±2% ¼W
R675	4822 116 53772	3.32KΩ ±2% ¼W
R676	4822 116 53772	3.32KΩ ±2% ¼W
R677	4822 116 53241	21.5KΩ ±2% ¼W
R678	4822 116 53241	21.5KΩ ±2% ¼W
R679	4822 116 53791	1.54KΩ ±2% ¼W
R680	4822 116 53791	1.54KΩ ±2% ¼W
R683	4822 116 53781	56.2Ω ±2% ¼W
R684	4822 116 53781	56.2Ω ±2% ¼W
R691 ~ R698	4822 116 52892	100Ω ±5% ¼W
R853	5322 116 53214	562Ω ±2% ¼W
R854	5322 116 53214	562Ω ±2% ¼W
R855	4822 116 53079	3.83KΩ ±2% ¼W
R856	4822 116 53079	3.83KΩ ±2% ¼W
R857	4822 116 60331	1KΩ ±5% 1W
R858	4822 116 60331	1KΩ ±5% 1W
R859	4822 116 52956	1.21KΩ ±2% ¼W
R860	4822 116 52956	1.21KΩ ±2% ¼W
R861	4822 116 53297	1.78KΩ ±2% ¼W
R862	4822 116 53297	1.78KΩ ±2% ¼W
R863	4822 116 52956	1.21KΩ ±2% ¼W
R864	4822 116 52956	1.21KΩ ±2% ¼W
		PA16-SEMICONDUCTORS
D851 ~ D854	4822 130 33074	Diode 30DF2
D855	4822 130 33664	Zener HZ6L
D856	4822 130 33664	Zener HZ6L
Q319	4822 209 73985	IC TC74HC153P
Q621	4822 209 72969	IC TDA1541A
Q651	4822 130 70226	IC NJM5534D
Q652	4822 130 70226	IC NJM5534D
Q653	4822 130 70226	IC NJM5534D
Q654	4822 130 70226	IC NJM5534D
Q655	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q656	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q657	4822 209 70226	IC NJM5534D
Q658	4822 209 70226	IC NJM5534D
Q851	4822 130 43031	Transistor 2SB507(D)
Q852	4822 130 43323	Transistor 2SD313(D)
Q853	4822 130 42076	Transistor 2SA1048(GR)
Q854	4822 130 60839	Transistor 2SC2458(O, Y)
Q855	4822 130 42591	Transistor 2SA1175(FF, EF)
Q856	5322 130 42052	Transistor 2SC2785(FF, EF)
		PA16-MISCELLANEOUS
J301	4822 264 30217	Jack, Optical Input
J302	4822 264 30217	Jack, Optical Input
J303	4822 264 30217	Jack, Optical Input
J304	4822 264 22588	Jack, Optical Output
J322	4822 265 40771	Jack, 7P
J323	4822 265 30641	Plug, 2P
J650	4822 265 40771	Jack, 7P
J653	4822 265 30641	Plug, 2P
J654	4822 265 30641	Plug, 2P
J861	4822 265 20205	Plug, 3P
J862	4822 265 30639	Plug, 3P

REF. DESIG.	PART NO.	DESCRIPTION
JG31	4822 290 40296	Terminal, Earth
JG61	4822 290 40296	Terminal, Earth
JG82	4822 290 40296	Terminal, Earth
L301	4822 157 53801	Choke Coil 47μH
L302	4822 157 53801	Choke Coil 47μH
L303	4822 157 53801	Choke Coil 47μH
W321	4822 265 30661	Jack, 7P
		PA26-BALANCE AMP CIRCUIT BOARD
		PA26-CAPACITORS
C701	4822 124 90389	Elect 4.7μF 25V
C702	4822 124 90389	Elect 4.7μF 25V
C703	4822 124 90389	Elect 4.7μF 25V
C704	4822 124 90389	Elect 4.7μF 25V
C705	4822 121 51144	Film 1000pF ±2%
C706	4822 121 51144	Film 1000pF ±2%
C707	4822 124 22238	Elect 100μF 25V
C708	4822 124 22238	Elect 100μF 25V
C717	4822 121 51209	Film 0.015μF ±2%
C718	4822 121 51209	Film 0.015μF ±2%
C731	4822 124 22238	Elect 100μF 25V
C732	4822 124 22238	Elect 100μF 25V
C733	4822 124 22238	Elect 100μF 25V
C734	4822 124 22238	Elect 100μF 25V
C737	4822 124 22736	Elect 1000μF 25V
C738	4822 124 22736	Elect 1000μF 25V
		PA26-RESISTORS (All Resistors are ±2% and ¼W)
R701	4822 116 53387	5.62KΩ
R702	4822 116 53387	5.62KΩ
R703	5322 116 53212	4.64KΩ
R704	5322 116 53212	4.64KΩ
R705	4822 116 53387	5.62KΩ
R706	4822 116 53387	5.62KΩ
R709	4822 116 53108	1KΩ
R710	4822 116 53108	1KΩ
R711	4822 116 53387	5.62KΩ
R712	4822 116 53387	5.62KΩ
R713	4822 116 53387	5.62KΩ
R714	4822 116 53387	5.62KΩ
R715	4822 116 53214	562Ω
R716	4822 116 53214	562Ω
R717	4822 116 53214	562Ω
R718	4822 116 53214	562Ω
R719	4822 116 53784	68.1KΩ
R720	4822 116 53784	68.1KΩ
R731	4822 116 52892	100Ω ±5%
R732	4822 116 52892	100Ω ±5%
R733	4822 116 52892	100Ω ±5%
R734	4822 116 52892	100Ω ±5%
R737	4822 116 53387	5.62KΩ
R738	4822 116 53387	5.62KΩ
		PA26-SEMICONDUCTORS
D703	4822 130 31018	Diode 1S1555, etc.
Q701	4822 209 70226	IC NJM5534D
Q702	4822 209 70226	IC NJM5534D
Q703	4822 209 70226	IC NJM5534D
Q704	4822 209 70226	IC NJM5534D

REF. DESIG.	PART NO.	DESCRIPTION
		PA26-MISCELLANEOUS
J701	4822 265 30641	Plug, 2P
J702	4822 265 30641	Plug, 2P
J703	4822 265 30662	Plug, 6P
J706	4822 265 30662	Plug, 6P
L701	4822 148 80787	Output Transformer (L)
L702	4822 148 80787	Output Transformer (R)
L703	4822 280 20285	Relay SV-12
		PD16-DEMO CIRCUIT BOARD
		PD16-CAPACITORS
C401	5322 122 32143	Ceramic 22pF ±5%
C404	4822 122 32185	Ceramic 10pF ±0.5pF
C405	4822 122 32185	Ceramic 10pF ±0.5pF
C408	4822 122 40617	Ceramic 0.1μF +80% −20%
C419	4822 122 40617	Ceramic 0.1μF +80% −20%
C421	4822 122 40617	Ceramic 0.1μF +80% −20%
C424	4822 122 40617	Ceramic 0.1μF +80% −20%
C428	4822 122 40617	Ceramic 0.1μF +80% −20%
C429	4822 122 40617	Ceramic 0.1μF +80% −20%
C451	4822 122 33656	Ceramic 39pF ±5%
C452	4822 122 33657	Ceramic 56pF ±5%
C453	4822 121 42713	Film 680pF ±5%
C455	4822 122 32143	Ceramic 22pF ±5%
C459	4822 122 40617	Ceramic 0.1μF +80% −20%
C462	4822 122 32896	Ceramic 680pF ±5%
C464	5322 122 31626	Ceramic 100pF ±5%
C467	4822 122 32486	Ceramic 0.01μF +80% −20%
C468	5322 122 32143	Ceramic 22pF ±5%
C470	4822 122 32486	Ceramic 0.01μF +80% −20%
C472	4822 121 51382	Film 560pF ±5%
C482	4822 122 40617	Ceramic 0.1μF +80% −20%
C484	4822 122 40616	Ceramic 0.1μF +80% −20%
C485	4822 122 40617	Ceramic 0.1μF +80% −20%
C487	4822 122 40617	Ceramic 0.1μF +80% −20%
C489	4822 122 40617	Ceramic 0.1μF +80% −20%
C490	4822 122 40617	Ceramic 0.1μF +80% −20%
C491	4822 122 40491	Ceramic 0.022μF +80% −20%
C494	4822 122 32486	Ceramic 0.01μF +80% −20%
		PD16-RESISTORS
R452	4822 116 80958	20KΩ ±1% 1/6W
R453	4822 116 80957	13.3KΩ ±1% 1/6W
R454	4822 116 80251	100KΩ ±1% 1/6W
R455	4822 116 80959	7.5KΩ ±1% 1/6W
		PD16-SEMICONDUCTORS
D403	4822 130 33305	Diode 1SS133, etc.
D451	4822 130 80091	Zener 12V
D452	4822 130 80091	Zener 12V
D453	4822 130 80302	Varistor MA27A
D454	4822 130 80302	Varistor MA27A
D455	4822 130 31542	Varicap SVC321SP
D456 ~ D463	4822 130 33305	Diode 1SS133, etc.
D495	4822 130 33305	Diode 1SS133, etc.
D496	4822 130 33305	Diode 1SS133, etc.

REF. DESIG.	PART NO.	DESCRIPTION
Q401	4822 209 73668	IC YM2637B
Q407	4822 209 72545	IC SAA7220P/B
Q411	4822 209 72329	IC TLP570
Q416	4822 209 72323	IC TC74HCU04P
Q451	4822 130 42591	Transistor 2SA1175(FF, EF)
Q452	4822 130 42591	Transistor 2SA1175(FF, EF)
Q453	5322 130 42052	Transistor 2SC2785(FF, EF)
Q454	5322 130 42052	Transistor 2SC2785(FF, EF)
Q455	4822 130 43536	F.E.T. 2SK30ATM(GR)
Q456	4822 130 43792	Transistor 2SC1815(Y)
Q457	4822 130 61357	F.E.T. 2SK161(GR)
Q458	4822 130 61464	Transistor 2SC2347
Q459	5322 130 42052	Transistor 2SC2785(FF, EF)
Q460	4822 130 61188	Transistor DTC144TS, Digital
Q461	4822 130 61321	Transistor DTC124EX, Digital
Q462	4822 130 61321	Transistor DTC124EX, Digital
Q463	4822 209 73676	IC TC74HC86P
Q464	4822 209 73677	IC TC74HC123P
Q465	4822 209 73984	IC MC4044P
Q466	4822 209 72323	IC TC74HCU04P
Q467	4822 209 73678	IC TC74HC393P
Q468	4822 209 72322	IC TC74HC00P
Q469	4822 209 73679	IC HD74HC673
Q470	4822 209 73681	IC HD74HC674
Q471	4822 209 73677	IC TC74HC123P
Q472	4822 209 72333	IC TC74HC74P
Q473	4822 209 73675	IC TC74HC08P
Q474	4822 209 72333	IC TC74HC74P
Q475	4822 209 72333	IC TC74HC74P
Q477	4822 209 72333	IC TC74HC74P
Q478	4822 209 73677	IC TC74HC123P
Q481	5322 130 42052	Transistor 2SC2785(FF, EF)
Q482	5322 130 42052	Transistor 2SC2785(FF, EF)
		PD16-MISCELLANEOUS
JG41	4822 290 40296	Terminal, Earth
JG42	4822 290 40296	Terminal, Earth
J404	4822 265 30639	Plug, 3P
L451	4822 152 20662	Choke Coil 150μH
L452	4822 157 53799	Choke Coil 1.5μH
L454	4822 157 53801	Choke Coil 47μH
L455	4822 157 53801	Choke Coil 47μH
X401	4822 242 72334	Crystal 16.9344MHz
		PP26-POWER SWITCH CIRCUIT BOARD
⚠ GH01	4822 122 40305	Ceramic Cap 0.01μF 400V
⚠ SH01	4822 276 11141	Push Switch, Power
		PJ16-DIGITAL IN/OUT CIRCUIT BOARD
		PJ16-CAPACITORS
C312	4822 122 40617	Ceramic 0.1μF +80% −20%
C313	4822 122 40617	Ceramic 0.1μF +80% −20%
C314	4822 122 40617	Ceramic 0.1μF +80% −20%
C315	4822 122 40491	Ceramic 0.022μF +80% −20%
C319	4822 122 40617	Ceramic 0.1μF +80% −20%

REF. DESIG.	PART NO.	DESCRIPTION
		PJ16-RESISTORS
R311	4822 116 80417	75Ω ±1% 1/6W
R316	4822 116 80417	75Ω ±1% 1/6W
R321	4822 116 80417	75Ω ±1% 1/6W
		PJ16-SEMICONDUCTORS
D314	4822 130 33305	Diode 1SS133, etc.
D319	4822 130 33305	Diode 1SS133, etc.
D324	4822 130 33305	Diode 1SS133, etc.
DN05	4822 130 33305	Diode 1SS133, etc.
Q311 ≀ Q316	4822 130 61447	Transistor 2SC3732(L)
Q318	4822 209 73985	IC TC74HC153P
Q320	4822 209 72323	IC TC74HCU04P
		PJ16-MISCELLANEOUS
J311	4822 267 31032	Terminal, 2P; RCA
J312	4822 267 31031	Terminal, 2P; RCA
J651	4822 267 31032	Terminal, 2P; RCA
L311	4822 142 60388	Pulse Transformer
LN01	4822 280 20285	Relay SV-12
		PL16-LAMP CIRCUIT BOARD
JL01	4822 265 10221	Jack, 10P
LL01 ≀ LL08	4822 134 40928	Lamp 75mA 12V
		PP16-POWER SUPPLY CIRCUIT BOARD
		PP16-CAPACITORS
C802	4822 122 40491	Ceramic 0.022μF +80% −20%
⚠ C803	4822 124 22243	Elect 6800μF 16V
C807	4822 124 90051	Elect 220μF 25V
⚠ C824	4822 124 22239	Elect 3300μF 25V
⚠ C825	4822 124 22239	Elect 3300μF 25V
C826	4822 124 90051	Elect 220μF 25V
C827	4822 124 90051	Elect 220μF 25V
C828	4822 122 40491	Ceramic 0.022μF +80% −20%
C832	4822 124 90051	Elect 220μF 25V
		PP16-SEMICONDUCTORS
⚠ D801	4822 130 33056	Diode U05B
⚠ D802	4822 130 33056	Diode U05B
⚠ D803	4822 130 33056	Diode U05B
⚠ D804	4822 130 33056	Diode U05B
⚠ D805	4822 130 32155	Diode W06B
⚠ D806	4822 130 32155	Diode W06B
⚠ D807	4822 130 32155	Diode W06B
⚠ D808	4822 130 32155	Diode W06B
⚠ D813	4822 130 32155	Diode W06B
⚠ D814	4822 130 32155	Diode W06B
⚠ D821	4822 130 32155	Diode W06B
⚠ D822	4822 130 32155	Diode W06B
⚠ D823	4822 130 32155	Diode W06B
⚠ D824	4822 130 32155	Diode W06B
⚠ D831	4822 130 33095	Zener RD6.8EB2
D832	4822 130 33759	Zener 4.7V

REF. DESIG.	PART NO.	DESCRIPTION
⚠ Q801	4822 209 83824	IC NJM7805
⚠ Q802	4822 209 83824	IC NJM7805
Q806 ≀ Q810	4822 130 42298	Transistor 2SC536SP, etc.
⚠ Q821	4822 209 70086	IC NJM79M12A
⚠ Q822	4822 209 70084	IC NJM7812
⚠ Q831	4822 130 60353	Transistor 2SA1358(Q, Y)
Q832	4822 130 42591	Transistor 2SA1175(FF, EF)
		PP16-MISCELLANEOUS
⚠ F801	4822 265 20205	Plug; 3P
⚠ F802	4822 253 20017	Fuse 800mAT 250V
⚠ F821	4822 253 20017	Fuse 800mAT 250V
⚠ F822	4822 253 20017	Fuse 800mAT 250V
JG81	4822 290 40296	Terminal, Earth
⚠ J801	4822 256 30239	Jack, Fuse Holder
⚠ J802	4822 256 30239	Jack, Fuse Holder
J804	4822 265 30641	Plug, 2P
J806	4822 265 30543	Plug, 4P
J820	4822 265 30662	Plug, 6P
⚠ J821	4822 256 30239	Jack, Fuse Holder
⚠ J822	4822 256 30239	Jack, Fuse Holder
J823	4822 265 20205	Plug, 3P
		PS16-FUNCTION SW./PHONE CIRCUIT BOARD
C925	4822 122 40617	Ceramic Cap. 0.1μF +80% −20%
R900	4822 100 20632	Resistor 10KΩ(A)x2, Variable
R921	4822 111 20384	Resistor 6.8Ω ±5% ½W, Fusible
R922	4822 111 20384	Resistor 6.8Ω ±5% ½W, Fusible
D901	4822 130 33305	Diode 1SS133, etc.
DS01 ≀ DS13	4822 130 33305	Diode 1SS133, etc.
Q901	4822 209 83654	IC NJM4556D
Q902	4822 209 83654	IC NJM4556D
QS01	4822 130 60839	Transistor 2SC2458(O, Y)
QS02	4822 130 60839	Transistor 2SC2458(O, Y)
QS03	4822 130 42052	Transistor 2SC2785(FF, EF)
JG91	4822 265 10158	Plug, 2P
J900	4822 267 31026	Jack, Phone
L901	4822 280 20285	Relay SV-12
SS01	4822 273 20312	Rotary Switch
SS02	4822 273 50297	Rotary Switch

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol ⚠ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

14. RC-12CD EXPLODED VIEW AND PARTS LIST

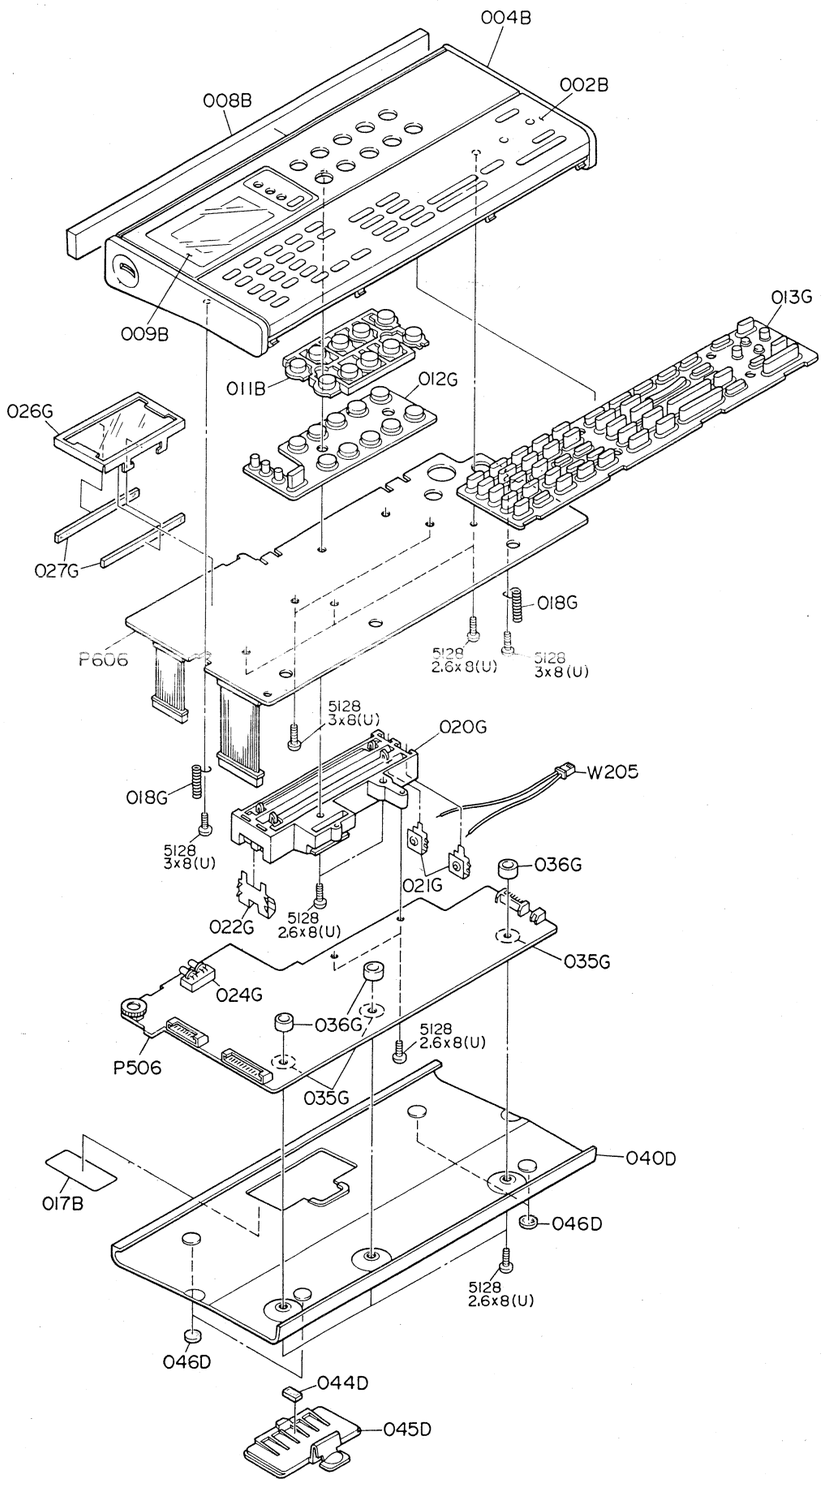

REF. DESIG.	PART NO.	DESCRIPTION
002B	4822 432 30345	Front Panel
004B	4822 432 30344	Case Assembly
008B	4822 450 61307	Window, Front Side
009B	4822 381 11039	Window, LCD
011B	4822 276 80346	Button, Function
040D	4822 432 30346	Lid, Bottom
045D	4822 432 30347	Lid, Battery
046D	4822 462 41064	Leg
012G	4822 276 80344	Contactor, Key
013G	4822 276 80345	Contactor, Key
018G	4822 492 32976	Spring
020G	4822 256 60301	Holder, Battery
021G	4822 290 80846	Contactor (L)
022G	4822 290 80847	Contactor (R)
035G	4822 520 10573	Sustainer

15. RC-12CD ELECTRICAL PARTS LIST

ASSIGNMENT OF COMMON PARTS CODES.

RESISTOR

R***: (1) GD05---140, Carbon film fixed resistor, ±5%, 1/4W
R***: (2) GD05---160, Carbon film fixed resistor, ±5%, 1/6W

① — Resistance value

Examples

① Resistance value

0.1Ω...001	10Ω...100	1kΩ...102	100kΩ...104
0.5Ω...005	18Ω...180	2.7kΩ...272	680kΩ...684
1Ω...010	100Ω...101	10kΩ...103	1MkΩ...105
6.8Ω...068	390Ω...391	22kΩ...223	4.7MkΩ...475

(Note) Please distinguish 1/4W from 1/6W by the shape of parts used actually.

C***: CERAMIC CAP.
(1) DD1----370, Ceramic condenser
Disc type
①②
Temp. coeff. P350 ~ N1000, 50V
Capacity value
Tolerance

Examples

① Tolerance (Capacity deviation)
±0.25pF...0
±0.5pF...1
±5%...5

* Tolerance of COMMON PARTS handled here are as follows:
0.5pF ~ 5pF...±0.25pF
6pF ~ 10pF...±0.5pF
12pF ~ 560pF...±5%

② Capacity value

0.5pF...005	3pF...030	100pF...101
1pF...010	10pF...100	220pF...221
1.5pF...015	47pF...470	560pF...561

C***: CERAMIC CAP.
(1) DK16---300, High dielectric constant ceramic condenser
Disc type
①
Temp. chara. 2B4, 50V
Capacity value

Example

② Capacity value

100pF...101	1000pF...102	10000pF...103
470pF...471	2200pF...222	

C***: ELECTROLY CAP. (⫣⫢), FILM CAP. (⫩)
(1) EA------10, Electrolytic condenser
One-way lead type, Tolerance ±20%
①②
Dielectric strength
Capacity value

Examples

① Capacity value

0.1μF...104	4.7μF...475	100μF...107
0.33μF...334	10μF...106	330μF...337
1μF...105	22μF...226	1100μF...108
		2200μF...228

② Working voltage

6.3V...006	25V...025
10V...010	35V...035
16V...016	50V...050

(2) DF15---350, Plastic film condenser
One-way type, Mylar ±5% 50V
①
Capacity value

Examples

① Capacity value

0.001μF (1000pF)...102	0.1μF...104
0.0018μF.....182	0.56μF...564
0.01μF.....103	1μF...105
0.015μF.....153	

REF. DESIG.	PART NO.	DESCRIPTION
		P506-MAIN CIRCUIT BOARD
		P506-CAPACITORS
C101	4822 124 22319	Elect 100μF 6.3V
C106	4822 124 22319	Elect 100μF 6.3V
C107	4822 124 22476	Elect 4.7μF 25V
C131	4822 122 32665	Ceramic 0.001μF ±10%
		P506-RESISTORS, CHIP
		(All Resistors are ±5% and 1/10W)
R101	4822 111 90895	10KΩ
R102	4822 111 90896	100KΩ
R103	4822 111 90922	5.6KΩ
R104	4822 111 90918	4.7KΩ
R106	4822 111 90895	10KΩ
R107	4822 111 90925	68KΩ
R112	4822 111 90897	1MΩ
R113	4822 111 90895	10KΩ
R114	4822 111 90919	47KΩ
R115	4822 111 90896	100KΩ
R117	4822 111 90895	10KΩ
R118 ~ R150	4822 111 90896	100KΩ
R152	4822 100 11451	20KΩ(B), Variable
R182	4822 111 90906	2.2KΩ
R183	4822 111 90896	100KΩ
R184	4822 111 90896	100KΩ
R185	4822 111 91459	22Ω
R186	4822 111 91459	22Ω
R191	4822 111 90907	22KΩ
R192	4822 111 91461	680KΩ
R193	4822 111 90911	27KΩ
R194	4822 111 90907	22KΩ
R195	4822 111 90919	47KΩ
R196	4822 111 90913	33KΩ
R197	4822 111 90896	100KΩ
R198	4822 111 90918	4.7KΩ
R501	4822 116 90503	150Ω
R502	4822 111 90893	100Ω
		P506-SEMICONDUCTORS
D101	4822 130 81052	Zener HZ5ALL
D102	4822 130 32635	Diode, Chip MA-151K
D103	4822 130 32635	Diode, Chip MA-151K
D104	4822 130 32635	Diode, Chip MA-151K
D106	4822 130 32635	Diode, Chip MA-151K
D109	4822 130 81053	L.E.D. TLN105B
D110	4822 130 81053	L.E.D. TLN105B
D119	4822 130 81054	L.E.D. TPS703
Q101	4822 209 73593	Microprocessor M50747-FP
Q102	4822 209 51607	IC TC54256AF
Q103	4822 209 73588	IC 64K
Q104	4822 209 71322	IC 74HC14F
Q105	4822 209 73592	IC 74HC139F
Q106	4822 209 72642	IC 74HC74F
Q111	4822 209 73587	IC PST520(D)
Q112	4822 130 42733	Transistor 2SA1162(G), Chip
Q113	4822 130 42733	Transistor 2SA1162(G), Chip
Q114	4822 130 61405	Transistor 2SC2411(R), Chip
Q116	4822 130 43398	Transistor 2SC2712(G), Chip
Q129	4822 130 42733	Transistor 2SA1162(G), Chip
Q130	4822 130 43398	Transistor 2SC2712(G), Chip
Q131	4822 130 43398	Transistor 2SC2712(G), Chip

REF. DESIG.	PART NO.	DESCRIPTION
		P506-MISCELLANEOUS
B101	4822 138 10297	Battery CR2032-IHF
J101	4822 265 20413	Jack, 11P
J102	4822 265 20414	Jack, 15P
J105	4822 265 20412	Jack, 2P
X101	4822 242 72321	Crystal 8MHz
		P606-KEY CIRCUIT BOARD
		P606-RESISTORS, CHIP
R201	4822 116 80974	91KΩ ±1% 1/10W
R202 ~ R206	4822 111 91139	6.8KΩ ±5% 1/10W
		P606-SEMICONDUCTORS
Q201	4822 209 73591	IC HD44780
Q202	4822 209 73589	IC HD44100H
K201	4822 130 90627	Display Unit

16. TECHNICAL SPECIFICATIONS

Model CD-12 Specifications

Optical Readout System
- Laser . . . . . Semi-conductor AlGaAs
- Wave Length . . . . . 780 nm

Digital Output Terminals
- Coaxial 1, 2 . . . . . Output Level . . . . . 0.5 V P-P
  Output Impedance . . . . . 75 Ohms
- Optical 1, 2 . . . . . Output Level . . . . . –15 ~ –23 dBm

Power Supply
- Voltage . . . . . 220/240 V
- Line Frequency . . . . . 50 Hz or 60 Hz
- Power Consumption . . . . . 15 W

Temperature Range . . . . . 5°C ~ 35°C

Humidity Range . . . . . Without Dew . . . . . 5% ~ 90%

Dimensions and Weight
- Width . . . . . 455 mm
- Height . . . . . 103 mm
- Depth . . . . . 345 mm
- Weight . . . . . 14 kg

Accessories
- Coaxial Connection Cord . . . . . 1 pc.
- Optical Fiber Cable . . . . . 1 pc.

Model RC-12CD Specifications

IR Wave Length . . . . . 950 nm
IR Reach Distance (at 25°C) . . . . . 7 m
Power Supply . . . . . 4 pcs. of (R6/SUM-3/Size AA) batteries
Learning Specifications
Condition: Aline two remote control units head to head
- Distance between Two Units . . . . . 50 mm

Maximum Number of Learning Codes
- D-BUS . . . . . 296 codes
- Others . . . . . Approx. 150 codes

Battery Life . . . . . More than one year
(30 times transmit/day)
Battery Replacement Time . . . . . Within 5 minutes
Dimensions and Weight
- Width . . . . . 260 mm
- Height . . . . . 31 mm
- Depth . . . . . 126 mm
- Weight . . . . . 680 g

Model DA-12 Specifications

Number of Channels		2 stereo
D/A Converter		16-bit, Fourfold oversampling
Sampling Rate		Compatible with 44.1 KHz and 48 KHz (Automatic Selection)
Frequency Response (with a 44.1 KHz input signal)		
Unbalanced Outputs		2 Hz ~ 20 KHz ±0.1 dB
BALANCED Outputs		20 Hz ~ 20 KHz +0.3, –0.6 dB
Signal-to-noise Ratio		101 dB
Dynamic Range		96 dB
Channel Separation		100 dB
Total Harmonic Distortion		0.0015% (at 1 KHz)
Digital Input Terminals		
COAXIAL 1 and COAXIAL 2	Input Level	0.5 V P-P
	Input Impedance	70 Ohms
OPTICAL 1 and OPTICAL 2	Input Level	–15 ~ –23 dBm
Digital Audio Taperecorder Terminals		
COAXIAL Input Terminals	Input Level	0.5 V P-P
	Input Impedance	75 Ohms
OPTICAL Input Terminals	Input Level	–15 ~ –23 dBm
COAXIAL Output Terminals	Output Level	0.5 V P-P
	Output Impedance	75 Ohms
OPTICAL Output Terminals	Output Level	–15 ~ –23 dBm
Analogue Output Terminals		
Unbalanced Output Terminals	Output Level	2 V rms
	Output Impedance	100 Ohms
	Matching Load Impedance:	More than 10 K Ohms
BALANCED Output Terminals	Output Level (open load)	3 V rms
	Output Impedance	100 Ohms
	Matching Load Impedance:	Balanced: 600 Ohms
		Unbalanced: 600 Ohms ~ 50 K Ohms
HEADPHONE Output Terminal (THD: 0.1%)	Output Level	32 Ohms, 45 mW
	Matching Load Impedance:	8 Ohms ~ 1000 Ohms
Power Supply		
Voltage		220/240 V
Line Frequency		50 Hz or 60 Hz
Power Consumption		18 W
Dimensions and Weight		
Width		455 mm
Height		103 mm
Depth		345 mm
Weight		14 kg
Accessories		
XLR Connection cord		1 pair

17. SCHEMATIC DIAGRAM

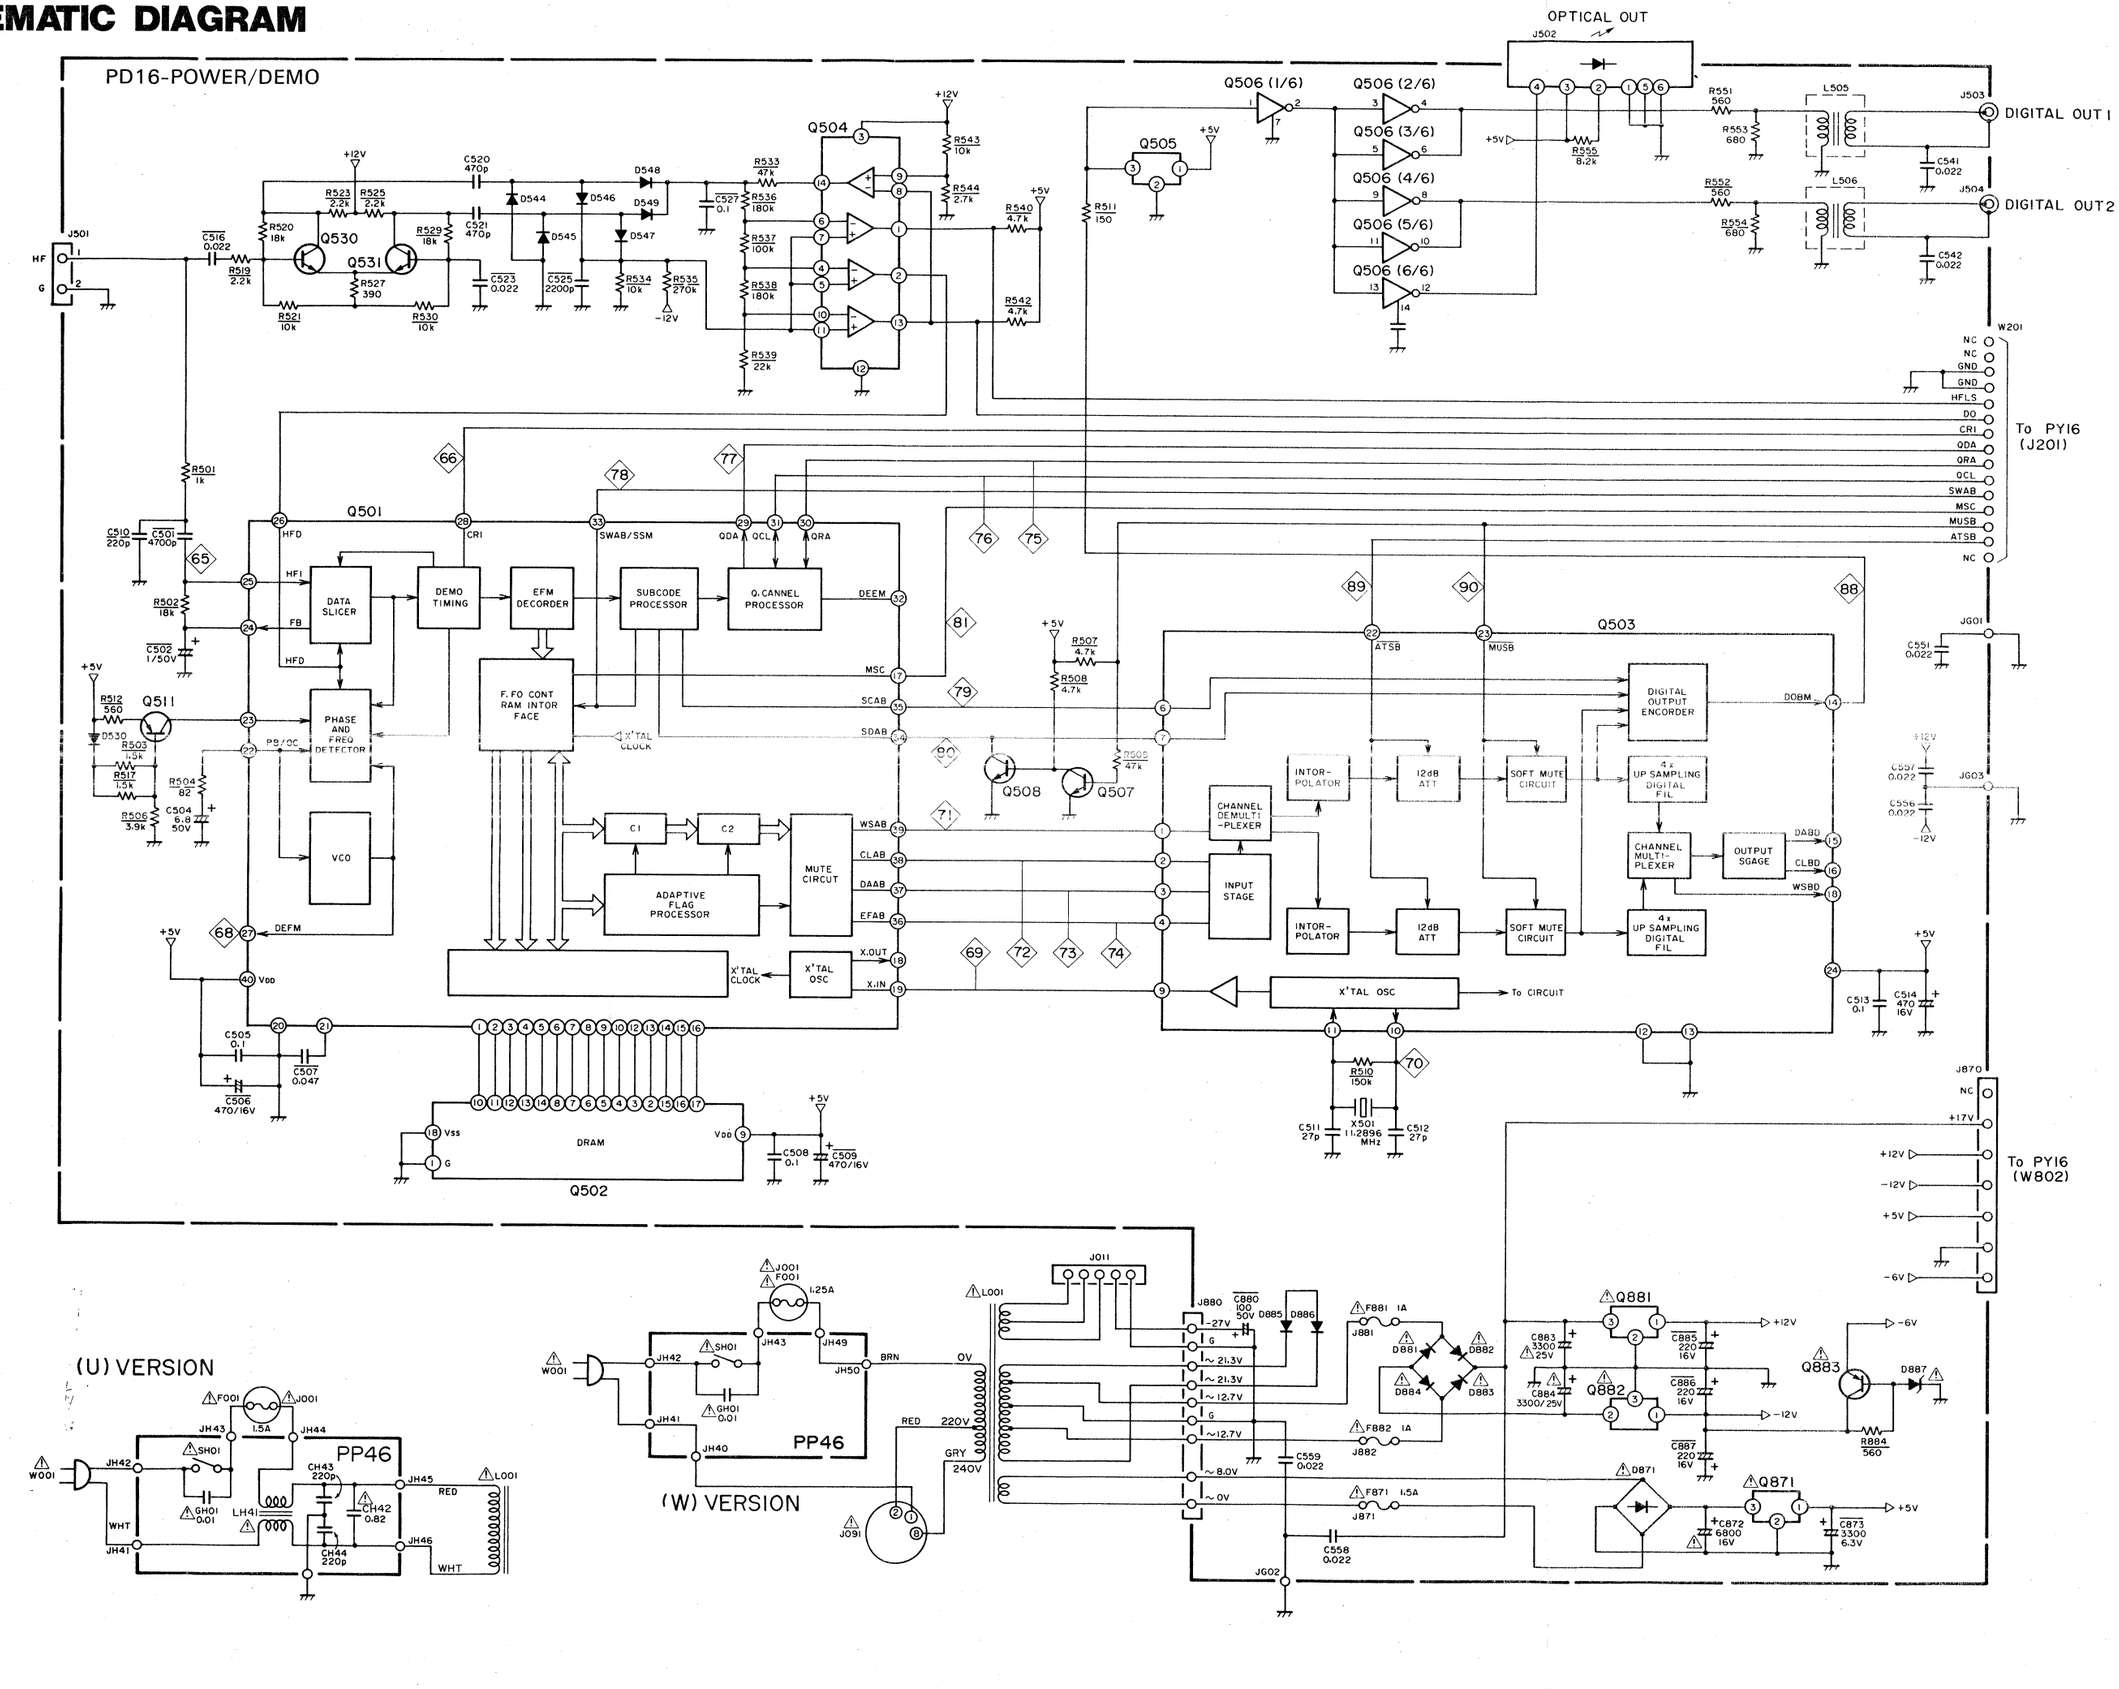

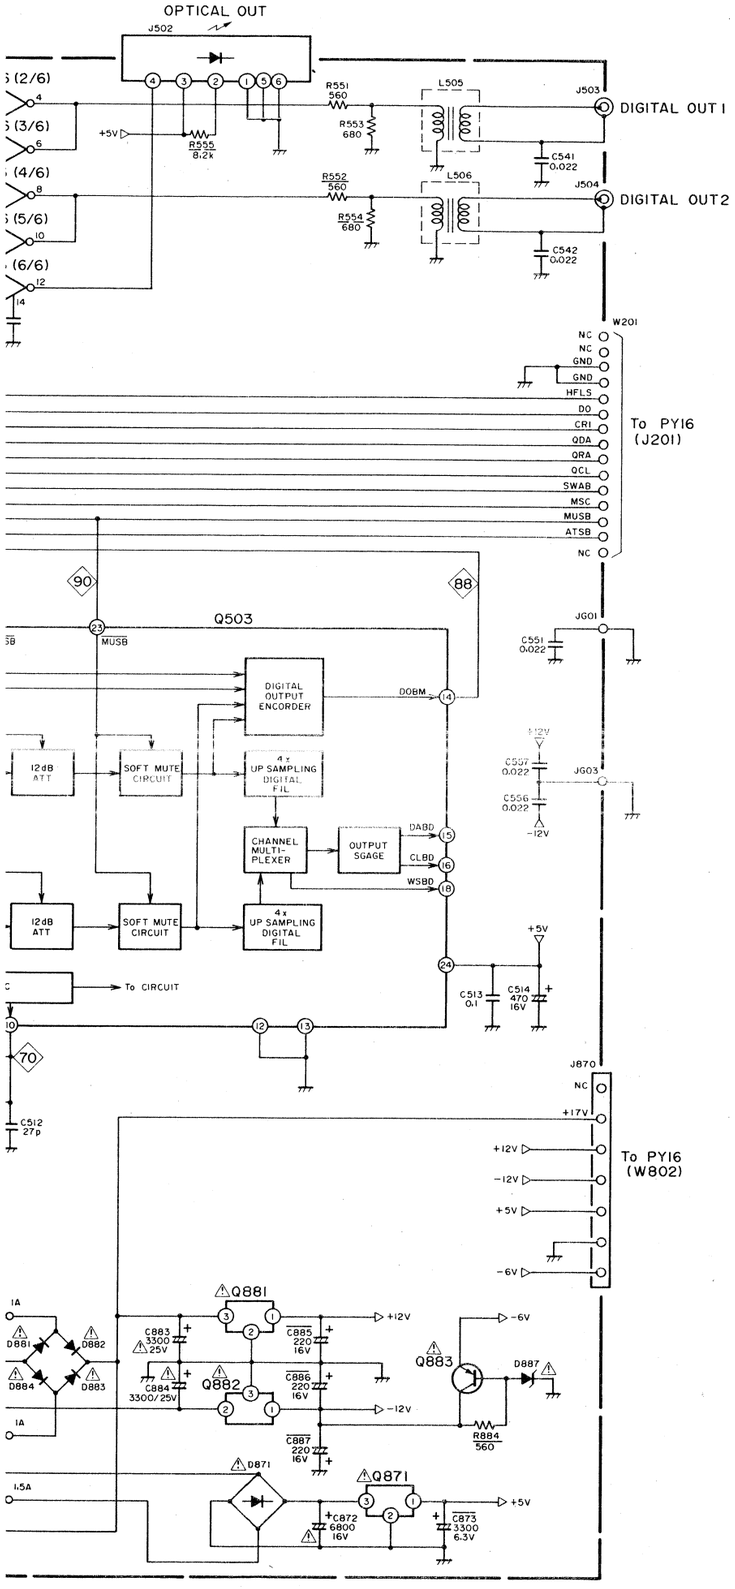

Q501

SAA7210

Q502

μPD41416C-20

Q503

SAA7220A

Q504

IR2339

Q505

PST529C

Q506

74HC004

Q507, Q508, Q530, Q531

2SC2785 (FF, EF)

Q511

2SA1005 (K, L)

Q871

NJM7805FA

Q881

NJM7812FA

Q882

NJM7912FA

Q883

2SA1358 (O, Y)

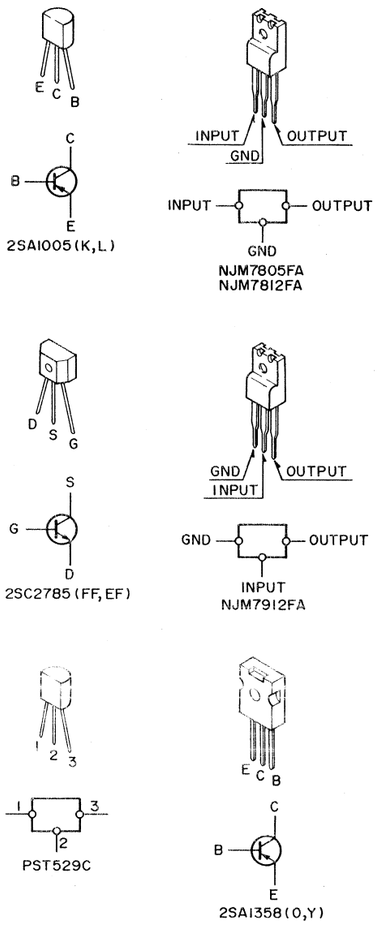

D530

MA27A

D544 ~ D549

30V

D871

S2VB20

D881 ~ D886

RL103E

D887

6.8V

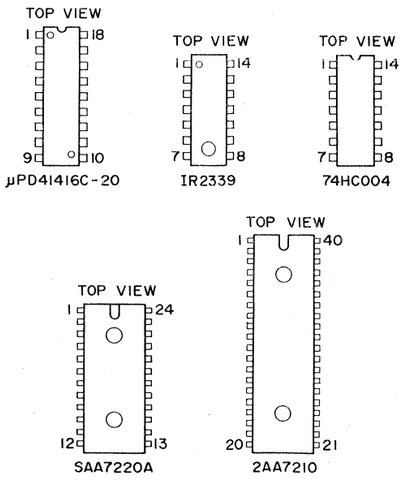

Kind of Common Parts

RESISTOR

R*** (1) GD05 -- 140, Carbon film fixed resistor, ±5% 1/4W

R*** (2) GD05 -- 160, Carbon film fixed resistor, ±5% 1/6W

C*** : **CERAMIC CAP.**

(1) DD1 --- 370, Ceramic condenser, disc type (titan condenser) Temp. coeff. P350 -- N1000 50V

C*** . **CERAMIC CAP.**

(1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable) Temp. chara. 2B4 50V

C*** : **ELECTROLY CAP. (⇄)/FILM CAP. (⇌)**

(1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance ±20%

(2) DF15 -- 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

* In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED RERSONNEL ONLY – ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER–"

NOTE ON SAFETY:

Symbol ⚠ Fire or electrical shock hazard. Only original partrs should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.

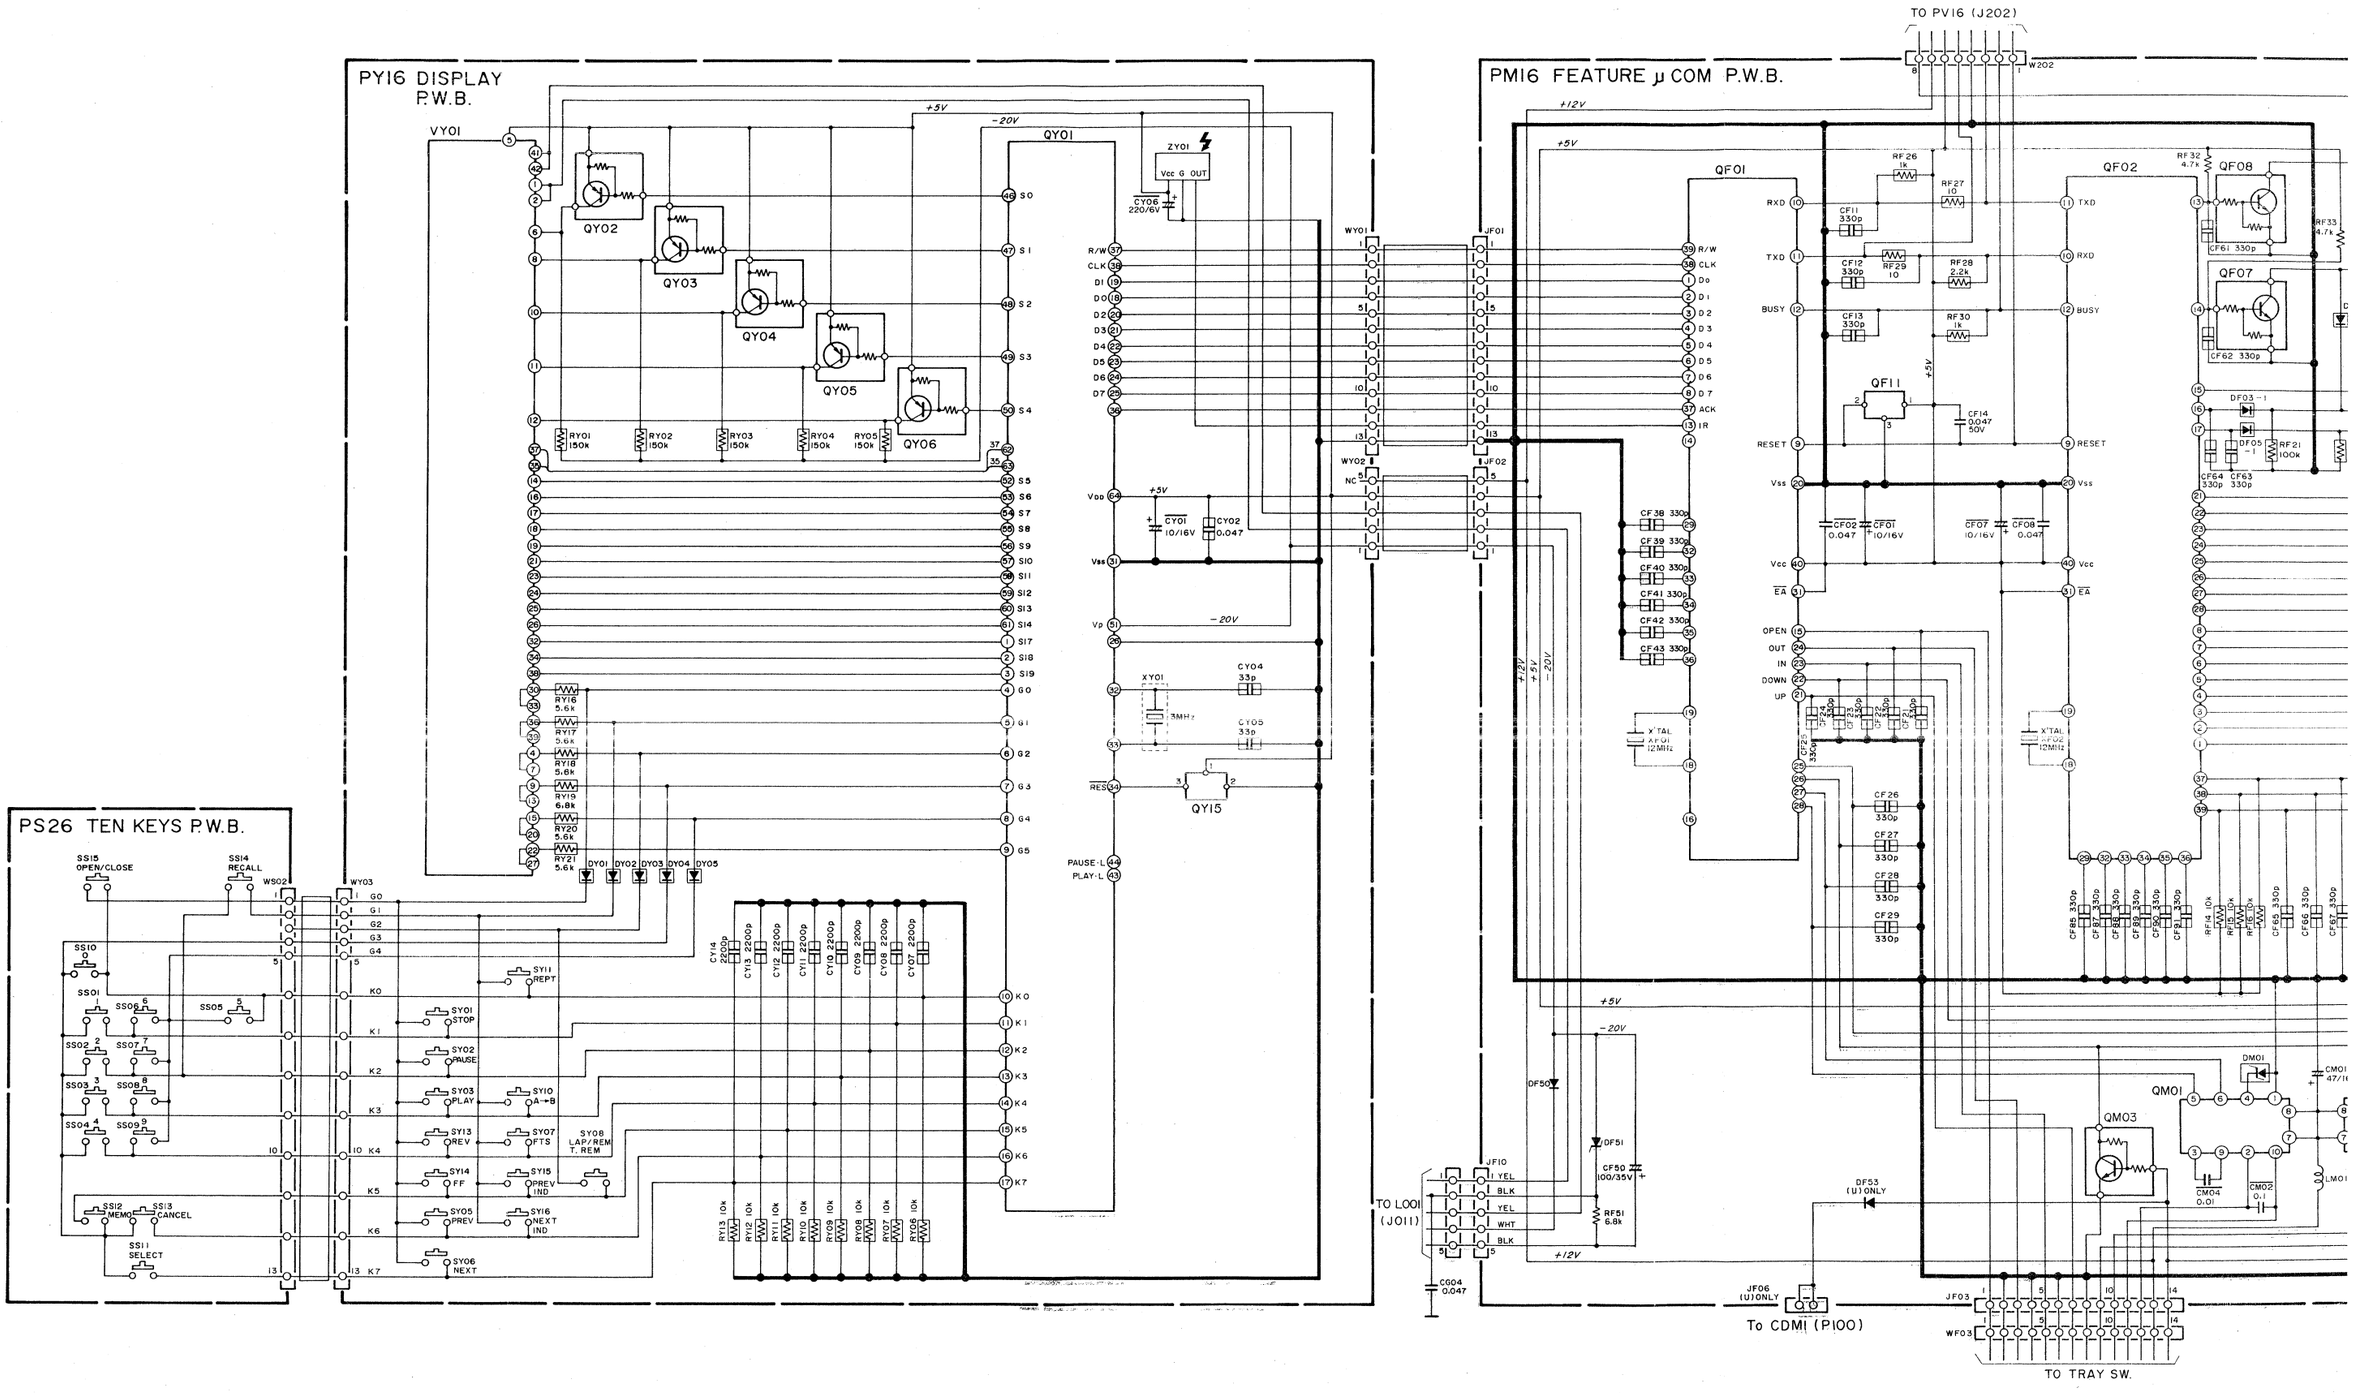
PY16 DISPLAY P.W.B.
PS26 TEN KEYS P.W.B.
PM16 FEATURE μ COM P.W.B.
TO PV16 (J202)
W202
VY01
QY01
QY02
QY03
QY04
QY05
QY06
QY15
ZY01
Vcc G OUT
CY06 220/6V
RY01 150k
RY02 150k
RY03 150k
RY04 150k
RY05 150k
RY16 5.6k
RY17 5.6k
RY18 5.6k
RY19 6.8k
RY20 5.6k
RY21 5.6k
DY01 DY02 DY03 DY04 DY05
WY01
WY02
WY03
WS02
JF01
JF02
JF10
JF06 (U) ONLY
JF03
WF03
XY01 3MHz
CY01 10/16V
CY02 0.047
CY04 33p
CY05 33p
CG04 0.047
SS15 OPEN/CLOSE
SS14 RECALL
SS10
SS01
SS06
SS05
SS02
SS07
SS03
SS08
SS04
SS09
SS12 MEMO
SS13 CANCEL
SS11 SELECT
SY11 REPT
SY01 STOP
SY02 PAUSE
SY03 PLAY
SY10 A→B
SY13 REV
SY07 FFS
SY08 LAP/REM T. REM
SY14 FF
SY15 REV IND
SY05 PREV
SY16 NEXT IND
SY06 NEXT
CY14 2200p
CY13 2200p
CY12 2200p
CY11 2200p
CY10 2200p
CY09 2200p
CY08 2200p
CY07 2200p
RY13 10k
RY12 10k
RY11 10k
RY10 10k
RY09 10k
RY08 10k
RY07 10k
RY06 10k
QF01
QF02
QF07
QF08
QF11
RF26 1k
RF27 1Ω
RF28 2.2k
RF29 10
RF30 1k
RF32 4.7k
RF33 4.7k
RF21 100k
CF11 330p
CF12 330p
CF13 330p
CF14 0.047 50V
CF61 330p
CF62 330p
CF63 330p
CF64 330p
CF01 10/16V
CF02 0.047
CF07 10/16V
CF08 0.047
CF38 330p
CF39 330p
CF40 330p
CF41 330p
CF42 330p
CF43 330p
CF26 330p
CF27 330p
CF28 330p
CF29 330p
X'TAL XF01 12MHz
X'TAL XF02 12MHz
DF03 -1
DF05 -1
DF50
DF51
DF53 (U) ONLY
CF50 100/35V
RF51 6.8k
QM01
QM03
DM01
CM04 0.01
CM02 0.1
LM01
TO LOOI (JO11)
To CDMI (P100)
TO TRAY SW.
+5V
-20V
+12V

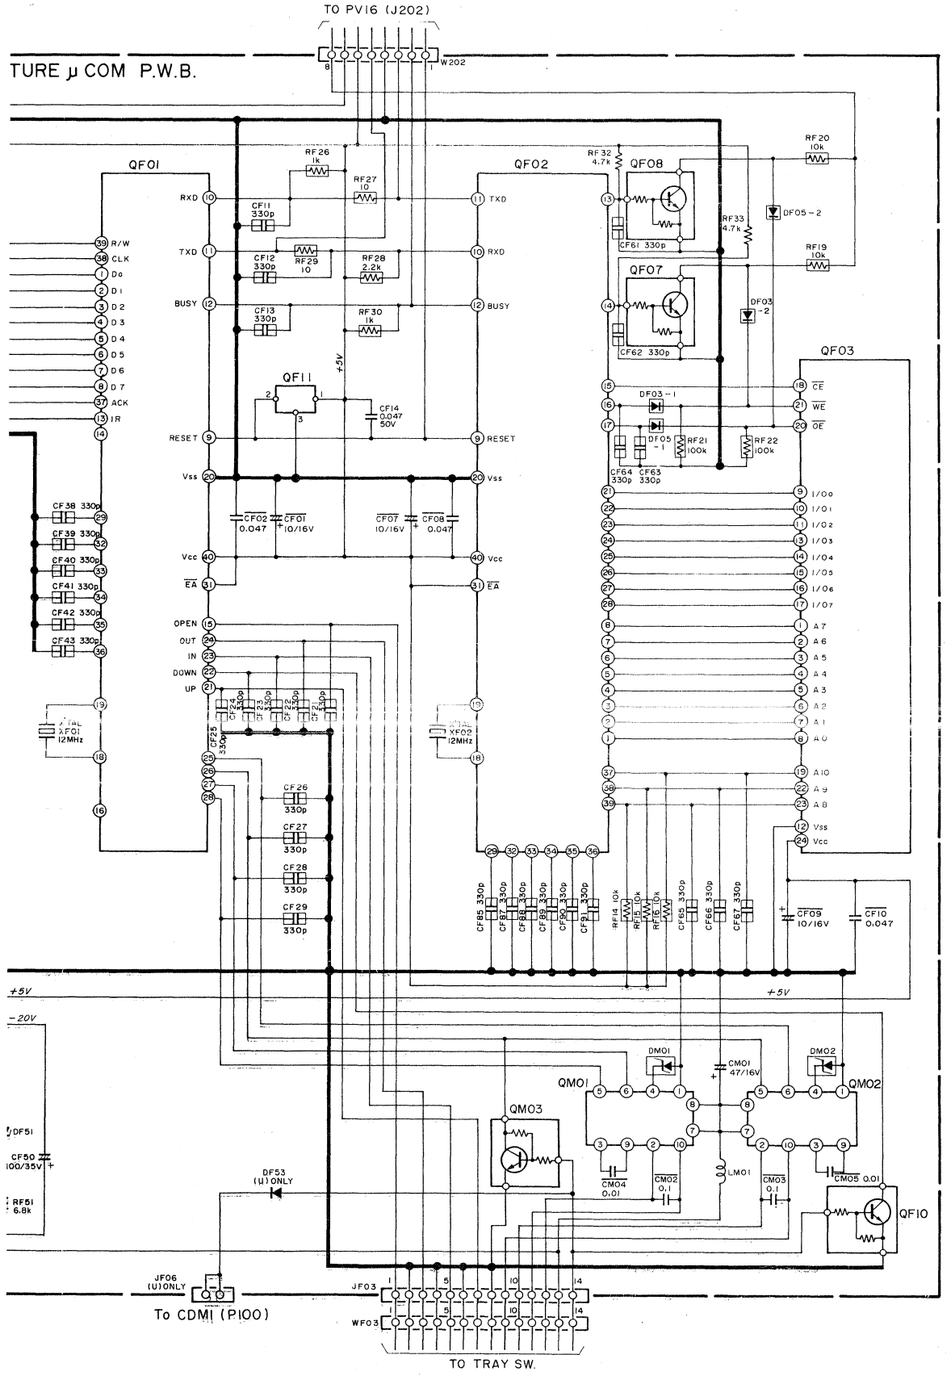

QY01
LC6554D

QY02～QY06
DTA114YK 10k/47k

QF11
PST524D

QY15
PST523D

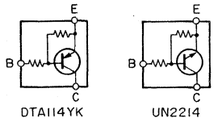

QM01,QM02
LB1645N

QF01
MSM83C154

QF02
MSM80C51



QF03
MSM2816A,XL2816A

QF07,QF08,QF10,QM03
UN2214 10k/47k

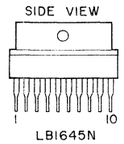

DY01～DY06
DF03,DF05
MA151K

DY51,DY52,DF50,DF53
RL103E,DSF10C

DM01,DM02
02CZ8.2

DF51
5.6V ZENER

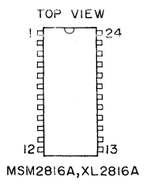





Kind of Common Parts

RESISTOR

R*** (1) GD05 -- 140, Carbon film fixed resistor, ±5% 1/4W
R*** (2) GD05 -- 160, Carbon film fixed resistor, ±5% 1/6W

C*** : **CERAMIC CAP.**
(1) DD1 --- 370, Ceramic condenser, disc type (titan condenser) Temp. coeff. P350 ~ N1000 50V

C*** : **CERAMIC CAP.**
(1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable) Temp. chara. 2B4 50V

C*** : **ELECTROLY CAP. (⇌)/FILM CAP. (=)**
(1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance ±20%
(2) DF15 -- 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

★ In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED RERSONNEL ONLY – ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER–"

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original partrs should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.

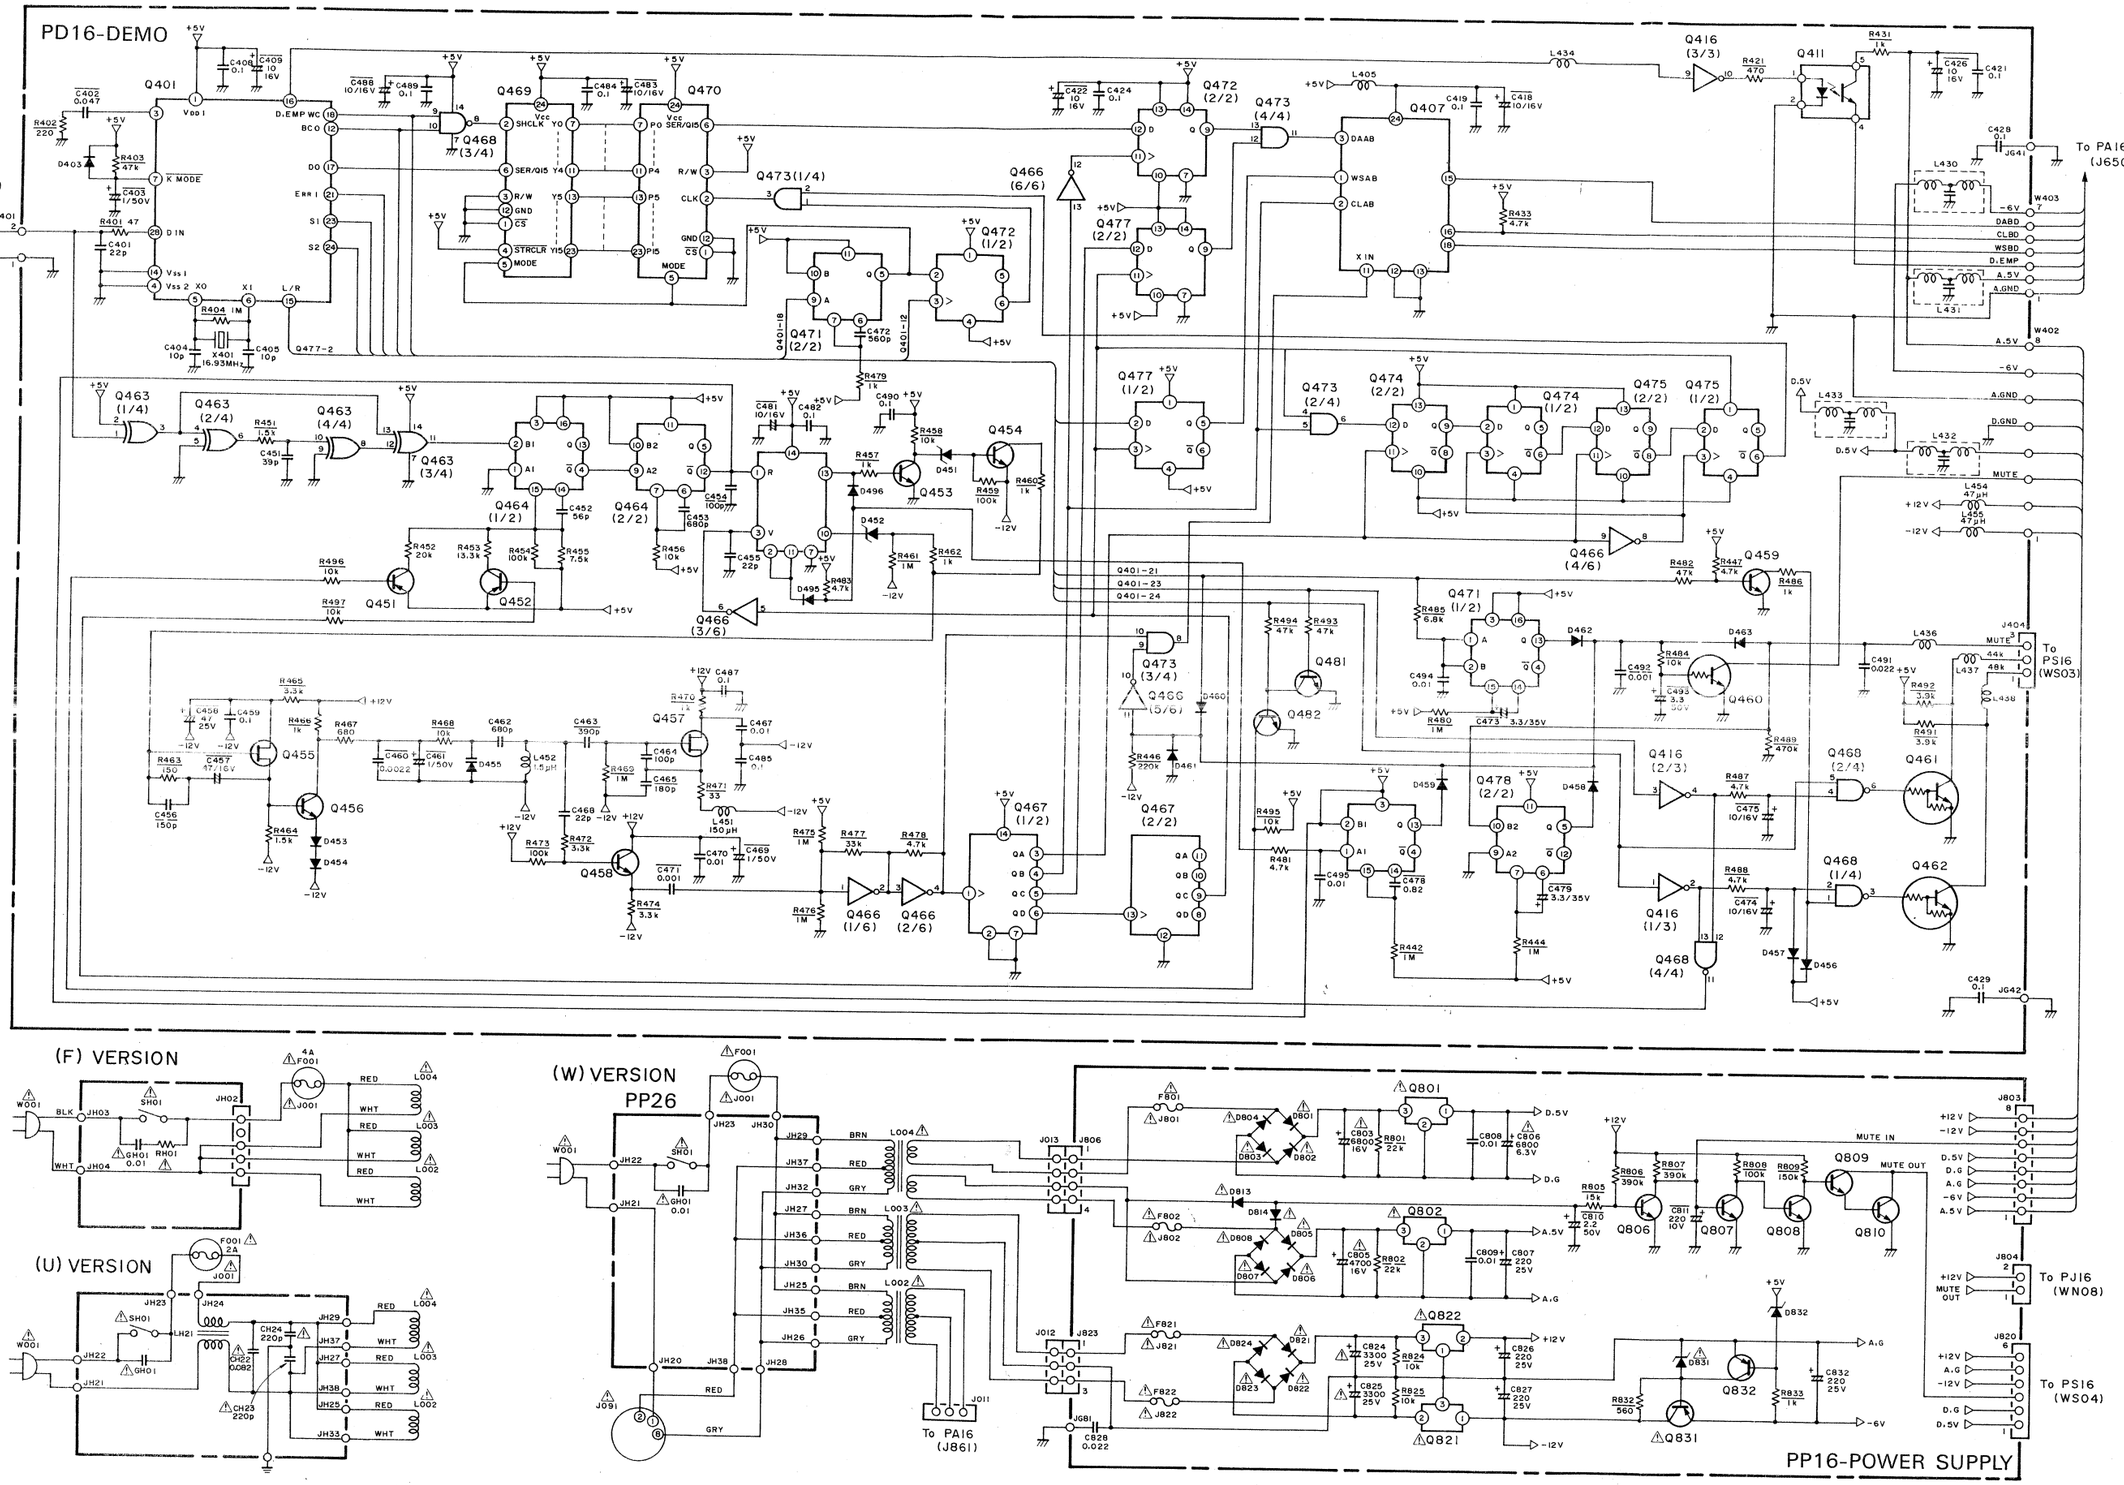
PD16-DEMO
To PA16 (J305)
To PA16 (J650)
Q401
Q407
Q411
Q416 (3/3)
Q416 (2/3)
Q416 (1/3)
Q416 (4/4)
Q463 (1/4)
Q463 (2/4)
Q463 (4/4)
Q463 (3/4)
Q464 (1/2)
Q464 (2/2)
Q466 (6/6)
Q466 (4/6)
Q466 (3/6)
Q466 (1/6)
Q466 (2/6)
Q466 (5/6)
Q466 (3/4)
Q467 (1/2)
Q467 (2/2)
Q468 (3/4)
Q468 (2/4)
Q468 (1/4)
Q468 (4/4)
Q469
Q470
Q471 (1/2)
Q471 (2/2)
Q472 (2/2)
Q472 (1/2)
Q473 (4/4)
Q473 (2/4)
Q473 (1/4)
Q473 (3/4)
Q474 (2/2)
Q474 (1/2)
Q475 (2/2)
Q475 (1/2)
Q477 (1/2)
Q477 (2/2)
Q478 (2/2)
Q481
Q482
Q451
Q452
Q453
Q454
Q455
Q456
Q457
Q458
Q459
Q460
Q461
Q462
Q471 (1/2)
Q496
Q497
Q498
Q499
Q501
Q502
Q503
Q504
Q505
Q506
Q507
Q508
Q509
Q510
Q511
Q512
Q513
Q514
Q515
Q516
Q517
Q518
Q519
Q520
Q521
Q522
Q523
Q524
Q525
Q526
Q527
Q528
Q529
Q530
Q531
Q532
Q533
Q534
Q535
Q536
Q537
Q538
Q539
Q540
Q541
Q542
Q543
Q544
Q545
Q546
Q547
Q548
Q549
Q550
Q551
Q552
Q553
Q554
Q555
Q556
Q557
Q558
Q559
Q560
Q561
Q562
Q563
Q564
Q565
Q566
Q567
Q568
Q569
Q570
Q571
Q572
Q573
Q574
Q575
Q576
Q577
Q578
Q579
Q580
Q581
Q582
Q583
Q584
Q585
Q586
Q587
Q588
Q589
Q590
Q591
Q592
Q593
Q594
Q595
Q596
Q597
Q598
Q599
Q600
Q601
Q602
Q603
Q604
Q605
Q606
Q607
Q608
Q609
Q610
Q611
Q612
Q613
Q614
Q615
Q616
Q617
Q618
Q619
Q620
Q621
Q622
Q623
Q624
Q625
Q626
Q627
Q628
Q629
Q630
Q631
Q632
Q633
Q634
Q635
Q636
Q637
Q638
Q639
Q640
Q641
Q642
Q643
Q644
Q645
Q646
Q647
Q648
Q649
Q650
Q651
Q652
Q653
Q654
Q655
Q656
Q657
Q658
Q659
Q660
Q661
Q662
Q663
Q664
Q665
Q666
Q667
Q668
Q669
Q670
Q671
Q672
Q673
Q674
Q675
Q676
Q677
Q678
Q679
Q680
Q681
Q682
Q683
Q684
Q685
Q686
Q687
Q688
Q689
Q690
Q691
Q692
Q693
Q694
Q695
Q696
Q697
Q698
Q699
Q700
Q701
Q702
Q703
Q704
Q705
Q706
Q707
Q708
Q709
Q710
Q711
Q712
Q713
Q714
Q715
Q716
Q717
Q718
Q719
Q720
Q721
Q722
Q723
Q724
Q725
Q726
Q727
Q728
Q729
Q730
Q731
Q732
Q733
Q734
Q735
Q736
Q737
Q738
Q739
Q740
Q741
Q742
Q743
Q744
Q745
Q746
Q747
Q748
Q749
Q750
Q751
Q752
Q753
Q754
Q755
Q756
Q757
Q758
Q759
Q760
Q761
Q762
Q763
Q764
Q765
Q766
Q767
Q768
Q769
Q770
Q771
Q772
Q773
Q774
Q775
Q776
Q777
Q778
Q779
Q780
Q781
Q782
Q783
Q784
Q785
Q786
Q787
Q788
Q789
Q790
Q791
Q792
Q793
Q794
Q795
Q796
Q797
Q798
Q799
Q800
Q801
Q802
Q803
Q804
Q805
Q806
Q807
Q808
Q809
Q810
Q811
Q812
Q813
Q814
Q815
Q816
Q817
Q818
Q819
Q820
Q821
Q822
Q823
Q824
Q825
Q826
Q827
Q828
Q829
Q830
Q831
Q832
Q833
Q834
Q835
Q836
Q837
Q838
Q839
Q840
Q841
Q842
Q843
Q844
Q845
Q846
Q847
Q848
Q849
Q850
Q851
Q852
Q853
Q854
Q855
Q856
Q857
Q858
Q859
Q860
Q861
Q862
Q863
Q864
Q865
Q866
Q867
Q868
Q869
Q870
Q871
Q872
Q873
Q874
Q875
Q876
Q877
Q878
Q879
Q880
Q881
Q882
Q883
Q884
Q885
Q886
Q887
Q888
Q889
Q890
Q891
Q892
Q893
Q894
Q895
Q896
Q897
Q898
Q899
Q900
Q901
Q902
Q903
Q904
Q905
Q906
Q907
Q908
Q909
Q910
Q911
Q912
Q913
Q914
Q915
Q916
Q917
Q918
Q919
Q920
Q921
Q922
Q923
Q924
Q925
Q926
Q927
Q928
Q929
Q930
Q931
Q932
Q933
Q934
Q935
Q936
Q937
Q938
Q939
Q940
Q941
Q942
Q943
Q944
Q945
Q946
Q947
Q948
Q949
Q950
Q951
Q952
Q953
Q954
Q955
Q956
Q957
Q958
Q959
Q960
Q961
Q962
Q963
Q964
Q965
Q966
Q967
Q968
Q969
Q970
Q971
Q972
Q973
Q974
Q975
Q976
Q977
Q978
Q979
Q980
Q981
Q982
Q983
Q984
Q985
Q986
Q987
Q988
Q989
Q990
Q991
Q992
Q993
Q994
Q995
Q996
Q997
Q998
Q999
Q1000
(F) VERSION
(U) VERSION
(W) VERSION
PP26
PP16-POWER SUPPLY
To PS16 (WS03)
To PS16 (WS04)
To PJ16 (WN08)
To PA16 (J861)
Q401 YM2637B
Q407 SAA7220P/B
Q411 TLP570
Q416,Q466 TC74HCU04P
Q451,Q452 Q832 2SA1175(FF,E
Q453,Q454,Q Q481,Q482 2SC2785(FF,
Q455 2SK30ATM
Q456 2SC1815(Y)
Q457 2SK161(GR)
Q458 2SC2347
Q460 DTC144TS
Q461,Q462 DTC124EX
Q463 TC74HC86P
Q464,Q471,Q TC74HC123P
Q465 MC4044P
Q467 TC74HC393P
Q468 TC74HC00P
Q469 HD74HC673
Q470 HD74HC674
Q472,Q474,Q Q477 TC74HC74P
Q473 TC74HC08P

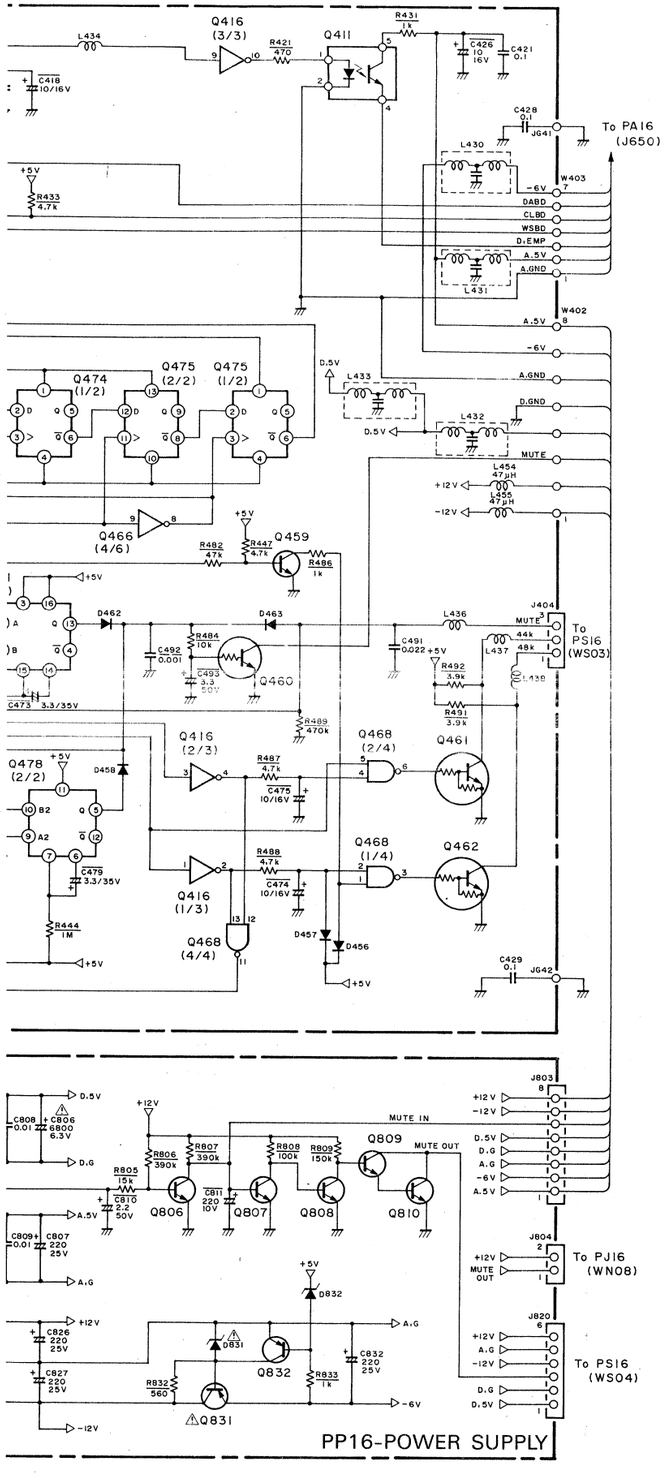

Q401	Q801,Q802	TOP VIEW
YM2637B	NJM7805	
Q407	Q806~Q810	TLP570
SAA7220P/B	2SC536SP,etc.	TOP VIEW
Q411	Q821	
TLP570	NJM79M12A	
Q416,Q466	Q822	
TC74HCU04P	NJM7812	TC74HCU04P TC74HC86P TC74HC393P TC74HC00P TC74HC74P TC74HC08P
Q451,Q452 Q832	Q831	
2SA1175(FF,EF)	2SA1358(Q,Y)	
Q453,Q454,Q459 Q481,Q482	D403,D456~D463 D495,D496	TOP VIEW
2SC2785(FF,EF)	ISS176,etc.	
Q455	D451,D452	
2SK30ATM	I2V	MC4044P
Q456	D453,D454	
2SC1815(Y)	MA27A	TOP VIEW
Q457	D455	
2SK161(GR)	SVC321SD	
Q458	D801~D804	TC74HC123P
2SC2347	U05B	
Q460	D805~D808,D813 D814,D821~D824	TOP VIEW
DTC144TS	W06B	
Q461,Q462	D831	
DTC124EX	RD6.8EB2	
Q463	D832	HD74HC673 HD74HC674
TC74HC86P	4.7V	
Q464,Q471,Q478		
TC74HC123P		TOP VIEW
Q465		
MC4044P		SAA7220P/B
Q467		TOP VIEW
TC74HC393P		
Q468		YM2637B
TC74HC00P		
Q469		
HD74HC673		
Q470		
HD74HC674		
Q472,Q474,Q475 Q477		
TC74HC74P		
Q473		
TC74HC08P		

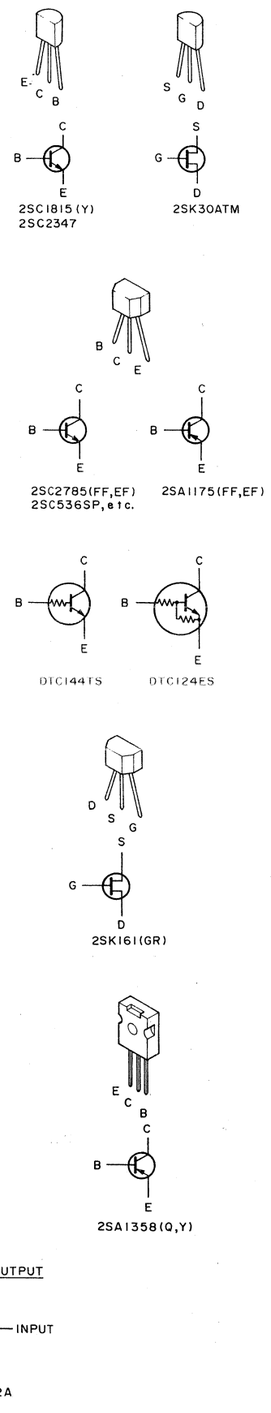

Kind of Common Parts

RESISTOR

R*** (1) GD05 -- 140, Carbon film fixed resistor, ±5% 1/4W
R*** (2) GD05 -- 160, Carbon film fixed resistor, ±5% 1/6W

C*** : **CERAMIC CAP.**
(1) DD1 --- 370, Ceramic condenser, disc type (titan condenser) Temp. coeff. P350 ~ N1000 50V

C*** : **CERAMIC CAP.**
(1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable) Temp. chara. 2B4 50V

C*** : **ELECTROLY CAP. (⇌)/FILM CAP. (=)**
(1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance ±20%
(2) DF15 -- 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

★ In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED RERSONNEL ONLY – ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER–"

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original partrs should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.

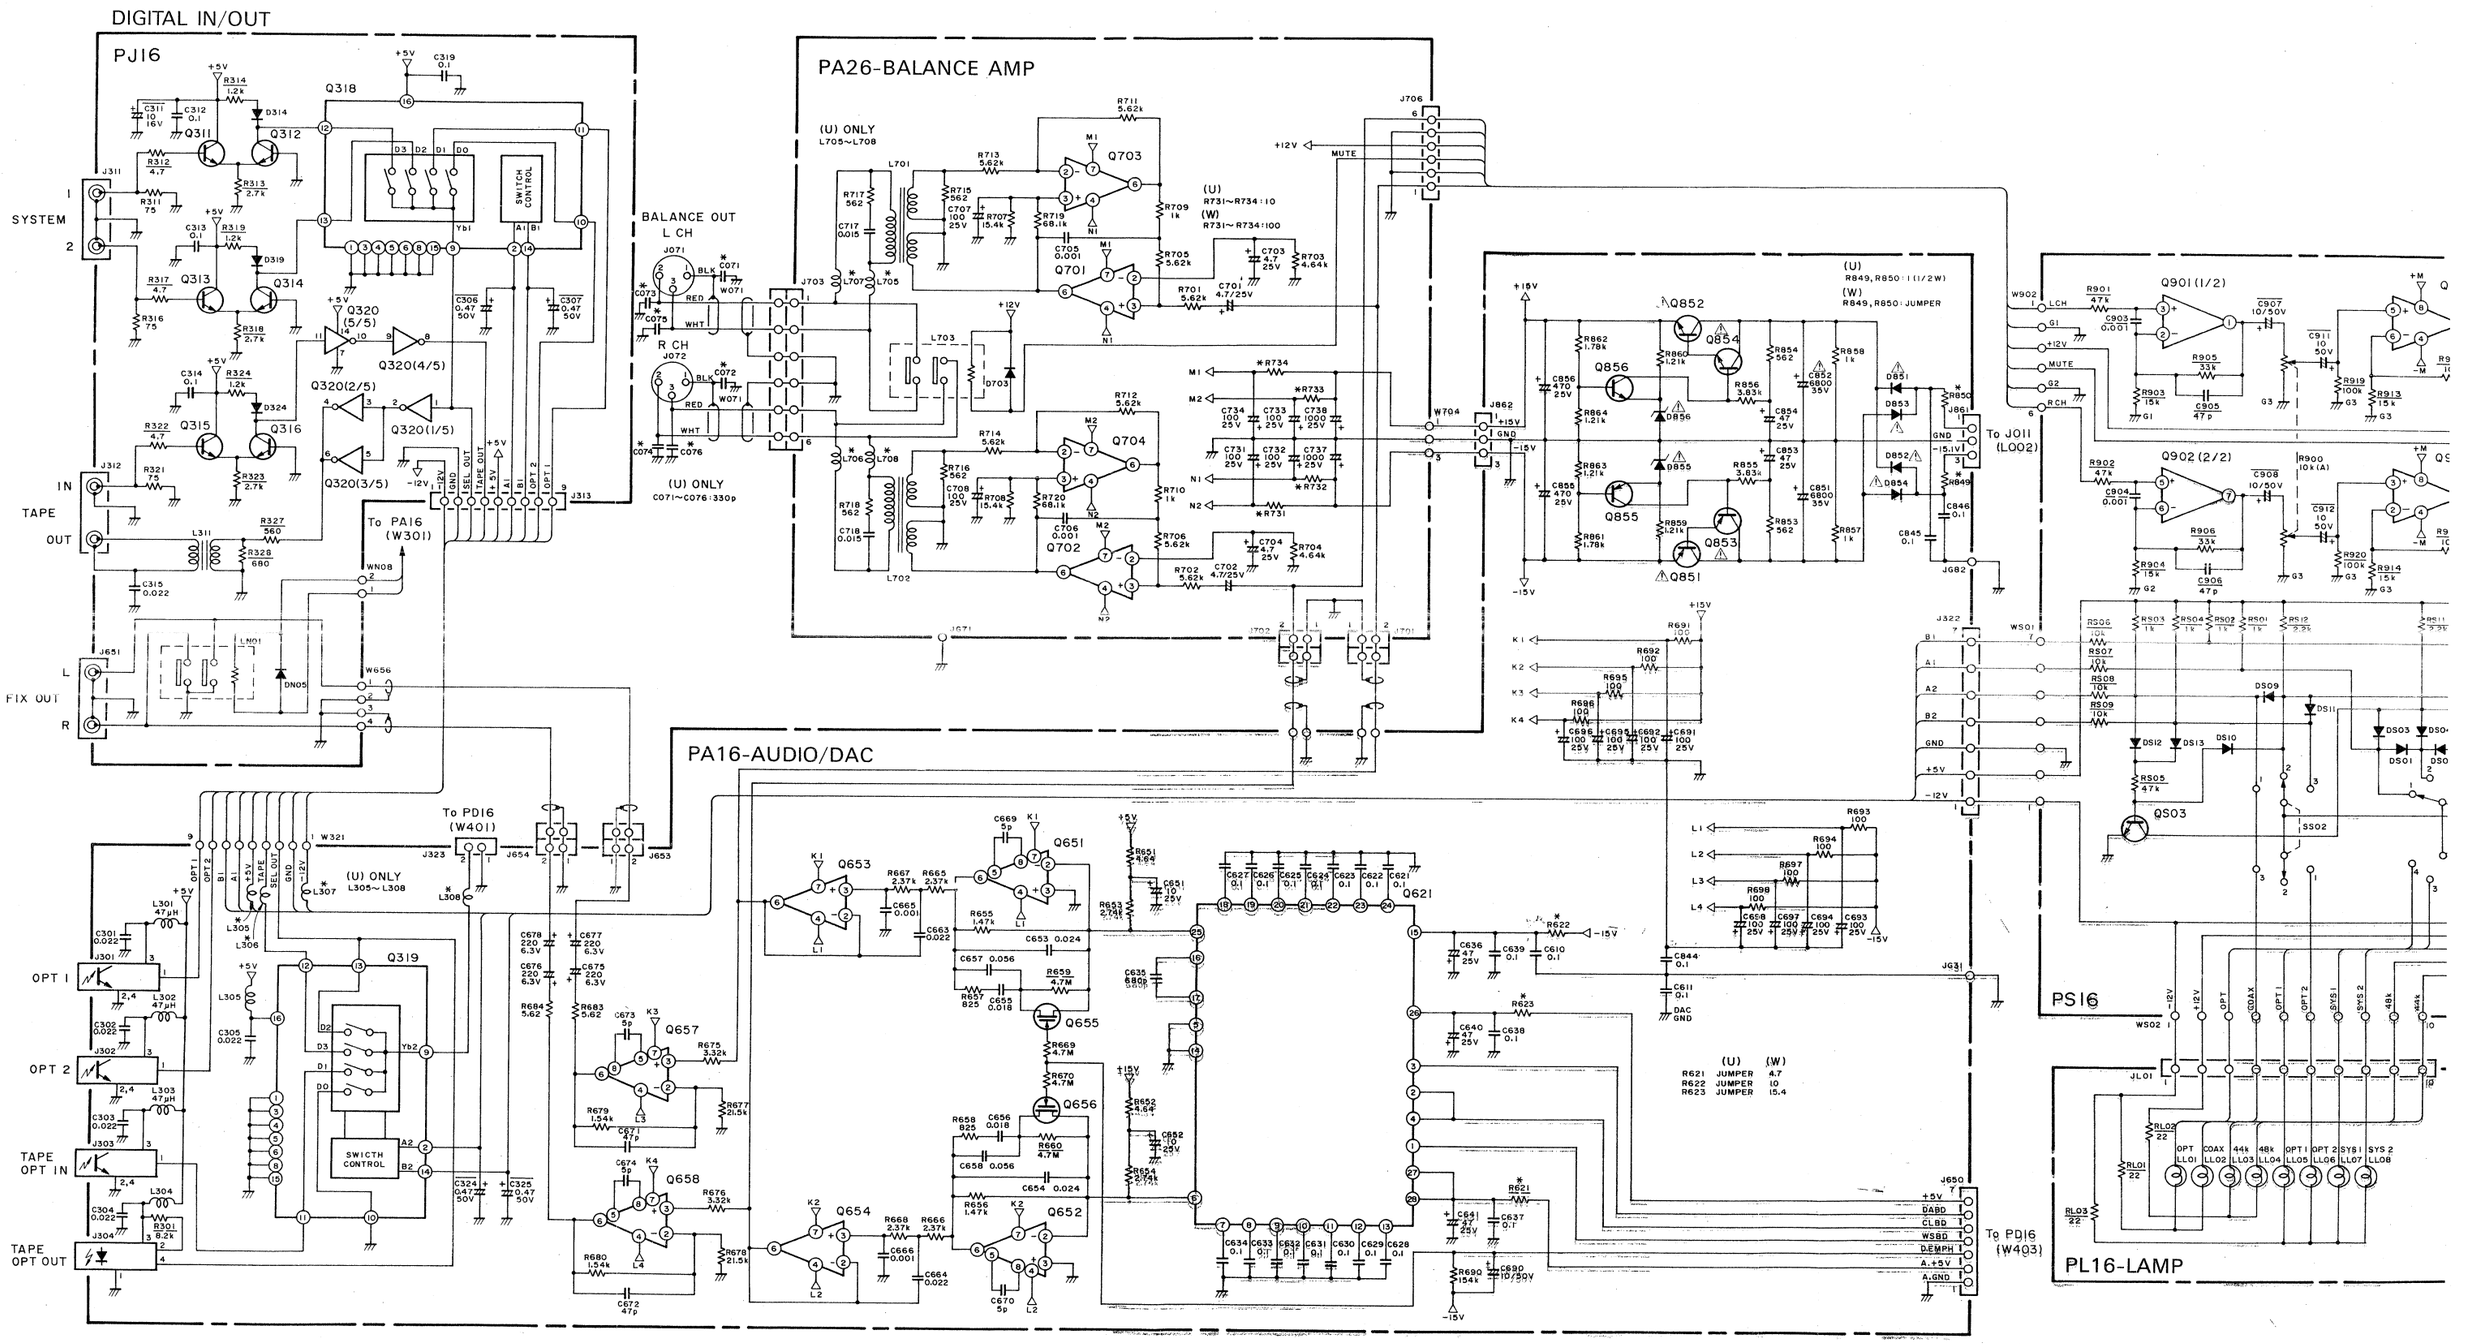
DIGITAL IN/OUT
PJ16
PA26-BALANCE AMP
PA16-AUDIO/DAC
PS16
PL16-LAMP
SYSTEM
TAPE
FIX OUT
BALANCE OUT
L CH
R CH
(U) ONLY
L705~L708
(U) ONLY
L305~L308
(U) ONLY
C071~C076:330p
To PA16
(W301)
To PD16
(W401)
To JO11
(LO02)
To PD16
(W403)
SWITCH CONTROL
SWITCH CONTROL
(U) (W)
R621 JUMPER 4.7
R622 JUMPER 10
R623 JUMPER 15.4
(U) R849,R850:1(1/2W)
(W) R849,R850:JUMPER
(U) R731~R734:10
(W) R731~R734:100
Q318
Q319
Q320(5/5)
Q320(4/5)
Q320(2/5)
Q320(1/5)
Q320(3/5)
Q311
Q312
Q313
Q314
Q315
Q316
Q703
Q701
Q704
Q702
Q852
Q854
Q856
Q855
Q853
Q851
Q901(1/2)
Q902(2/2)
Q651
Q653
Q652
Q654
Q655
Q656
Q657
Q658
Q621
QS03
SS02
DS01
DS02
DS03
DS04
DS05
DS06
DS07
DS08
DS09
DS10
DS11
DS12
DS13
DN05
OPT I
OPT 2
TAPE OPT IN
TAPE OPT OUT
OPT
COAX
44k
48k
OPT 1
OPT 2
SYS 1
SYS 2
LL01
LL02
LL03
LL04
LL05
LL06
LL07
LL08

MZ 2133

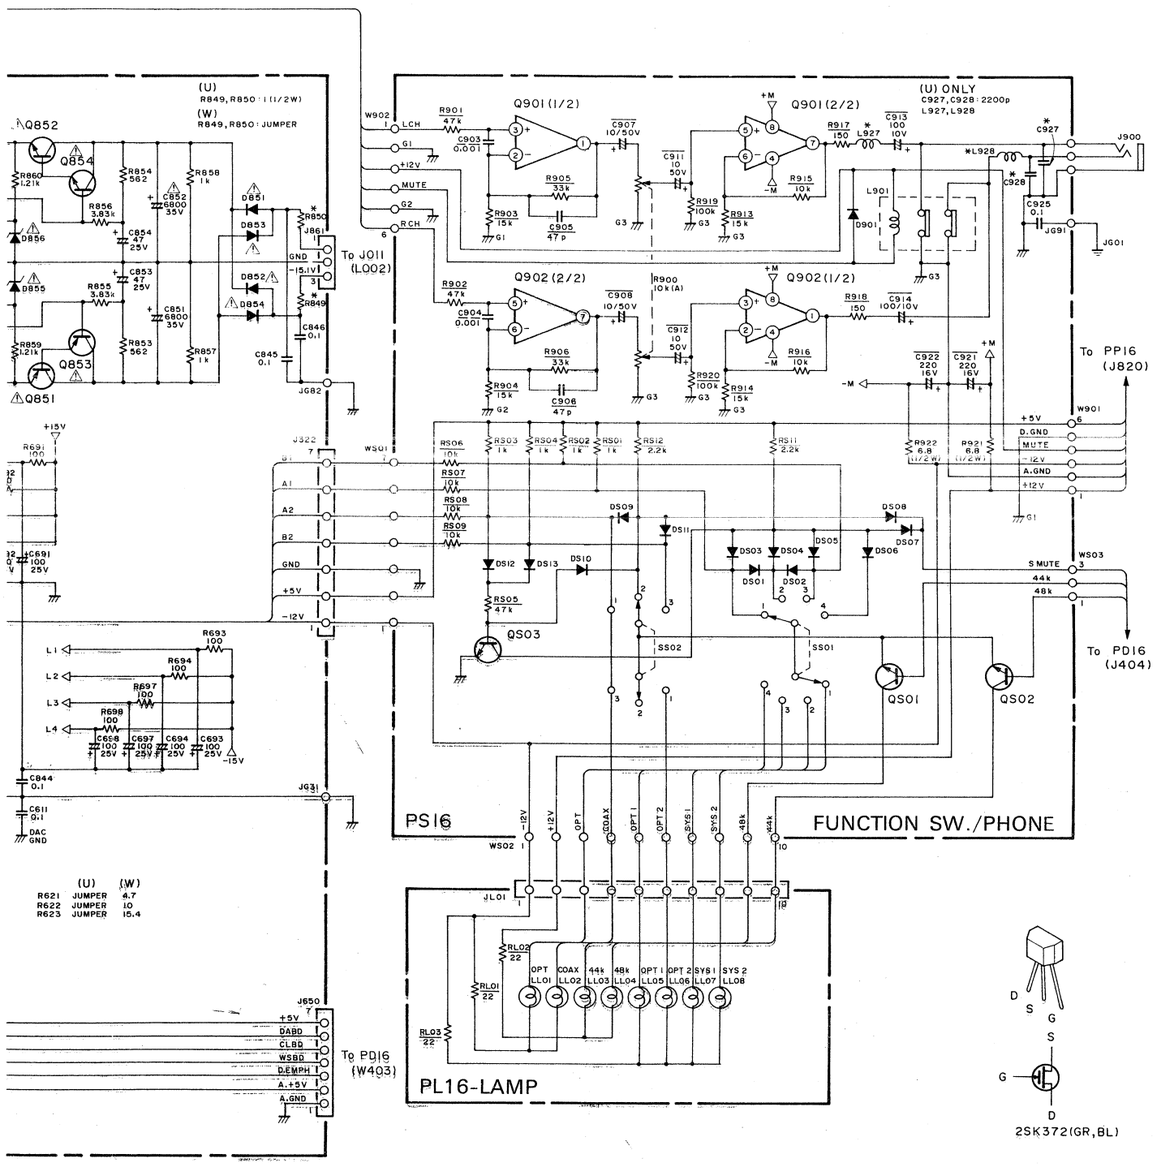

2SK372(GR,BL)

Q311~Q316

2SC3732(L)

Q318,Q319

TC74HC153P

Q320

TC74HC04P

Q621

TDA1541A/S1

Q651~Q654,Q657
Q658,Q701~Q704

NJM5534D

Q655,Q656

2SK372(GR,BL)

Q851

2SB507(D)

Q852

2SD313(D)

Q853

2SA1048(GR)

Q854,QS01,QS02

2SC2458(O,Y)

Q855

2SA1175(FF,EF)

Q856,QS01

2SC2785(FF,EF)

Q901,Q902

NJM4558D

D314,D319,D324
D901,DN05,DS01~DS13

1SS176,etc.

D703

1SS155,etc.

D851~D854

30DF2

D855,D856

H26L(3)

TOP VIEW

NJM5534D
NJM4556D

TOP VIEW



TC74HC04P

TOP VIEW



TC74HC153P

TOP VIEW



TDA1541A/S1

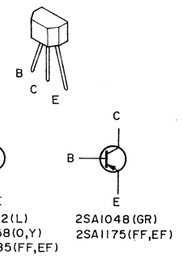

2SC3732(L)
2SC2458(O,Y)
2SC2785(FF,EF)

2SA1048(GR)
2SA1175(FF,EF)

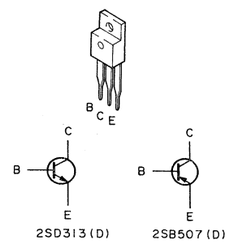

2SD313(D)

2SB507(D)

Kind of Common Parts

RESISTOR

R*** (1) GD05 - - 140, Carbon film fixed resistor, ±5% 1/4W

R*** (2) GD05 - - 160, Carbon film fixed resistor, ±5% 1/6W

C*** : **CERAMIC CAP.**

(1) DD1 - - - 370, Ceramic condenser, disc type (titan condenser) Temp. coeff. P350 ~ N1000 50V

C*** : **CERAMIC CAP.**

(1) DK16 - - 300, High dielectric constant ceramic condenser, disc type (titan variable) Temp. chara. 2B4 50V

C*** : **ELECTROLY CAP. (⧧)/FILM CAP. (⥤)**

(1) EA - - - - - 10, Electrolytic condenser, one-way lead type, tolerance ±20%

(2) DF15 - - 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

★ In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED RERSONNEL ONLY – ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER–"

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original partrs should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.

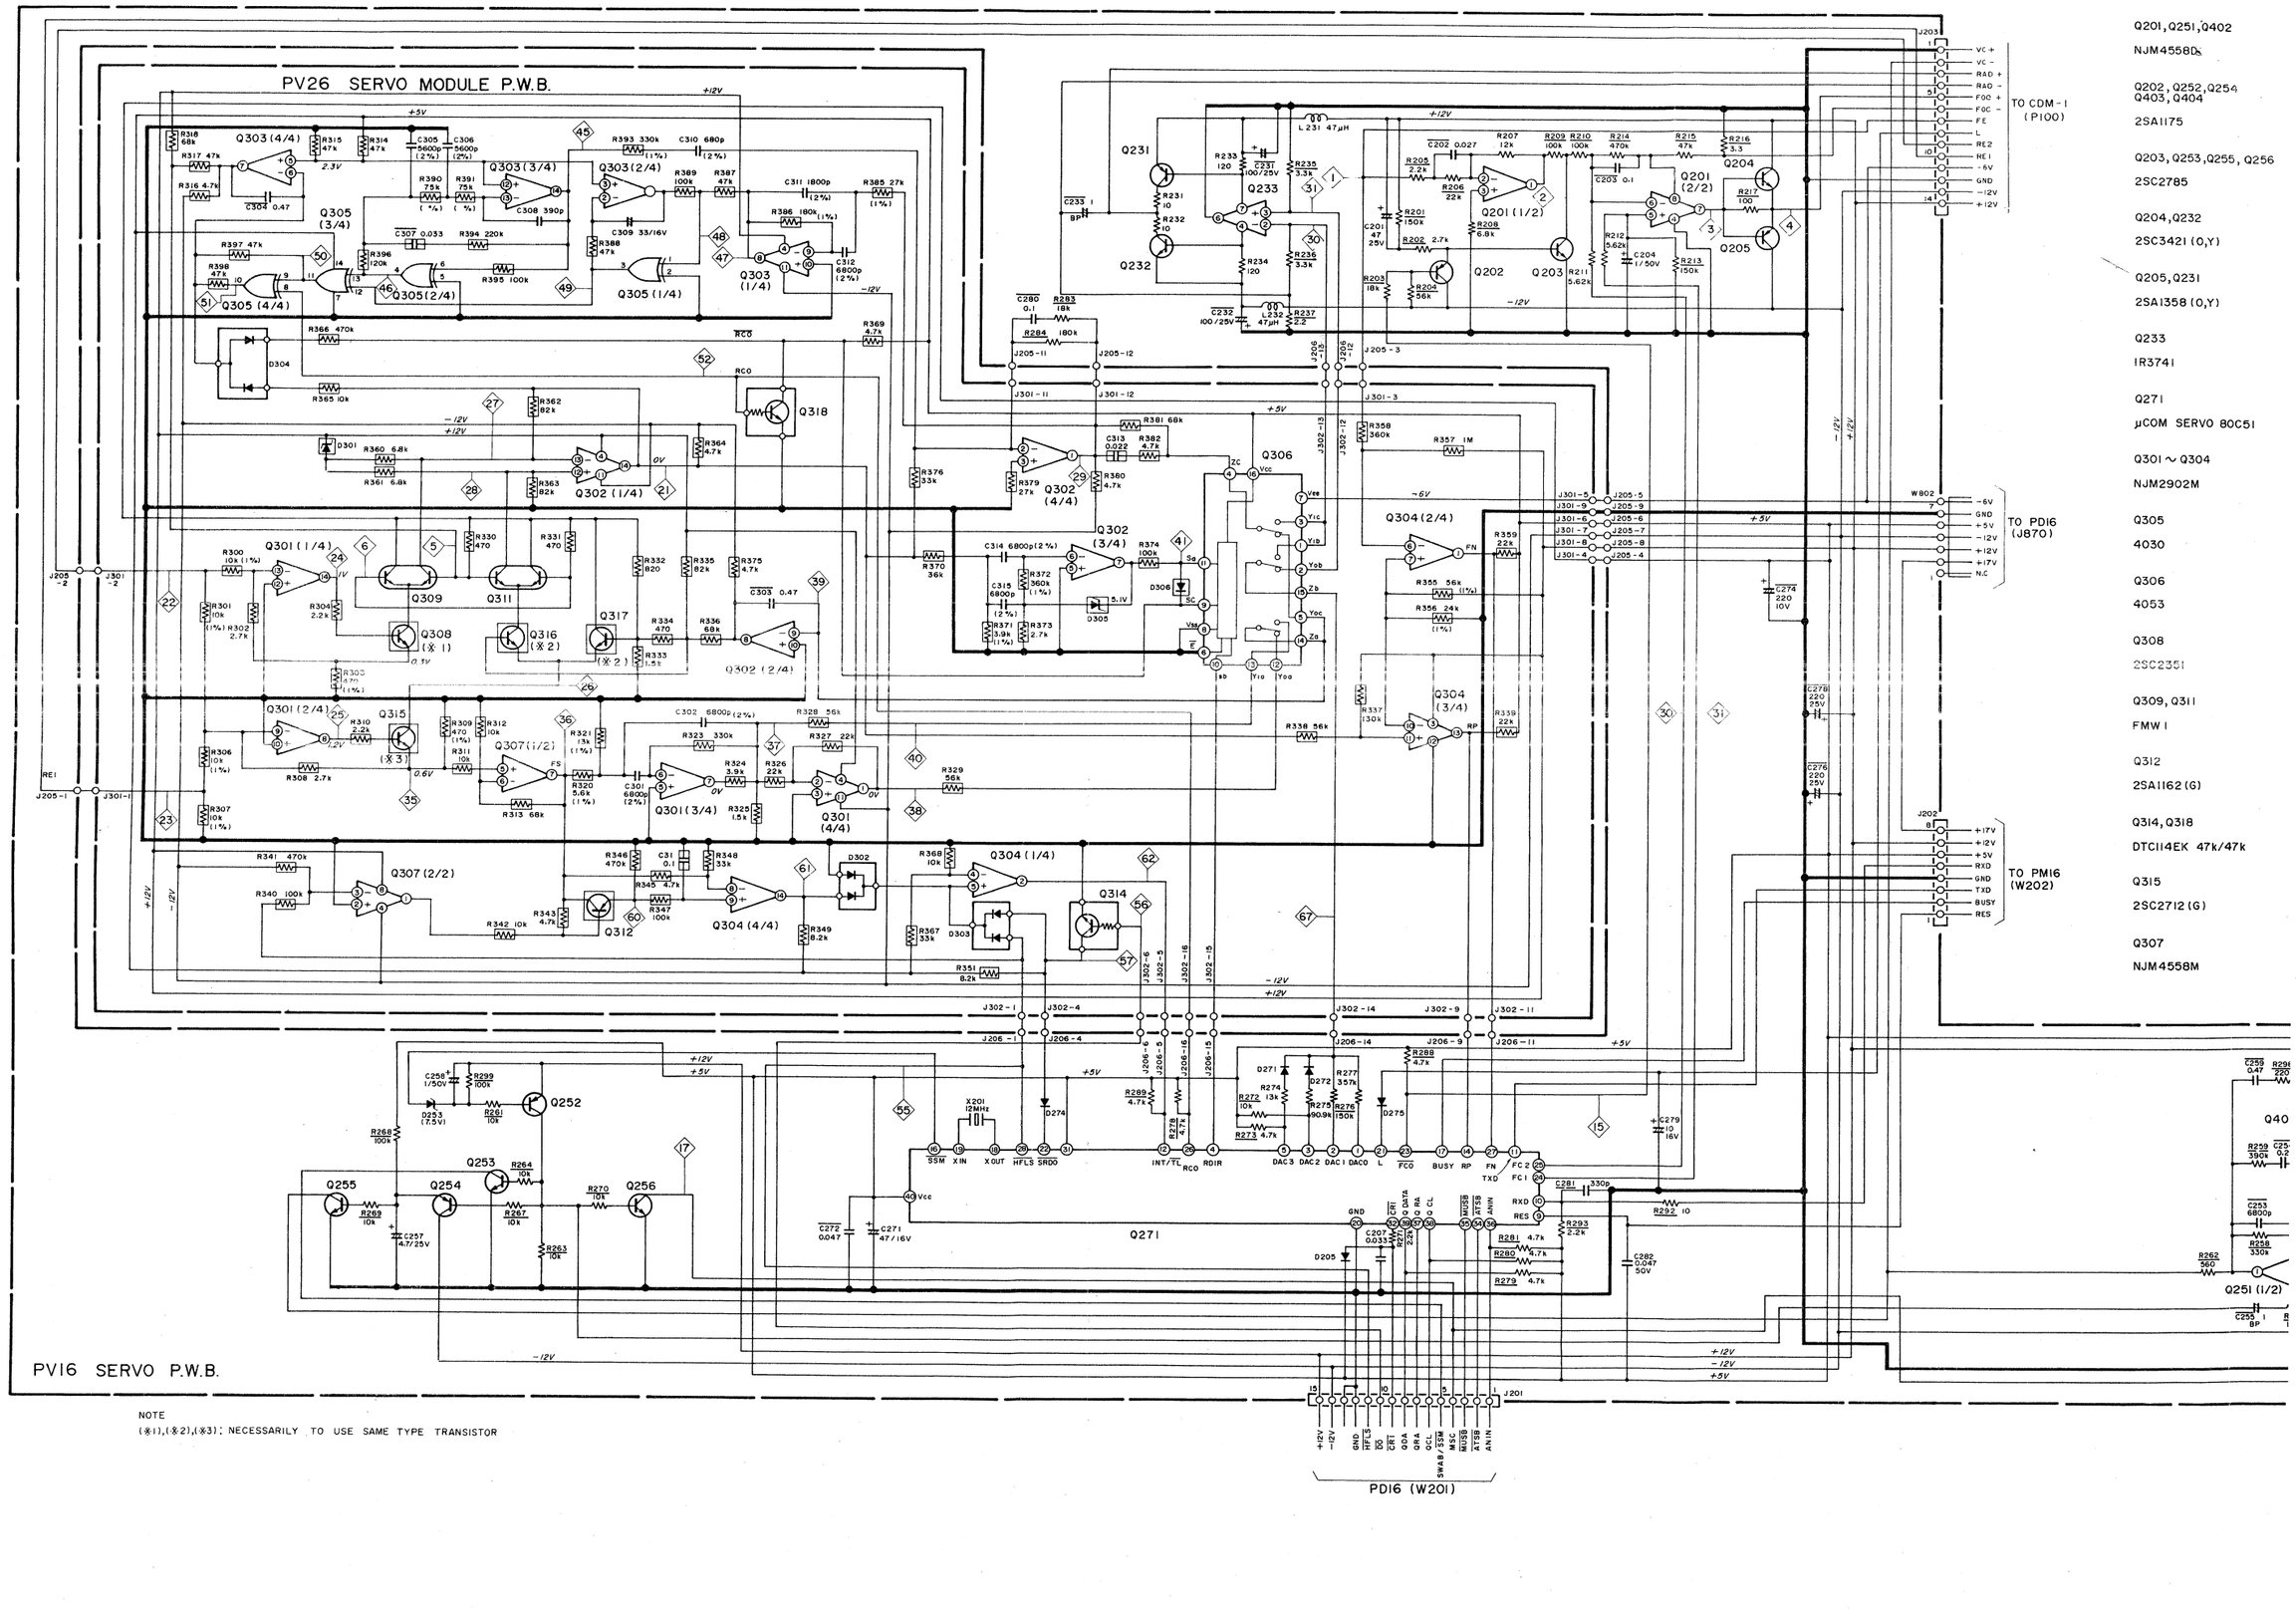
PV26 SERVO MODULE P.W.B.
PV16 SERVO P.W.B.
TO CDM-1 (P100)
TO PDI6 (J870)
TO PM16 (W202)
PDI6 (W201)
Q271
Q201,Q251,Q402
NJM4558D
Q202,Q252,Q254 Q403,Q404
2SA1175
Q203,Q253,Q255, Q256
2SC2785
Q204,Q232
2SC3421(O,Y)
Q205,Q231
2SA1358(O,Y)
Q233
IR3741
Q271
μCOM SERVO 80C51
Q301 ~ Q304
NJM2902M
Q305
4030
Q306
4053
Q308
2SC2351
Q309, Q311
FMW1
Q312
2SA1162(G)
Q314, Q318
DTC114EK 47k/47k
Q315
2SC2712(G)
Q307
NJM4558M
NOTE
(※1),(※2),(※3): NECESSARILY TO USE SAME TYPE TRANSISTOR

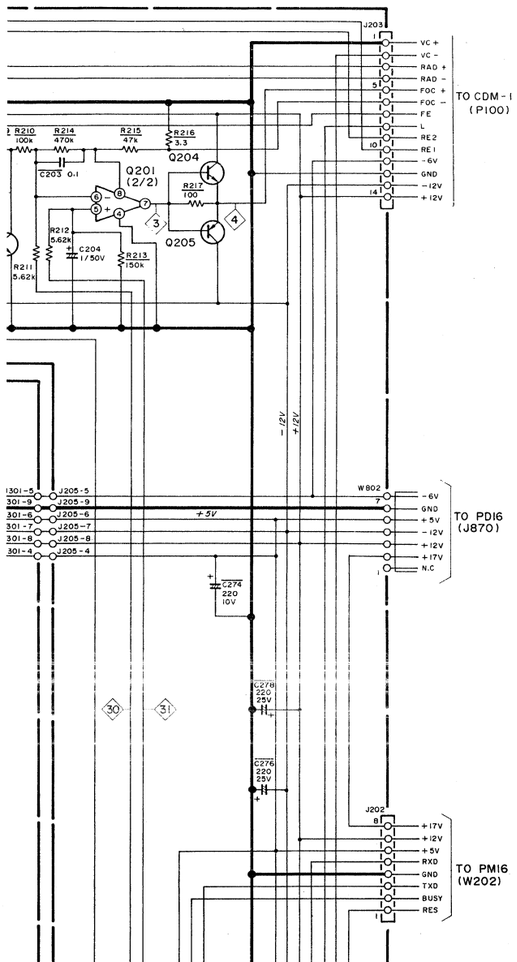

Q201,Q251,Q402
NJM4558D

Q202,Q252,Q254
Q403,Q404
2SA1175

Q203,Q253,Q255,Q256
2SC2785

Q204,Q232
2SC3421(O,Y)

Q205,Q231
2SA1358(O,Y)

Q233
IR3741

Q271
μCOM SERVO 80C51

Q301～Q304
NJM2902M

Q305
4030

Q306
4053

Q308
2SC2351

Q309,Q311
FMW1

Q312
2SA1162(G)

Q314,Q318
DTC114EK 47k/47k

Q315
2SC2712(G)

Q307
NJM4558M

Q316,Q317
2SC1009

Q405,Q406
2SK372(GR,BL)

Q407
2SD1862(Q,R)

D205,D271,D272
D274,D275
ISS1555,ISS2473,etc.

D253
7.5V ZENER

D301
2.4V ZENER

D302,D303
MA151WK

D304
MA153

D305
5.1V ZENER

D401
5.6V ZENER

D306
MA151K

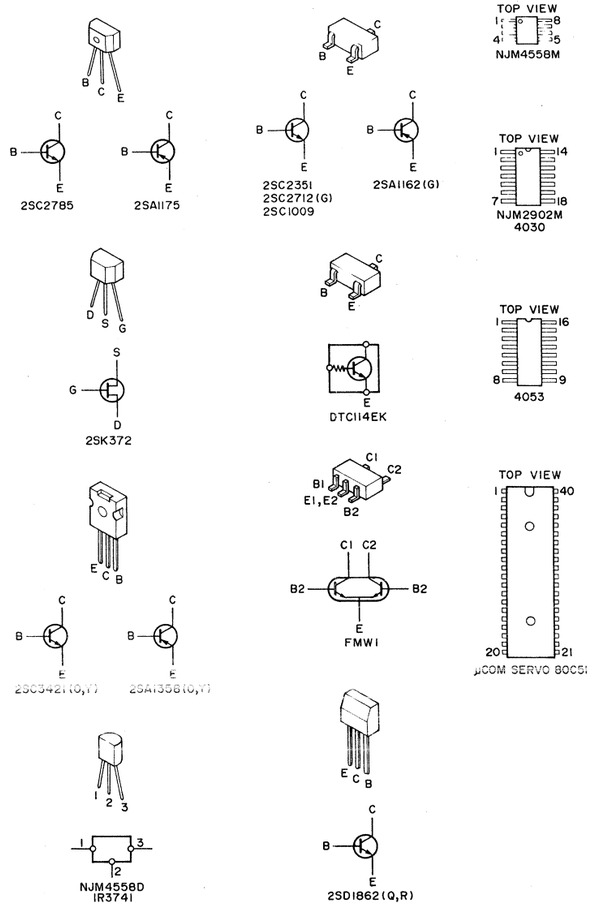

Kind of Common Parts

RESISTOR

R*** (1) GD05 - - 140, Carbon film fixed resistor, ±5% 1/4W
R*** (2) GD05 - - 160, Carbon film fixed resistor, ±5% 1/6W

C*** : **CERAMIC CAP.**
(1) DD1 - - - 370, Ceramic condenser, disc type (titan condenser) Temp. coeff. P350 ~ N1000 50V

C*** : **CERAMIC CAP.**
(1) DK16 - - 300, High dielectric constant ceramic condenser, disc type (titan variable) Temp. chara. 2B4 50V

C*** : **ELECTROLY CAP. (⧧)/FILM CAP. (⥤)**
(1) EA - - - - - 10, Electrolytic condenser, one-way lead type, tolerance ±20%
(2) DF15 - - 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

★ In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED RERSONNEL ONLY – ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER–"

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original partrs should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.

Q101	Q104	Q111	Q116,Q130,Q131	D101	D106
M50747-776FP	74HC14	PST520D	2SC2712(G,R)	5.0V ZENER	MA151T
Q102	Q105	Q112,Q113,Q129	Q201	D102,D103,D104 D301	D109,D110
TC54256AF	74HC139	2SA1162(G,R)	HD44780	MA-151K	TLN105B
Q103	Q106	Q114	Q202	D301	D119
TC5565	74HC74	2SC2411K	HD44100H	MA-151K	TPS703

P506-MAIN

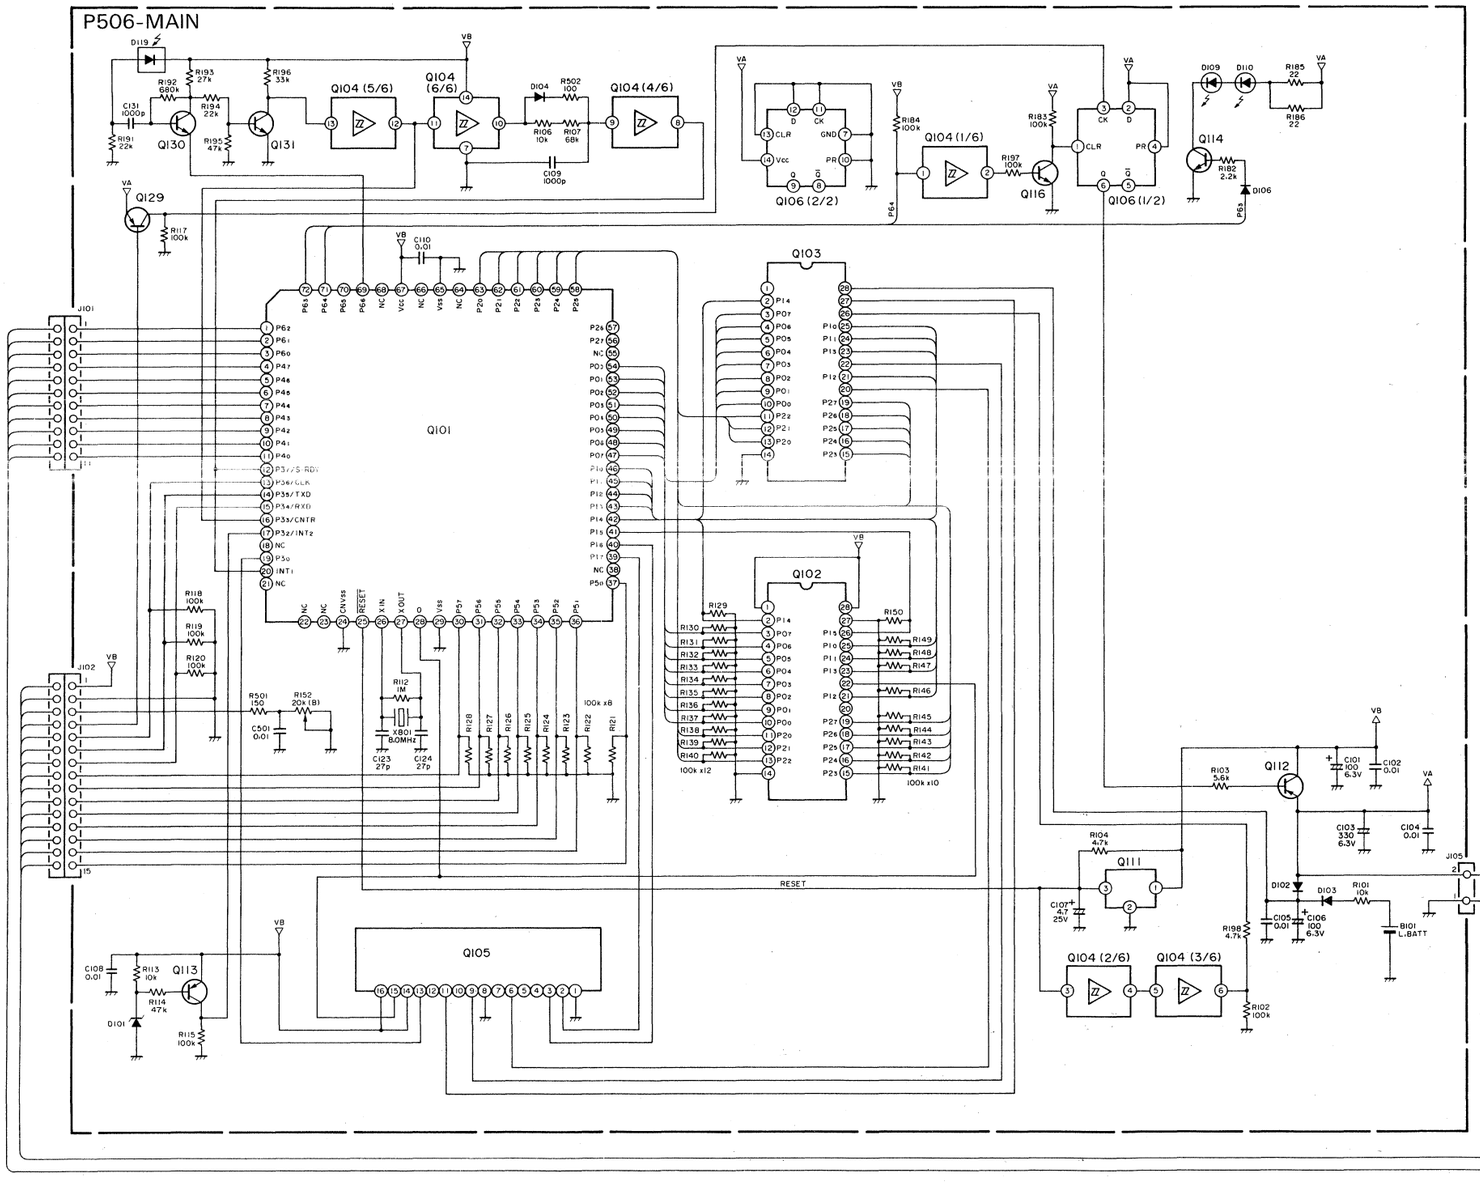

P606-KEY

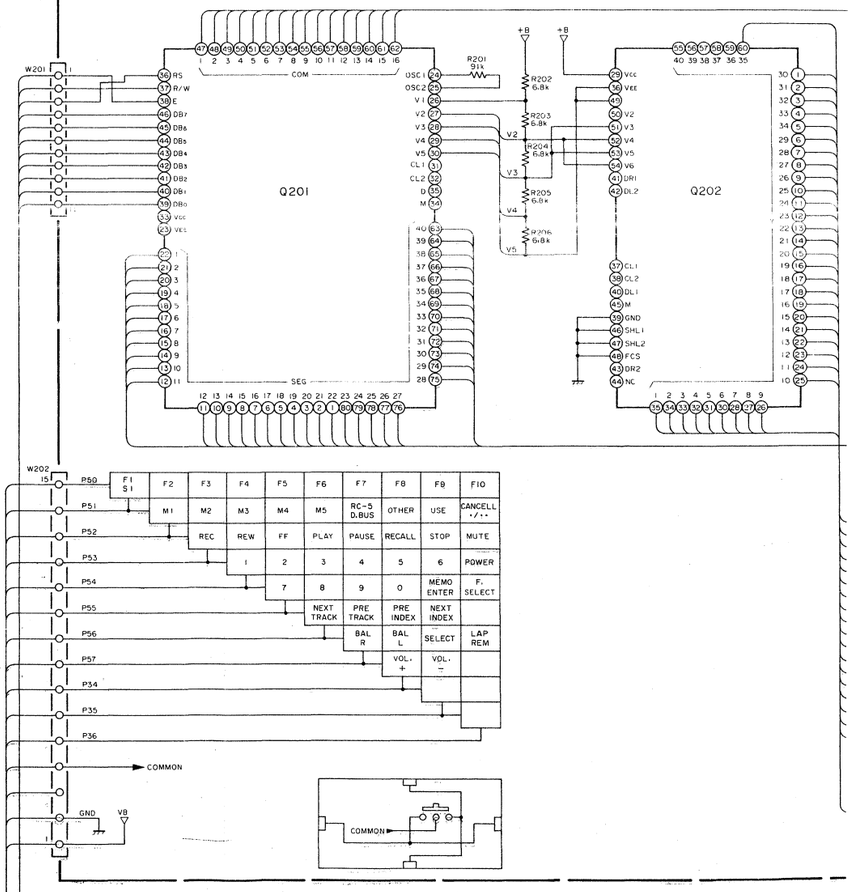

	Q104	Q111	Q116, Q130, Q131	D101	D106
17-776FP	74HC14	PST520D	2SC2712(G,R)	5.0V ZENER	MA151T
	Q105	Q112, Q113, Q129	Q201	D102, D103, D104 D301	D109, D110
256AF	74HC139	2SA1162(G,R)	HD44780	MA-151K	TLN105B
	Q106	Q114	Q202	D301	D119
5	74HC74	2SC2411K	HD44100H	MA-151K	TPS703

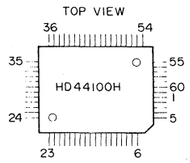

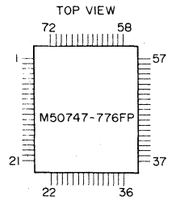

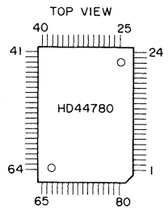









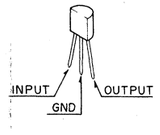

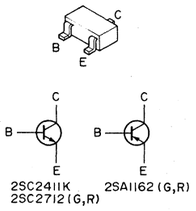

06-KEY

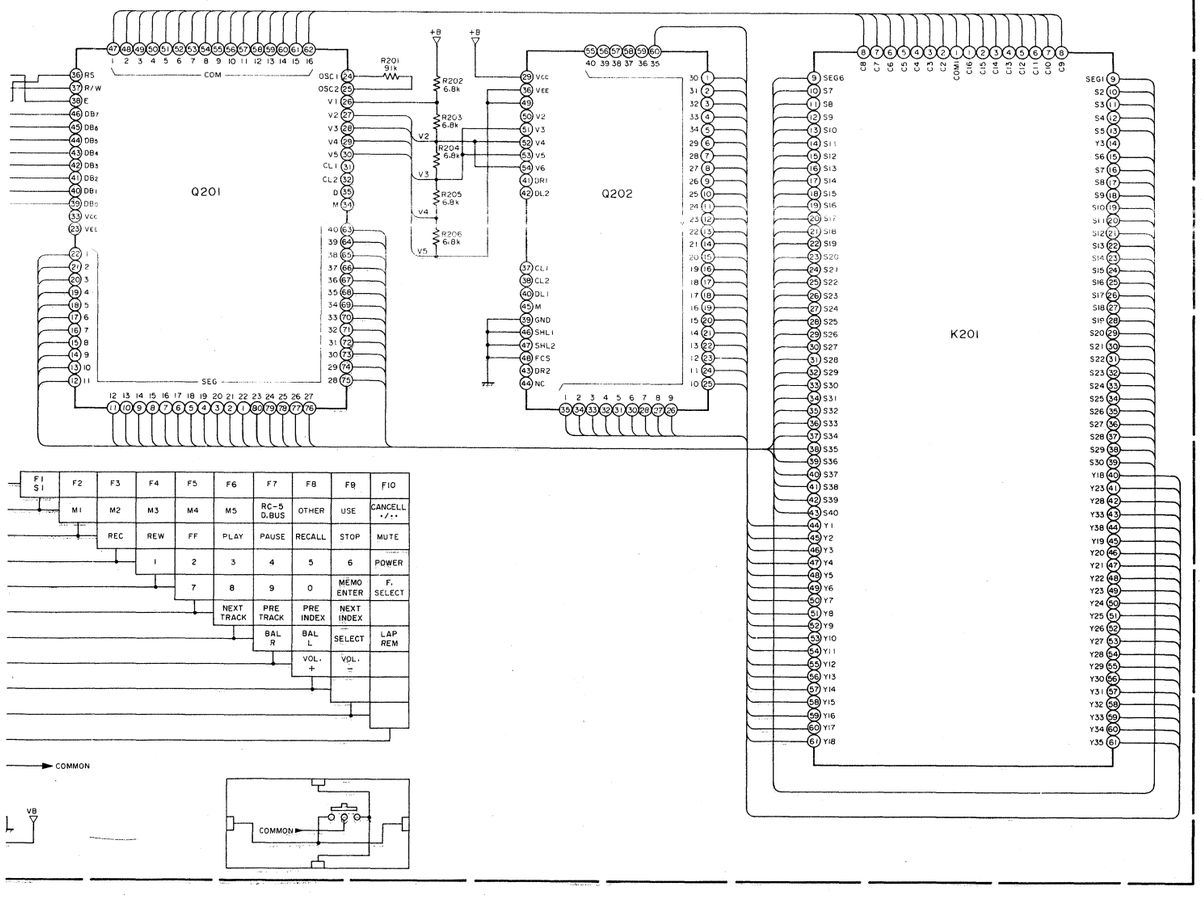

Kind of Common Parts

RESISTOR

R*** (1) GD05 -- 140, Carbon film fixed resistor, ±5% 1/4W
R*** (2) GD05 -- 160, Carbon film fixed resistor, ±5% 1/6W

C*** : **CERAMIC CAP.**
(1) DD1 --- 370, Ceramic condenser, disc type (titan condenser) Temp. coeff. P350 ~ N1000 50V

C*** : **CERAMIC CAP.**
(1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable) Temp. chara. 2B4 50V

C*** : **ELECTROLY CAP. (≠)/FILM CAP. (=)**
(1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance ±20%
(2) DF15 -- 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

★ In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED RERSONNEL ONLY – ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER–"

NOTE ON SAFETY:
Symbol ⚠ Fire or electrical shock hazard. Only original partrs should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.